



Success with 2009 IECC in Georgia:
Tech Tips for Builders

PLUMBING



Copyright ©2014 Advanced Energy. All Rights Reserved






TECH TIPS: PLUMBING

Success with 2009 IECC in Georgia for Builders

1. Cut all holes cleanly and no more than 1 inch larger than the penetrating object.

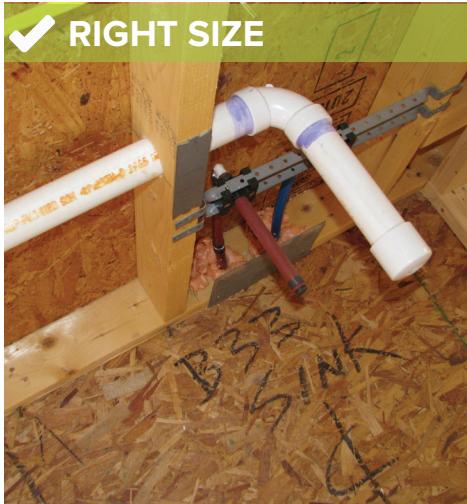


1. Cut all holes cleanly and no more than 1 inch larger than the penetrating object.



2. Air seal all penetrations between conditioned and unconditioned space. Use fire-rated sealants where applicable.



2. Air seal all penetrations between conditioned and unconditioned space. Use fire-rated sealants where applicable.

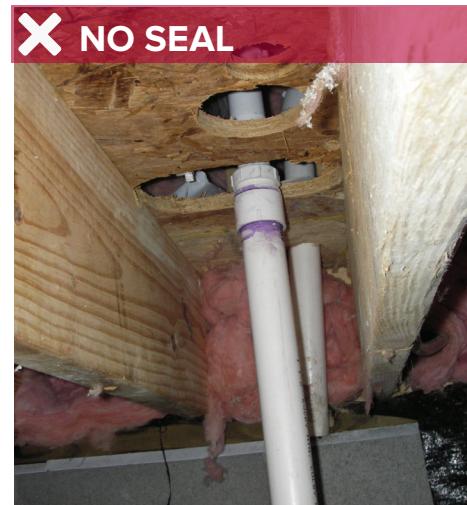



TECH TIPS:

PLUMBING

3.

For walls that will not have an interior finish and are separating conditioned and unconditioned spaces, insulate wall cavities and install an interior air barrier. RECOMMENDED: rigid air barrier.

X NO AIR BARRIER**✓ RIGID AIR BARRIER****3.**

For walls that will not have an interior finish and are separating conditioned and unconditioned spaces, insulate wall cavities and install an interior air barrier. RECOMMENDED: rigid air barrier.

X NO AIR BARRIER**✓ RIGID AIR BARRIER**