Success with 2009 IECC in Arkansas Tech Tips for Builders

PLUMBING









TECH TIPS: PLUMBING

Success with 2009 IECC in Arkansas for Builders


1. Cut all holes cleanly and no more than 1 inch larger than the penetrating object.

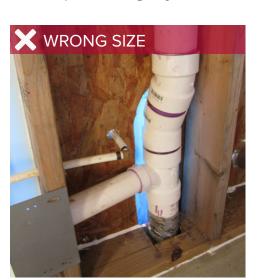

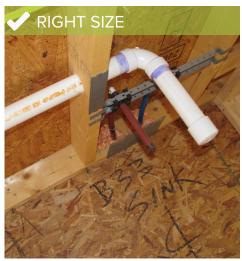

1. Cut all holes cleanly and no more than 1 inch larger than the penetrating object.



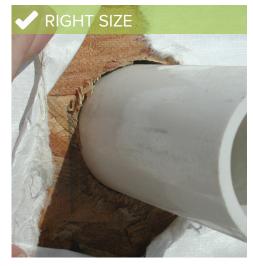


2. Air seal all penetrations between conditioned and unconditioned space. Use fire-rated sealants where applicable.





2. Air seal all penetrations between conditioned and unconditioned space. Use fire-rated sealants where applicable.

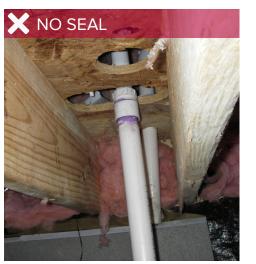



Copyright ©2014 Advanced Energy. All Rights Reserved - Page 2




TECH TIPS: PLUMBING

Success with 2009 IECC in Arkansas for Builders

For walls that will not have an interior finish and are separating conditioned and unconditioned spaces, insulate wall cavities and install an interior air barrier. RECOMMENDED: rigid air barrier.



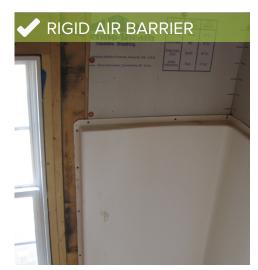

For walls that will not have an interior finish and are separating conditioned and unconditioned spaces, insulate wall cavities and install an interior air barrier. RECOMMENDED: rigid air barrier.



