



Success with 2009 IECC:
Tech Tips for Builders

ELECTRICAL



Copyright ©2014 Advanced Energy. All Rights Reserved







TECH TIPS: ELECTRICAL

Success with 2009 IECC for Builders


1. Cut all holes cleanly and no more than 1 inch larger than the penetrating object.

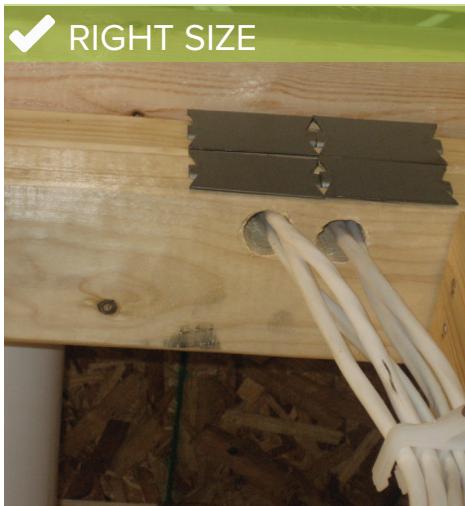


1. Cut all holes cleanly and no more than 1 inch larger than the penetrating object.

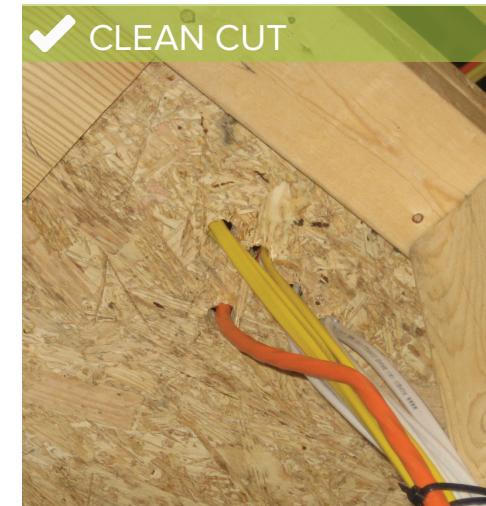

2. Air seal electrical penetrations between conditioned and unconditioned space. Use fire-rated sealants where applicable.

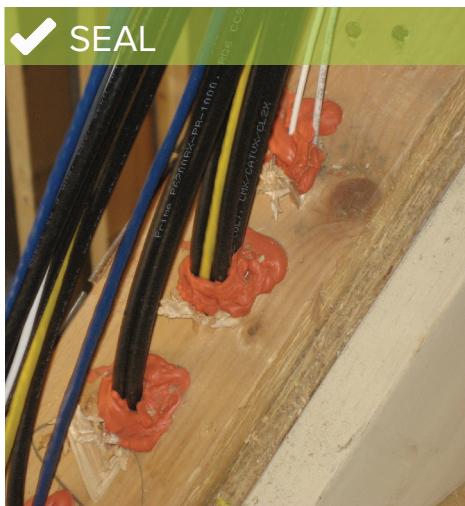

2. Air seal electrical penetrations between conditioned and unconditioned space. Use fire-rated sealants where applicable.

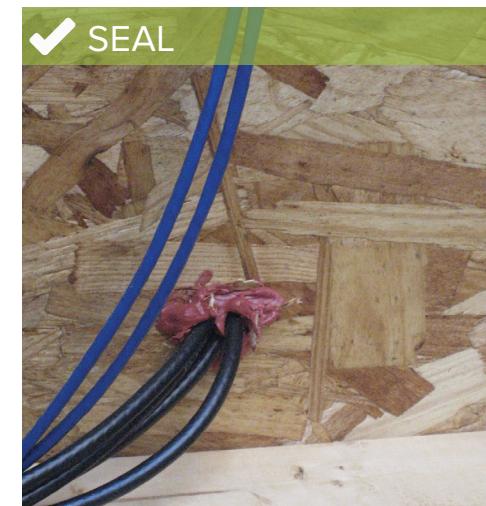



TECH TIPS: ELECTRICAL


Success with 2009 IECC for Builders

2. Air seal electrical penetrations between conditioned and unconditioned space. Use fire-rated sealants where applicable.

X NO SEAL



✓ SEAL

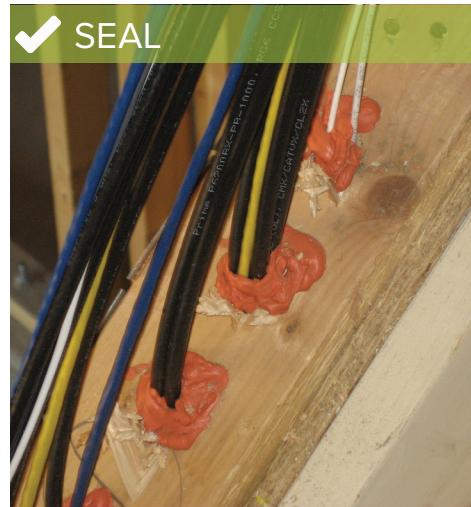

3. Install recessed lighting fixtures that are insulation-contact rated (IC), sealed to drywall with caulk foam or gasket, and are airtight or are located in an airtight sealed box.

X NOT IC AND AIR TIGHT



✓ IC AND AIR TIGHT




4. Coordinate bath fan exhaust duct direction with HVAC Contractor.

X WRONG DIRECTION



✓ RIGHT DIRECTION

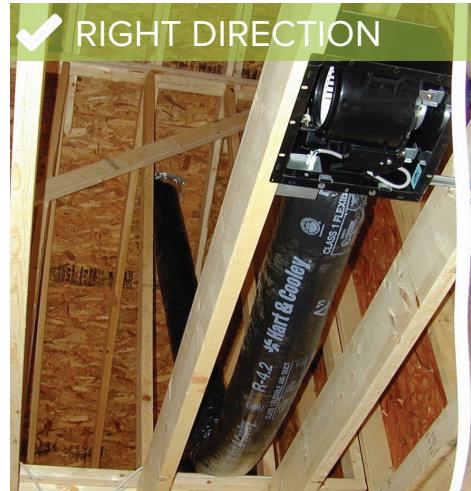

4. Coordinate bath fan exhaust duct direction with HVAC Contractor.

X WRONG DIRECTION



✓ RIGHT DIRECTION





TECH TIPS: ELECTRICAL

Success with 2009 IECC for Builders

5. Install high-efficacy lamps (e.g. CFLs, LEDs, fluorescent) in 50% of light fixtures.

High Efficacy Bulb Requirements	
Bulb (Watt)	Efficiency (lumens/Watt)
≤ 15	40
15 - 40	50
> 40	60

The high-efficacy bulb count is based on the number of lamps and includes both pin-based fixtures (fluorescent tubes and pin-based compacts) and standard screw-base fixtures. The provision applies to indoor spaces and outdoor facades of all residential buildings, including accessory structures and garages.