

Success with 2009 IECC: Tech Tips for Builders

FOUNDATION








TECH TIPS: FOUNDATION

Success with 2009 IECC for Builders

1. If installing poly sheeting, install at least 6-mil thickness and overlap at least 6 inches.

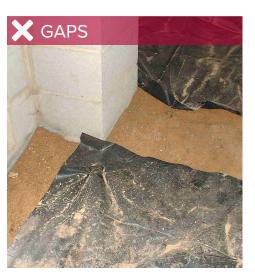





3. Install a drainage system along entire foundation footing of belowgrade walls.





2. Damp proof the exterior of all below-grade walls.

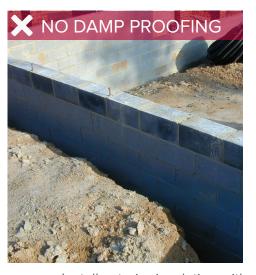

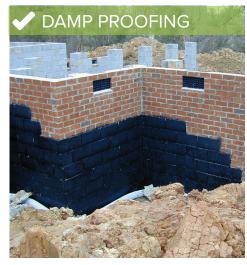

4. Install exterior insulation without gaps, voids, misalignments or compression and with a rigid, opaque and weather-resistant protective covering.





Copyright ©2014 Advanced Energy. All Rights Reserved - Page 2