


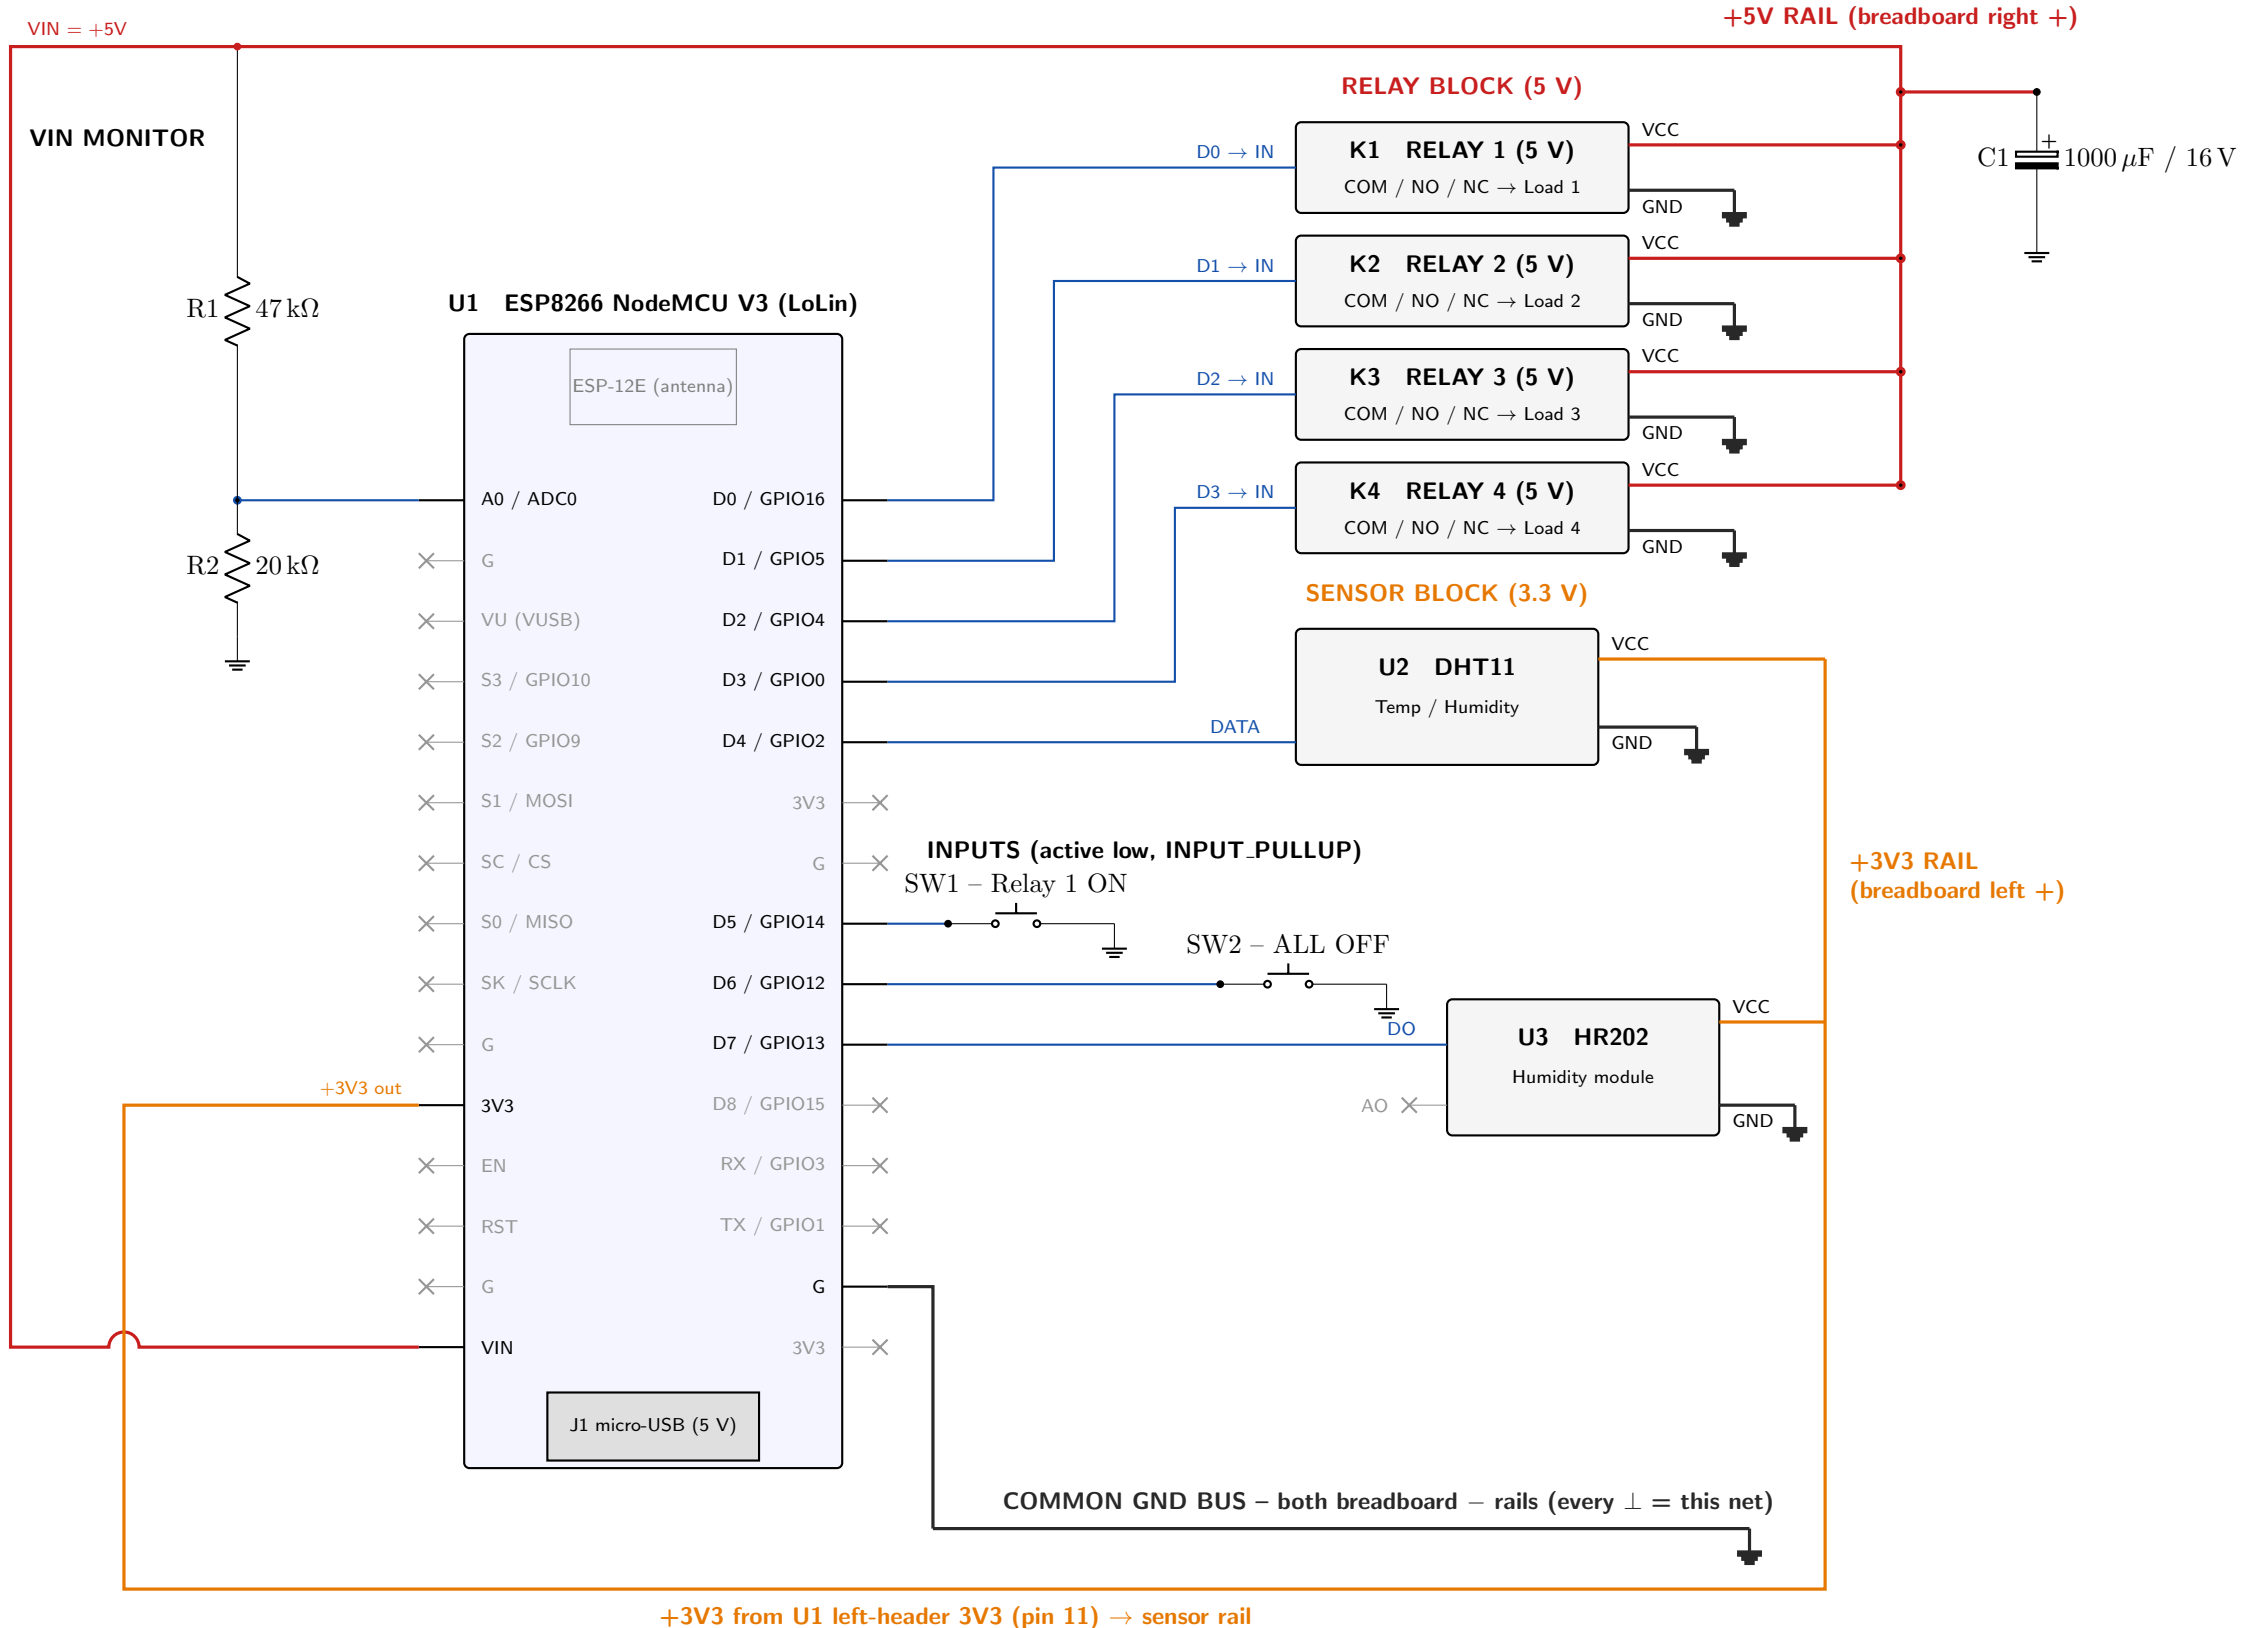

ESP8266 Relay & Sensor Controller Rev C (U1 = NodeMCU V3 / LoLin, all 30 header pins shown)

— +5V (VIN) — +3V3 — GND — GPIO signal × = pin not connected

Dot = junction; crossing without dot = no connection. All G pins are common internally; all 3V3 pins are common internally. Sensors use the LEFT 3V3 pin.

Divider: 5 V → 1.49 V at A0 (NodeMCU A0 accepts 0–3.2 V via its onboard 220k/100k divider).

Boot straps: D3 (GPIO0), D4 (GPIO2) must be HIGH and D8 (GPIO15) LOW at reset. RX/TX are used by the USB-serial chip.