


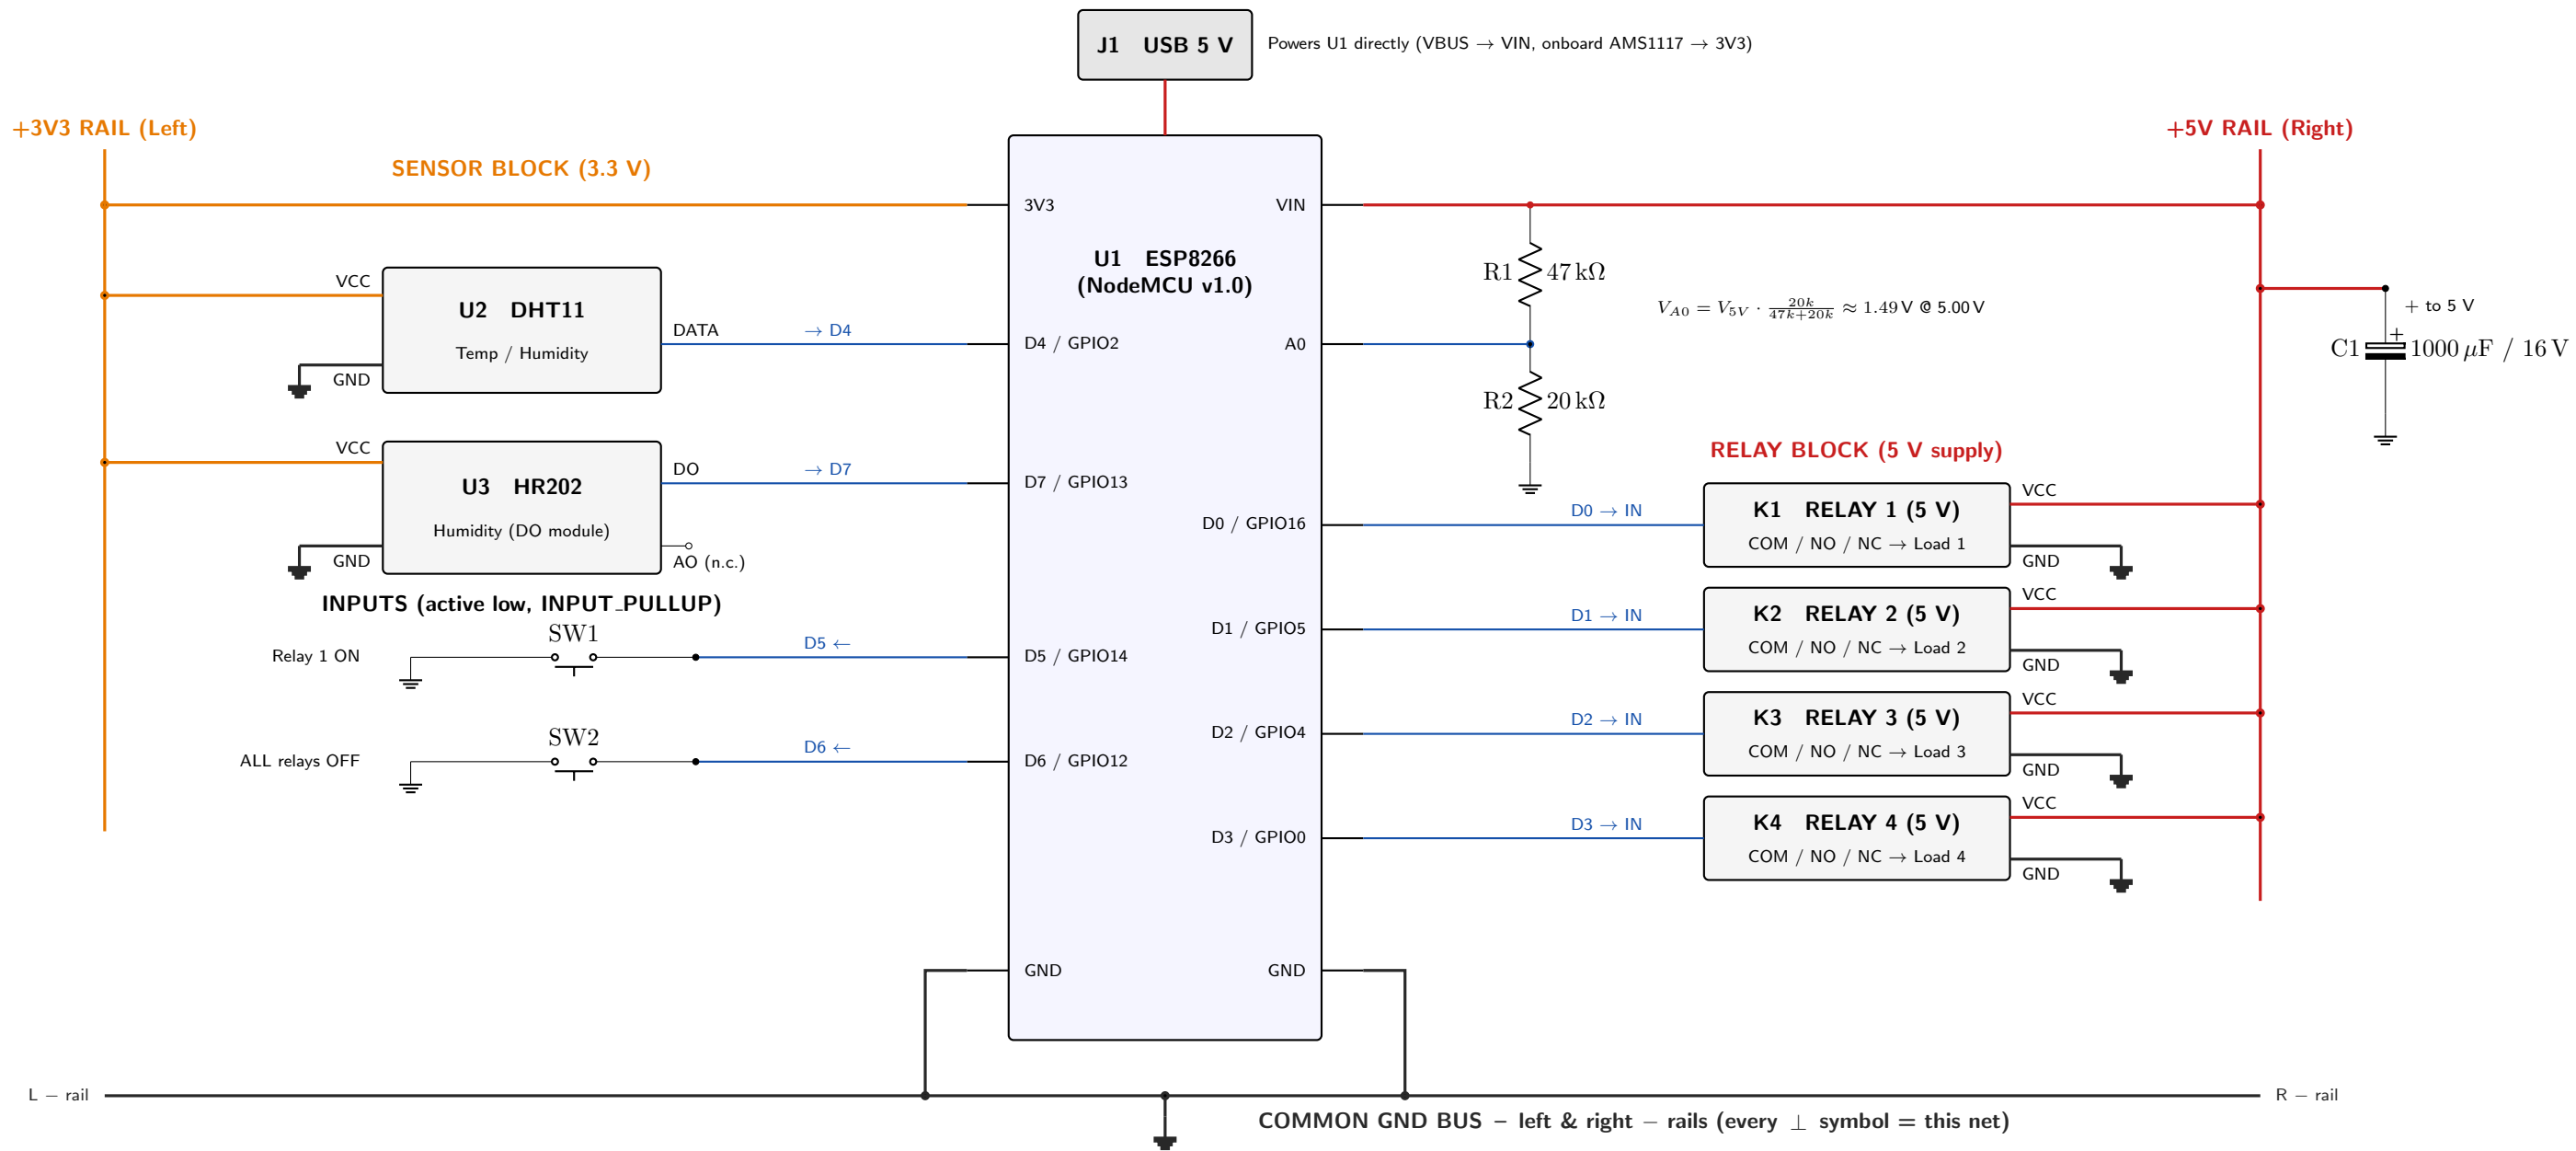

ESP8266 Relay & Sensor Controller Rev A

— +5V (VIN / USB VBUS) — +3V3 (onboard LDO) — GND — GPIO signal

Dot = junction; crossing without dot = no connection. All ⊥ symbols are the common GND net.

Divider: 5 V → 1.49 V at A0 (NodeMCU A0 accepts 0–3.2 V via its onboard 220k/100k divider).

Boot straps: D3 (GPIO0) and D4 (GPIO2) must be HIGH at reset – use active-low relay modules; drive HIGH before pinMode(OUTPUT).