Project: Worked examples
Title: Snap-fits
Status: DRAFT · Author: TempestOS (2026-10-23) · Checker: — (—) · Issued: —

1. Scope and method

Calculates the strain, deflection force and joining forces of a plastic snap-fit: a cantilever lug, an annular ring or a torsion bar. It checks the strain against the permissible strain and whether the joint is self-locking.

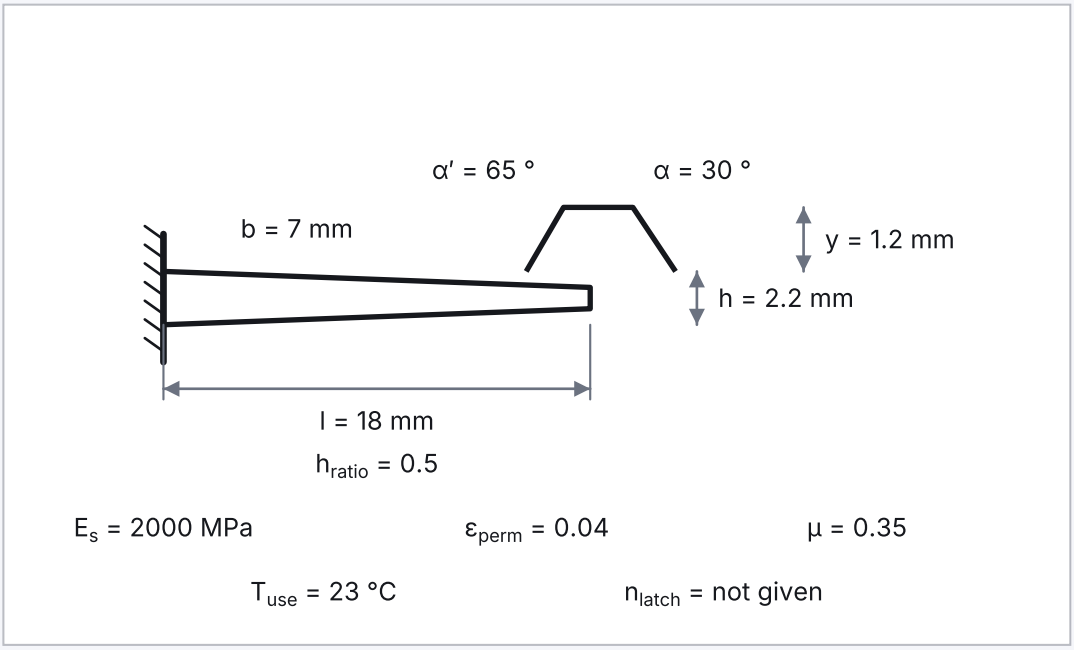


Figure 1 — A cantilever snap-fit tapering in thickness from h at the root to $h \cdot h_{ratio}$ at the tip, width b. Not to scale; the labels are the inputs as entered.

WHAT IT CALCULATES	RELATION
Cantilever geometry (Euler–Bernoulli)	$y = K_y \cdot \varepsilon \cdot l^2/h$ with $K_y = 2/3$ (constant section; the design guides print the rounded 0.67); a linear taper of the thickness to $r_h = h_{tip}/h$ gives $K_y = 2 \cdot J/\varphi_{max}$ with $J = [2r_h - r_h^2/2 - \ln r_h - 3/2]/(1 - r_h)^3$ and $\varphi_{max} = 1$ for $r_h \geq 1/2$ (otherwise the strain peaks inside the beam at $t = (2a - 1)/a$, $a = 1 - r_h$, with $\varphi_{max} = (1 - t)/(1 - a \cdot t)^2$); a linear taper of the width to r_b gives $K_y = 2 \cdot J$ with $J = [1/2 - 2r_b + 3r_b^2/2 - r_b^2 \cdot \ln r_b]/(1 - r_b)^3$
Strain and force of the cantilever	$\varepsilon = y \cdot h/(K_y \cdot l^2)$; $F_{defl} = b \cdot h^2 \cdot Es \cdot \varepsilon/(6 \cdot l \cdot \varphi_{max}) = (b \cdot h^2/6) \cdot (Es \cdot \varepsilon/l)$ at the root of a constant section; Es is the secant modulus at ε (typed, or interpolated from the W3 points Es(ε))

WHAT IT CALCULATES	RELATION
Annular (derived, free thin ring)	nominal hoop strain $\varepsilon_{nom} = \Delta D/D$ (the mean diameter D widened by the diametral interference ΔD); the strain checked is the larger of $\varepsilon = K_{ann}\cdot\varepsilon_{nom}$ (K_{ann} the user's strain factor) and the inner-surface strain $\Delta D/(D - h)$; the radial contact force summed round the ring is $F_{defl} = K_F\cdot 2\pi\cdot Es\cdot\varepsilon_{nom}\cdot h\cdot b$ (hoop force $Es\cdot\varepsilon_{nom}\cdot h\cdot b$ over the radius, K_F the user's optional force factor, 1 if none), b being the effective length of a free ring
Torsion bar of radius r with a lever of length a deflected y	$\varphi = y/a$; the bar is held at one end (free length $l_{eff} = l$) or at both ends with the lever in the middle ($l_{eff} = l/2$, two halves in parallel); $\gamma = \varphi\cdot r/l_{eff}$, equivalent tensile strain $\varepsilon = \gamma/(1 + \nu)$, $\gamma_{perm} = \varepsilon_{perm}\cdot(1 + \nu)$; $G = Es/(2(1 + \nu))$, $T = n\cdot G\cdot(\pi r^4/2)\cdot\varphi/l_{eff}$ with n = 1 or 2, $F_{defl} = T/a$ (both ends: $F_{defl} = 4\cdot G\cdot J\cdot\varphi/(l\cdot a)$)
Joining forces	$W = F_{defl}\cdot(\mu + \tan\alpha)/(1 - \mu\cdot\tan\alpha)$ on the entry face (angle α to the joining direction) and $W' = F_{defl}\cdot(\mu + \tan\alpha')/(1 - \mu\cdot\tan\alpha')$ on the return face (α′); the joint is self-locking, with an infinite separation force, when $\alpha' \geq \arctan(1/\mu)$; assembly jams when $\mu\cdot\tan\alpha \geq 1$
Utilisation and permissible deflection	$u = \varepsilon/\varepsilon_{perm}$ (FAIL above 1); $y_{perm} = K_y\cdot\varepsilon_{perm}\cdot l^2/h$ (annular $\Delta D_{perm} = \varepsilon_{perm}\cdot\min(D/K_{ann}, D - h)$; torsion $y_{perm} = \gamma_{perm}\cdot l_{eff}\cdot a/r$)

Basis: Cantilever, annular and torsion snap-fit relations[1](Ch. B).

2. Inputs

SYMBOL	DESCRIPTION	VALUE	UNIT	SOURCE	VALID RANGE
mode	Form of snap-fit	`Cantilever, tapered thickness`		drawing: ENC-310-07 rev C	any
$bar_{support}$	How the torsion bar is held: at one end, or at both ends with the lever in the middle (twice the strain and four times the stiffness of one end for the same total length)	`Held at one end`		assumption: Torsion-bar snap-fits only; this cantilever hook does not use it, so the template default is kept.	any
l	Length of the beam (cantilever); of the torsion bar: its free length when held at one end, or its whole length between the two supports when held at both ends with the lever in the middle	18	mm	drawing: ENC-310-07 rev C	2 … 100 mm

SYMBOL	DESCRIPTION	VALUE	UNIT	SOURCE	VALID RANGE
h	Thickness at the root (cantilever); wall thickness of the ring (annular)	2.2	mm	drawing: ENC-310-07 rev C	0.3 … 10 mm
b	Width at the root (cantilever); effective axial length of the ring (annular: that of a free ring, not the lip of a longer tube)	7	mm	drawing: ENC-310-07 rev C	1 … 50 mm
y	Deflection at the tip (cantilever) or at the end of the lever (torsion): the undercut to be cleared	1.2	mm	drawing: ENC-310-07 rev C	0.05 … 20 mm
h_{ratio}	Tip thickness / root thickness (tapered thickness)	0.5		drawing: ENC-310-07 rev C	0.25 … 1
Es_{source}	Where the secant modulus comes from: typed at the design strain, or interpolated from the Es(ε) points of a material record	Typed secant modulus		assumption: Secant modulus typed for this example; a W3 material with its Es(ε) points can be applied instead.	any
loading	How often the joint is made: selects the one-time or the repeated permissible strain	One-time (assembled once or rarely)		spec: Enclosure ENC-310 §6: the lid is opened for service only	any
T_{use}	Temperature of use. Recorded: Es and the permissible strain must be the values at this temperature	23	°C	spec: Enclosure ENC-310 §6: room temperature	-40 … 120 °C
Es	Secant modulus at the design strain and temperature (annular: at the nominal hoop strain ΔD/D) (typed; no default: the plastic's stress–strain data)	2000	MPa	assumption: Example secant modulus at the design strain and temperature. Enter Es for your plastic from its stress–strain data or a W3 material; no plastics data are shipped.	10 … 20000 MPa

SYMBOL	DESCRIPTION	VALUE	UNIT	SOURCE	VALID RANGE
$eps_{perm,once}$	Permissible strain for one-time joining, as a fraction, for example 0.04, at the temperature of use (no default: from the plastic's data)	0.04		assumption: Example permissible strain for one-time joining. Enter it for your plastic at the temperature of use from its data or a W3 material; no plastics data are shipped.	0.001 ... 0.3
α	Entry (assembly) angle α of the inclined face to the joining direction	30	°	drawing: ENC-310-07 rev C	5 ... 60 °
$α_r$	Return (separation) angle α′ of the retaining face (90° is a face square to the joining direction)	65	°	drawing: ENC-310-07 rev C	10 ... 90 °
μ	Coefficient of friction between the two parts (record snapfit.friction; no default: the pair of materials, from your reference or a W3 friction pair)	0.35		assumption: Example friction coefficient for a plastic-on-plastic pair. Enter μ for your pair of materials and surfaces from your reference or a test (record snapfit.friction).	0.05 ... 1

3. Assumptions

A1. The cantilever follows Euler–Bernoulli beam theory, with a rigid root, a linear taper and small deflection. (Euler–Bernoulli beam theory (derived); the guide's closed forms for the constant section are to be checked against the owner's copy.)
A2. The secant modulus is constant over the whole beam, at the design strain. (One modulus stands for the stress–strain curve.)
A3. The strain is the nominal surface strain at the critical section, with no local concentration from the root fillet. (The geometry factors are derived by integration, and the 0.67 of the design guides is the constant-section 2/3 rounded.)
A4. Es and the permissible strain are the plastic's values for the temperature, loading and moisture of use. (No plastics data are shipped, so they come from the plastic maker's data or a material record.)
A5. The annular snap is a free, thin, closed ring of effective axial length b. (Derived from ring geometry, not a relation of the design guide, so compare it with the owner's copy of the guide.)
A6. The nominal hoop strain is the diametral interference over the mean diameter, ΔD/D. (Derived from ring geometry.)
A7. The strain checked is the larger of K_{ann} times the nominal strain and the inner-surface strain ΔD/(D − h). (K_{ann} is the user's strain factor (record snapfit.annular-factor, no default), and the inner-surface strain is slightly above the mean-diameter value.)
A8. The contact force is the hoop force $Es·ε_{nom}·h·b$ taken round the ring, times the optional force factor K_F. (K_F is the user's record (blank is 1), and a tube behind the ring stiffens the joint, which only K_F can represent.)

A9. The torsion bar is solid and round, loaded at a lever end, with a small angle φ = y/a. (γ = φ·r/l and $\gamma_{perm} \approx \varepsilon_{perm}\cdot(1 + \nu)$ are the brief's design-guide relations, to be checked against the owner's copy.)
A10. The bar is held at one end, or at both ends with the lever in the middle. (Held at both ends it has twice the strain and four times the stiffness of one end for the same total length, and the two-ended case is derived.)
A11. The permissible shear strain is $\varepsilon_{perm}\cdot(1 + \nu)$, and the equivalent tensile strain is γ/(1 + ν). (G = Es/(2(1 + ν)) uses the secant modulus at that strain.)
A12. The mating part is rigid, with Coulomb friction μ on the inclined face (α for assembly, α′ for separation). (Friction on an inclined plane, with the friction coefficient the user's record.)
A13. The deflection force is taken at the design deflection, with no creep, stress relaxation or impact effect in service. (A static joint model.)
A14. $bar_{support}$ (How the torsion bar is held: at one end, or at both ends with the lever in the middle (twice the strain and four times the stiffness of one end for the same total length)) is taken as Held at one end. (Torsion-bar snap-fits only; this cantilever hook does not use it, so the template default is kept.)
A15. Es_{source} (Where the secant modulus comes from: typed at the design strain, or interpolated from the Es(ε) points of a material record) is taken as Typed secant modulus. (Secant modulus typed for this example; a W3 material with its Es(ε) points can be applied instead.)
A16. Es (Secant modulus at the design strain and temperature (annular: at the nominal hoop strain ΔD/D) (typed; no default: the plastic's stress–strain data)) is taken as 2000 MPa. (Example secant modulus at the design strain and temperature. Enter Es for your plastic from its stress–strain data or a W3 material; no plastics data are shipped.)
A17. $eps_{perm,once}$ (Permissible strain for one-time joining, as a fraction, for example 0.04, at the temperature of use (no default: from the plastic's data)) is taken as 0.04. (Example permissible strain for one-time joining. Enter it for your plastic at the temperature of use from its data or a W3 material; no plastics data are shipped.)
A18. μ (Coefficient of friction between the two parts (record snapfit.friction; no default: the pair of materials, from your reference or a W3 friction pair)) is taken as 0.35. (Example friction coefficient for a plastic-on-plastic pair. Enter μ for your pair of materials and surfaces from your reference or a test (record snapfit.friction).)
A19. Es and the permissible strain are the plastic's values at 23 °C, the temperature of use. The sheet cannot check them, or the moisture state of the part. (Recorded temperature of use.)

4. Working

[10] l_h = l / h
= 18 mm / 2.2 mm
= 8.1818
Slenderness of the beam l/h

[12] J = [2r − r²/2 − ln r − 3/2]/(1 − r)³ ²((derived))
= r = 0.5
= 0.54518
Deflection integral J of the thickness taper (derived: Euler–Bernoulli integration)

[13] φ_{max} = (1 − t*)/(1 − α·t*)², t* = (2α − 1)/α for α > 1/2, else 1 ²((derived))
= α = 0.5
= 1
Largest value of the strain shape along the beam (1 at the root)

[14] K_y = 2·J/φ_{max} ²((derived))
= 2 × 0.54518 / 1
= 1.0904
Deflection factor: $y = K_y\cdot\varepsilon\cdot l^2/h$

[15] eps_{max} = y * h / (K_y * l^2) ²((derived))
= 1.2 mm × 2.2 mm / (1.0904 × (18 mm)^2)
= 0.74729 %
Maximum surface strain at the critical section (nominal)

[18] $eps_{perm} = eps_{perm,once}$ [1](Plastics: A Design Guide)
= 0.04
= 4 %
Permissible strain (one-time joining, as entered)
[21] $F_{defl} = b * h^2 * Es * eps_{max} / (6 * l * \varphi_{max})$ [2]((derived))
= 7 mm × (2.2 mm)^2 × 2000 MPa × 0.74729 % / (6 × 18 mm × 1)
= 4.6886 N
Deflection force at the tip: $F_{defl} = (b \cdot h^2/6) \cdot (Es \cdot \varepsilon / l)$ at the root of a constant section
[22] $y_{perm} = K_y * eps_{perm} * l^2 / h$ [2]((derived))
= 1.0904 × 4 % × (18 mm)^2 / 2.2 mm
= 6.4232 mm
Permissible tip deflection
[23] $strain_{util} = eps_{max} / eps_{perm}$
= 0.74729 % / 4 %
= 0.18682
Strain / permissible strain
[24] $tan_\alpha = tan(\alpha)$
= tan(30 deg)
= 0.57735
tan α of the entry face
[25] $\mu_{tan,\alpha} = \mu * tan_\alpha$
= 0.35 × 0.57735
= 0.20207
μ·tan α of the entry face
[26] $assembly_{force} = F_{defl} * (\mu + tan_\alpha) / (1 - \mu_{tan,\alpha})$ [1](Plastics: A Design Guide)
= 4.6886 N × (0.35 + 0.57735) / (1 - 0.20207)
= 5.4491 N
Assembly force $W = F_{defl} \cdot (\mu + \tan\alpha)/(1 - \mu \cdot \tan\alpha)$
[27] $\alpha_{lock} = arctan(1/\mu)$ [1](Plastics: A Design Guide)
= arctan(1/0.35)
= 70.71 deg
Return angle above which the joint is self-locking (π/2 when μ = 0)
[28] $tan_{ar} = tan(\alpha_r)$
= tan(65 deg)
= 2.1445
tan α′ of the return face
[29] $retention_{force} = F_{defl} * (\mu + tan_{ar}) / (1 - \mu * tan_{ar})$ [1](Plastics: A Design Guide)
= 4.6886 N × (0.35 + 2.1445) / (1 - 0.35 × 2.1445)
= 46.891 N
Separation force $W' = F_{defl} \cdot (\mu + \tan\alpha')/(1 - \mu \cdot \tan\alpha')$

5. Results

SYMBOL	VALUE	DESCRIPTION
$assembly_{force}$	5.449 N	Assembly force
$retention_{force}$	46.89 N	Separation force
$strain_{util}$	0.19	Strain / permissible strain (governing)
eps_{max}	0.7473 %	Maximum strain
eps_{perm}	4 %	Permissible strain
Es	2000 MPa	Secant modulus used
F_{defl}	4.689 N	Deflection force

SYMBOL	VALUE	DESCRIPTION
y_{perm}	6.423 mm	Permissible deflection
l_h	8.1818	Slenderness l/h
K_y	1.0904	Deflection factor of the cantilever
φ_{max}	1	Strain shape maximum
α_{lock}	70.71°	Self-locking return angle
$self_{locking}$	"No"	Self-locking
$fillet_{advisory}$	"The strain above is the nominal strain, with no local concentration. A sharp internal corner at the root (or at the end of the bar or ring) concentrates the strain and is the usual place for a snap-fit to break: give the root a generous fillet radius, of the order of the thickness, taper the section away from it, and apply a concentration factor from your own reference if the radius is small."	Root-fillet advisory

6. Checks (governing first)

RESULT	CHECK	DEMAND	CAPACITY	UTILISATION	REF
PASS	Strain at the critical section against the permissible strain	0.7473 %	4 %	0.19	[1](Plastics: A Design Guide)
PASS	Entry-face friction μ·tan α against the jamming limit	μ·tan α = 0.20207	< 1	–	[1](Plastics: A Design Guide)

7. Applicability

WARNING records: tabulated values not taken from a reference record are $eps_{perm,once}$ (Material properties); μ (Coefficient of friction); Es (Secant modulus at the design strain). Enter each as one so its source, edition and licence travel with it. [record]

8. Verification

Template mech.snap-fit@1.5.0 Content hash 32eaeb1d9537950d Engine calc-engine/1.0.0
Known-answer cases passed 11/11 Test run 2026-10-23 12:00 UTC TempestOS 0.26.0

9. References

1. Covestro, Snap-Fit Joints for Plastics: A Design Guide.
2. Euler–Bernoulli beam theory.