Project: Worked examples
Title: Thick-walled cylinder stresses (Lamé)
Status: DRAFT · Author: TempestOS (2026-10-23) · Checker: — (—) · Issued: —

1. Scope and method

Radial, hoop and axial stresses at the bore and the outer surface of a thick-walled cylinder under internal and external pressure, the von Mises and Tresca equivalents, utilisation against an allowable, and the thin-wall estimate for comparison.

WHAT IT CALCULATES	RELATION
Lamé constants from the bore and outside pressures	$A = (a^2 p_i - b^2 p_o)/(b^2 - a^2)$; $B = a^2 b^2 (p_i - p_o)/(b^2 - a^2)$
Radial and hoop stress at radius r	$\sigma_r = A - B/r^2$; $\sigma_\theta = A + B/r^2$
Axial stress, closed or open ends	$\sigma_z = A$ (closed); $\sigma_z = 0$ (open)
Equivalent stresses from the three principal stresses	von Mises; Tresca = the largest principal difference

Basis: Thick-walled cylinders[1](Ch. 13, Table 13.5); Stresses in pressurised cylinders[2](§3-14).

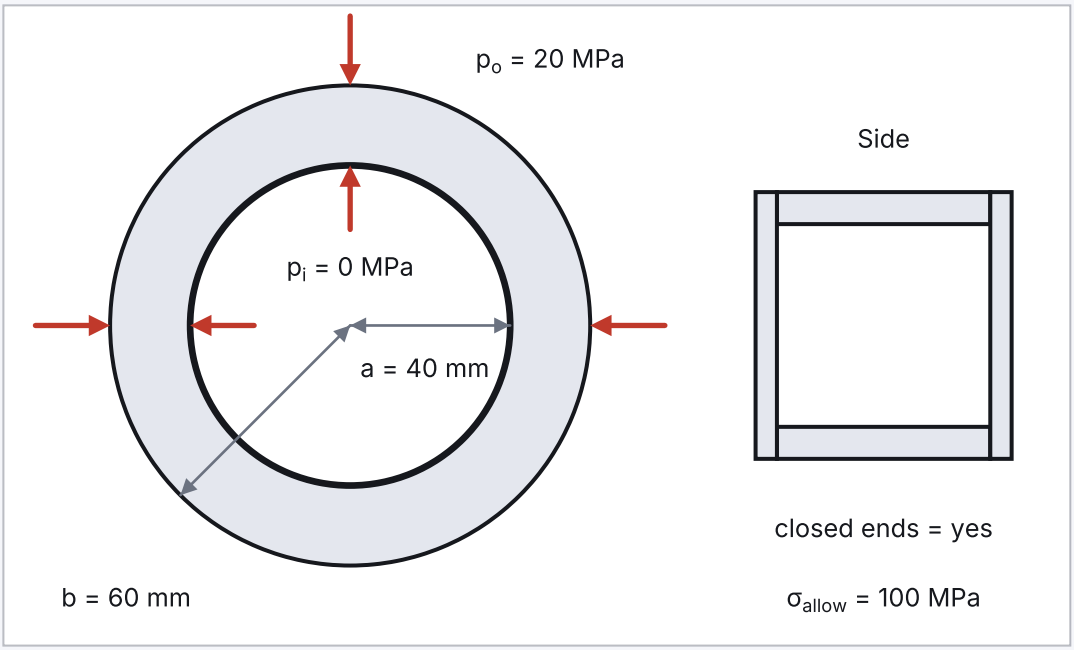


Figure 1 — A thick-walled cylinder in section, bore radius a, outer radius b, pressure inside and out; closed ends carry the pressures axially. Not to scale; the labels are the inputs as entered.

2. Inputs

SYMBOL	DESCRIPTION	VALUE	UNIT	SOURCE	VALID RANGE
a	Inner radius	40	mm	drawing: DRG-CYL-02 rev B	0.1 … 5000 mm
b	Outer radius	60	mm	drawing: DRG-CYL-02 rev B	0.1 … 5000 mm
p_i	Internal pressure	0	MPa	assumption: Vented bore.	0 … 1000 MPa

SYMBOL	DESCRIPTION	VALUE	UNIT	SOURCE	VALID RANGE
p_o	External pressure	20	MPa	spec: SPEC-SUB-1 §2 external pressure	0 … 1000 MPa
closed	Closed ends (axial stress carried by the wall)	yes		drawing: DRG-CYL-02 rev B	any
σ_{allow}	Allowable stress	100	MPa	spec: SPEC-SUB-1 §4	1 … 3000 MPa

3. Assumptions

A1. Long cylinder, elastic, isotropic; stresses vary with radius only. (Lamé solution; end effects neglected.)
A2. Closed ends carry the pressure end load as a uniform axial stress. (σ_z = A.)
A3. p_i (Internal pressure) is taken as 0 MPa. (Vented bore.)

4. Working

[7] A = (a^2 * p_i - b^2 * p_o) / (b^2 - a^2) [1](Table 13.5)
= ((40 mm)^2 × 0 MPa − (60 mm)^2 × 20 MPa) / ((60 mm)^2 − (40 mm)^2)
= -36 MPa
Lamé constant A

[8] B = a^2 * b^2 * (p_i - p_o) / (b^2 - a^2) [1](Table 13.5)
= (40 mm)^2 × (60 mm)^2 × (0 MPa − 20 MPa) / ((60 mm)^2 − (40 mm)^2)
= -57600 MPa·mm²
Lamé constant B

[9] $\sigma_{r,a}$ = A - B / a^2
= (-36 MPa) − (-57600 MPa·mm²) / (40 mm)^2
= 0 MPa
Radial stress at the bore

[10] $\sigma_{t,a}$ = A + B / a^2
= -36 MPa + (-57600 MPa·mm²) / (40 mm)^2
= -72 MPa
Hoop stress at the bore

[11] $\sigma_{r,b}$ = A - B / b^2
= (-36 MPa) − (-57600 MPa·mm²) / (60 mm)^2
= -20 MPa
Radial stress at the outer surface

[12] $\sigma_{t,b}$ = A + B / b^2
= -36 MPa + (-57600 MPa·mm²) / (60 mm)^2
= -52 MPa
Hoop stress at the outer surface

[13] σ_z = A
= -36 MPa
= -36 MPa
Axial stress (closed ends)

[14] $\sigma_{vm,a}$ = sqrt(((σ_{t,a} - σ_{r,a})^2 + (σ_{r,a} - σ_z)^2 + (σ_z - σ_{t,a})^2) / 2)
= sqrt((((-72 MPa) − 0 MPa)^2 + (0 MPa − (-36 MPa))^2 + ((-36 MPa) − (-72 MPa))^2) / 2)
= 62.354 MPa
von Mises stress at the bore

[15] $\sigma_{vm,b}$ = sqrt(((σ_{t,b} - σ_{r,b})^2 + (σ_{r,b} - σ_z)^2 + (σ_z - σ_{t,b})^2) / 2)
= sqrt((((-52 MPa) − (-20 MPa))^2 + ((-20 MPa) − (-36 MPa))^2 + ((-36 MPa) − (-52 MPa))^2) /
= 27.713 MPa
von Mises stress at the outer surface

[16] $\sigma_{tr,a} = \max(\sigma_{t,a}, \sigma_{r,a}, \sigma_z) - \min(\sigma_{t,a}, \sigma_{r,a}, \sigma_z)$
$= \max(-72\ \text{MPa}, 0\ \text{MPa}, -36\ \text{MPa}) - \min(-72\ \text{MPa}, 0\ \text{MPa}, -36\ \text{MPa})$
$= 72\ \text{MPa}$
Tresca stress at the bore
[17] $\sigma_{tr,b} = \max(\sigma_{t,b}, \sigma_{r,b}, \sigma_z) - \min(\sigma_{t,b}, \sigma_{r,b}, \sigma_z)$
$= \max(-52\ \text{MPa}, -20\ \text{MPa}, -36\ \text{MPa}) - \min(-52\ \text{MPa}, -20\ \text{MPa}, -36\ \text{MPa})$
$= 32\ \text{MPa}$
Tresca stress at the outer surface
[18] $\sigma_{vm,max} = \max(\sigma_{vm,a}, \sigma_{vm,b})$
$= \max(62.354\ \text{MPa}, 27.713\ \text{MPa})$
$= 62.354\ \text{MPa}$
Maximum von Mises stress
[19] $u = \sigma_{vm,max} / \sigma_{allow}$
$= 62.354\ \text{MPa} / 100\ \text{MPa}$
$= 0.62354$
Utilisation
[20] $\sigma_{thin} = (p_i - p_o) * (a + b) / 2 / (b - a)$
$= (0\ \text{MPa} - 20\ \text{MPa}) \times (40\ \text{mm} + 60\ \text{mm}) / 2 / (60\ \text{mm} - 40\ \text{mm})$
$= -50\ \text{MPa}$
Thin-wall hoop estimate at the mean radius
[21] $k_{wall} = b / a$
$= 60\ \text{mm} / 40\ \text{mm}$
$= 1.5$
Wall ratio b/a

5. Results

SYMBOL	VALUE	DESCRIPTION
$\sigma_{r,a}$	0 MPa	Radial stress, bore
$\sigma_{t,a}$	-72 MPa	Hoop stress, bore
$\sigma_{r,b}$	-20 MPa	Radial stress, outer
$\sigma_{t,b}$	-52 MPa	Hoop stress, outer
σ_z	-36 MPa	Axial stress
$\sigma_{vm,a}$	62.354 MPa	von Mises, bore
$\sigma_{vm,b}$	27.713 MPa	von Mises, outer
$\sigma_{tr,a}$	72 MPa	Tresca, bore
$\sigma_{tr,b}$	32 MPa	Tresca, outer
$\sigma_{vm,max}$	62.354 MPa	Maximum von Mises
u	0.62354	Utilisation
σ_{thin}	-50 MPa	Thin-wall hoop estimate
k_{wall}	1.5	Wall ratio

6. Checks (governing first)

RESULT	CHECK	DEMAND	CAPACITY	UTILISATION	REF
PASS	von Mises against allowable	u = 0.62354	u ≤ 1	0.624	

7. Applicability

No warnings.

8. Verification

```
Template mech.thick-cylinder@2.0.1 Content hash faff1841ff151c3a Engine calc-engine/1.0.0
Known-answer cases passed 3/3 Test run 2026-10-23 12:00 UTC TempestOS 0.26.0
```

9. References

1. Young WC, Budynas RG, Sadegh AM. Roark's Formulas for Stress and Strain. 8th ed. McGraw-Hill; 2012.
2. Budynas RG, Nisbett JK. Shigley's Mechanical Engineering Design. 11th ed. McGraw-Hill Education; 2020.