Project: Worked examples
Title: Bolt group (elastic method)
Status: DRAFT · Author: TempestOS (2026-10-23) · Checker: — (—) · Issued: —

1. Scope and method

A pattern of bolts in a plane under in-plane forces (with eccentricity, so torsion), out-of-plane moments and axial load: the shear and tension in every bolt by the elastic (area-weighted) method, the governing bolt, and an optional lever-model prying addition.

WHAT IT CALCULATES	RELATION
Centroid of the bolt group, each bolt weighted by its area	$x_c = \Sigma A x / \Sigma A$ (y_c likewise)
Torsion about the centroid from the eccentric load	$T = F_y (e_x - x_c) - F_x (e_y - y_c) + T_z$
Polar moment of the bolt areas about the centroid	$J = \Sigma A r^2$
Shear on each bolt, its direct share plus the torsion (vector sum)	$v = A (F/\Sigma A) + T \cdot A \cdot r / J$
Tension on each bolt, its direct share plus the moments	$t = A N/\Sigma A + M_x A y'/\Sigma A y'^2 + M_y A x'/\Sigma A x'^2$
Tension with prying, when the distances a and b are given	$t_p = t (1 + b/a)$
Combined shear and tension, circular interaction (elastic method, Shigley-style)	$(v/V_R)^2 + (t_p/T_R)^2 \le 1$
Combined shear and tension, EN 1993-1-8 linear form (each is also checked alone; the highest governs)	$v/V_R + t_p/(1.4\ T_R) \le 1$

Basis: Design resistance of individual fasteners; elastic distribution in a bolt group[1](§3.6, §3.8); Eccentrically loaded bolt groups — elastic method[2](Part 7).

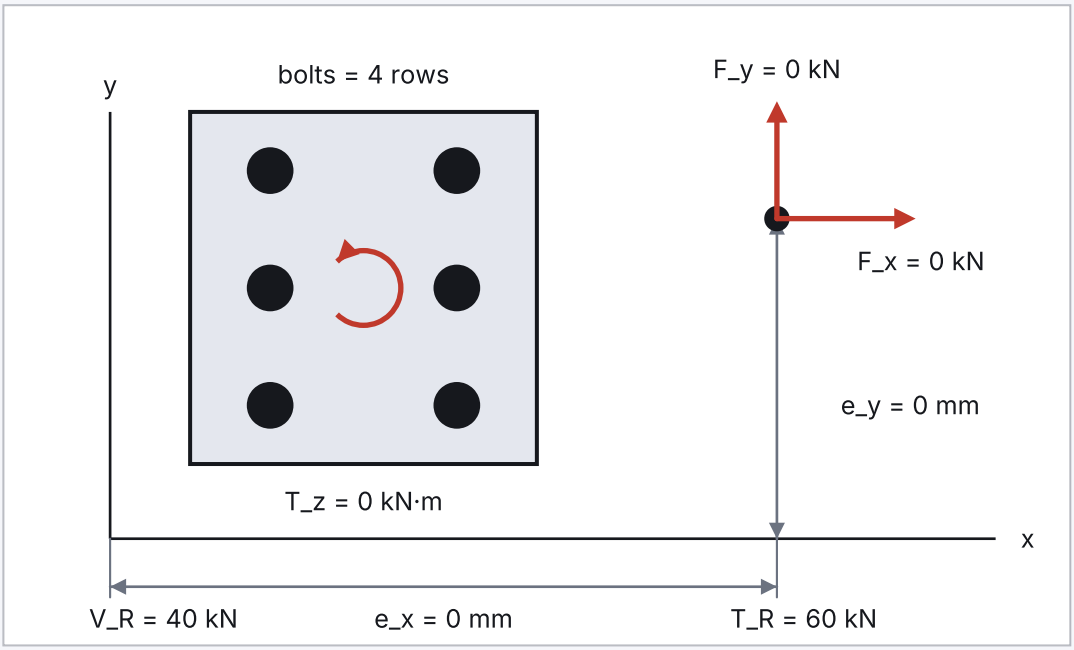


Figure 1 — A bolt group (six drawn; the bolts as listed) under an in-plane load at (e_x, e_y), x and y from one origin, + as drawn. Not to scale; the labels are the inputs as entered.

2. Inputs

SYMBOL	DESCRIPTION	VALUE	UNIT	SOURCE	VALID RANGE
bolts	Bolt positions and areas	4 row(s)		drawing: DRG-BRK-09 rev B	any
F_x	In-plane force, x	0	kN	spec: LOAD-CASE-1	-1000000 … 1000000 kN
F_y	In-plane force, y	0	kN	spec: LOAD-CASE-1	-1000000 … 1000000 kN
e_x	Point of application, x	0	mm	drawing: DRG-BRK-09 rev B	-100000 … 100000 mm
e_y	Point of application, y	0	mm	drawing: DRG-BRK-09 rev B	-100000 … 100000 mm
T_z	Additional in-plane torque about the centroid	0	kN·m	spec: LOAD-CASE-1	-1000000 … 1000000 kN·m
N	Axial (out-of-plane) load, tension positive	0	kN	spec: LOAD-CASE-1	-1000000 … 1000000 kN
M_x	Out-of-plane moment about x (tension on +y side)	20	kN·m	spec: LOAD-CASE-1	-1000000 … 1000000 kN·m
M_y	Out-of-plane moment about y (tension on +x side)	0	kN·m	spec: LOAD-CASE-1	-1000000 … 1000000 kN·m
V_R	Shear resistance per bolt	40	kN	spec: M12 8.8 shear resistance, EN 1993-1-8 Table 3.4 per project calc	0.1 … 10000 kN

SYMBOL	DESCRIPTION	VALUE	UNIT	SOURCE	VALID RANGE
T_R	Tension resistance per bolt	60	kN	spec: M12 8.8 tension resistance per project calc	0.1 … 10000 kN

TABLE ROW	VALUES
bolts[1]	x = 0 mm; y = -100 mm; A = 84.3 mm^2
bolts[2]	x = 100 mm; y = -100 mm; A = 84.3 mm^2
bolts[3]	x = 0 mm; y = 100 mm; A = 84.3 mm^2
bolts[4]	x = 100 mm; y = 100 mm; A = 84.3 mm^2

3. Assumptions

A1. The connected parts are rigid; bolt forces vary linearly with distance from the centroid (elastic method). (Conservative compared with plastic / instantaneous-centre methods.)
A2. Resistances are per bolt as entered, with their source (a design-code capacity or a manufacturer value). (No code capacity is computed here.)
A3. Prying uses a simple lever: the bolt tension rises by the factor (1 + b/a). (An optional, conservative first estimate.)

4. Working

[11] n_b = number of bolts
= 4
= 4
Bolts in the group
[12] x_c = Σ A x / Σ A
= 84.3×0 + 84.3×100 + 84.3×0 + 84.3×100 / 337.2
= 50 mm
Centroid x
[13] y_c = Σ A y / Σ A
= 84.3×-100 + 84.3×-100 + 84.3×100 + 84.3×100 / 337.2
= 0 mm
Centroid y
[14] T = F_y (e_x - x_c) - F_x (e_y - y_c) + T_z
= 0 × -50 - 0 × 0 + 0
= 0 kN·m
In-plane torque about the centroid
[15] J = Σ A r²
= about the centroid
= 4215000 mm⁴
Polar second moment of the bolt areas
[16] b1 = bolt 1 at (0, -100) mm
= v = (0, 0) kN, t = 0 kN
= 0
Interaction utilisation √((v/V_R)² + (t/T_R)²) = 0
[17] b2 = bolt 2 at (100, -100) mm
= v = (0, 0) kN, t = 0 kN
= 0
Interaction utilisation √((v/V_R)² + (t/T_R)²) = 0
[18] b3 = bolt 3 at (0, 100) mm
= v = (0, 0) kN, t = 50 kN
= 0.83333
Interaction utilisation √((v/V_R)² + (t/T_R)²) = 0.833

[19] b4 = bolt 4 at (100, 100) mm
= v = (0, 0) kN, t = 50 kN
= 0.83333
Interaction utilisation √((v/V_R)² + (t/T_R)²) = 0.833
[20] v_max = governing bolt shear
= bolt 3
= 0 kN
Maximum bolt shear
[21] t_max = governing bolt tension (with prying)
= bolt 3
= 50 kN
Maximum bolt tension
[22] u_max = √((v/V_R)² + (t/T_R)²)
= √((0/40)² + (50/60)²)
= 0.83333
Governing interaction utilisation
[23] governing = governing bolt
= bolt 3
= "bolt 3"
The bolt with the highest utilisation
[24] u_v = v_max / V_R
= 0 kN / 40 kN
= 0
Shear utilisation of the governing bolt
[25] u_t = t_max / T_R
= 50 kN / 60 kN
= 0.83333
Tension utilisation of the governing bolt
[26] u_lin = v/V_R + t/(1.4 T_R)
= 0/40 + 50/(1.4 × 60)
= 0.59524
Linear shear–tension interaction (governing bolt)

5. Results

SYMBOL	VALUE	DESCRIPTION
T	0 kN·m	Torque about the centroid
J	4215000 mm⁴	Polar second moment of bolt areas
v_max	0 kN	Maximum bolt shear
t_max	50 kN	Maximum bolt tension
u_max	0.83333	Governing interaction utilisation
governing	"bolt 3"	Governing bolt
u_lin	0.59524	Linear interaction utilisation

6. Checks (governing first)

RESULT	CHECK	DEMAND	CAPACITY	UTILISATION	REF
PASS	Circular shear–tension interaction (governing bolt)	u_max = 0.83333	u_max ≤ 1	0.833	

RESULT	CHECK	DEMAND	CAPACITY	UTILISATION	REF
PASS	Tension alone	u_t = 0.83333	u_t ≤ 1	0.833	
PASS	Linear shear–tension interaction v/V_R + t/(1.4 T_R)	u_lin = 0.59524	u_lin ≤ 1	0.595	[1](Table 3.4)
PASS	Shear alone	u_v = 0	u_v ≤ 1	0	

7. Applicability

No warnings.

8. Verification

Template mech.bolt-group@1.1.1 Content hash dcd225a08273f55e Engine calc-engine/1.0.0
Known-answer cases passed 7/7 Test run 2026-10-23 12:00 UTC TempestOS 0.26.0

9. References

1. British Standards Institution. Eurocode 3: Design of Steel Structures—Part 1-8: Design of Joints. BS EN 1993-1-8:2005. BSI; 2005.
2. American Institute of Steel Construction. Steel Construction Manual. 15th ed. AISC; 2017.