Solar ESS Co. Ltd.
53 Moo 2, Tambon Nanglae, Amphoe Muang, Chiang Rai 57100
Tel 063 151 6694 · 089 632 5829 · LINE: solaress1
www.solaress.org · www.โซลาร์เอสส์.com

ROLLER 600 Roller Heat Press Electrical Supply & Motor Drive Recommendations

Rev01 · 10 November 2026 · 380 V 3-phase · 56 kW machine


The 56 kW rating is **almost all heaters**. Only a small motor turns the roller. You need a **100 A supply** and, at most, a **small VFD** for the roller motor. A 55–75 kW soft starter or VFD is **not needed**.

HEATERS
≈ 53–55 kW
Heat the drum. Switched by the temperature controller via SSR/contactors.

ROLLER MOTOR
≈ 0.75–3 kW
Turns the drum. Needs variable speed to set dwell time.

TOTAL CURRENT
≈ 85 A
56 kW ÷ (√3 × 380 V), mostly resistive load.

1 How the power is distributed

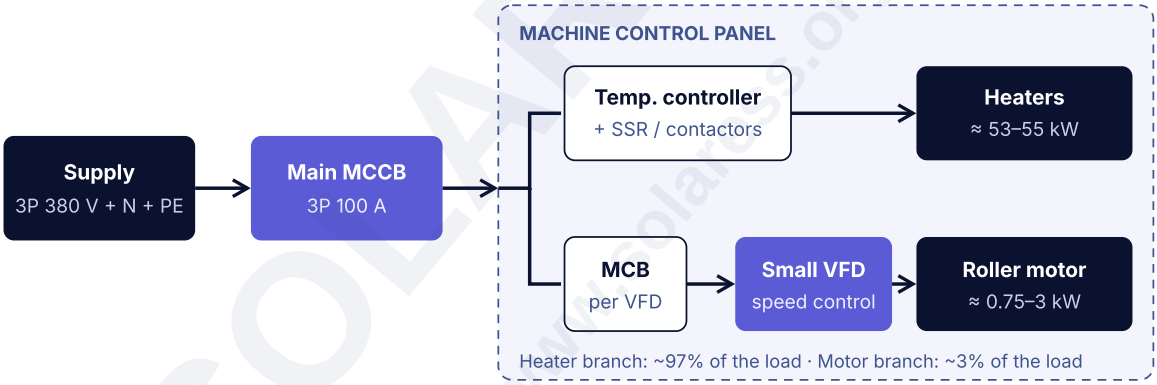

SOLAR ESS www.solaress.org

Solar ESS Co. Ltd.
53 Moo 2, Tambon Nanglae, Amphoe Muang, Chiang Rai 57100
Tel 063 151 6694 · 089 632 5829 · LINE: solaress1
www.solaress.org · www.โซลาร์เอสส์.com

2 Recommended specification

Item	Specification	Note
Main breaker	**MCCB 3P 100 A**, Icu ≥ 25 kA	Use 125 A only if the maker's manual requires it.
Supply cable	**CV 4 × 35 mm² + G 16 mm²**	Copper XLPE. Size up for runs over ~50 m.
Heater control	Supplied with the machine	Temperature controller + SSR/contactors. No soft starter, no VFD.
Roller motor drive	Small VFD, one size above motor kW	Only if the machine has none. Heavy duty, sensorless vector.
VFD protection	MCB / fuse per VFD manual	e.g. 16–20 A for a 2.2 kW drive.
Earthing	Machine frame, panel and VFD to one earth bar	Required for safety and for the digital controls.

3 Do and don't

✓ Do

- Check the motor nameplate (kW, A, V) first.
- Check whether a speed inverter is already in the panel; most are.
- Use a VFD for roller speed; it sets the dwell time on the heat.
- Size the supply from total current (≈ 85 A).

× Don't

- Buy a 55–75 kW soft starter: heaters don't need one, and it can't control speed.
- Buy a 55–75 kW VFD: the motor is only a few kW.
- Put heaters on a VFD or soft starter.
- Run control cables in the same duct as power cables.

4 Suggested VFDs (only if the machine has none)

Model range	Tier	Why
Delta MS300	Value	Widely available in Thailand; good low-speed torque.
Schneider ATV320	Mid	Reliable; built-in Safe Torque Off.
ABB ACS380	Premium	Machine-control drive; easy commissioning.
INVT GD20	Budget	Low cost; adequate for a simple roller drive.

Example: 1.5 kW motor → 2.2 kW VFD (heavy-duty rating). Final model to be confirmed from the motor nameplate.

SOLAR ESS www.solaress.org

Solar ESS Co. Ltd.
53 Moo 2, Tambon Nanglae, Amphoe Muang, Chiang Rai 57100
Tel 063 151 6694 · 089 632 5829 · LINE: solaress1
www.solaress.org · www.โซลาร์เอสส์.com

5 Step-by-step plan

1. **Ask the machine seller:** motor kW/A; built-in inverter (yes/no); heating method (electric or oil drum); neutral needed; recommended main breaker; wiring diagram.
2. **Prepare the supply:** MCCB 3P 100 A and CV 4 × 35 mm² + G 16 mm² to the machine. This can start now.
3. **Choose the drive:** only if no inverter is fitted, select a VFD one size above the motor kW.
4. **Install:** separate power and control ducts; bond everything to one earth bar; label the panel.
5. **Commission:** enter motor nameplate data in the VFD, set ramp times and speed range, test the temperature cut-off.

Figures are engineering estimates from the published machine rating (380 V, 3-phase, 56 kW). Confirm against the manufacturer's data before purchase.

SOLAR ESS
www.solaress.org