



CANoe/CANalyzer

Aktivierung & Installation

Version 16 SP3
Deutsch

Impressum

Vector Informatik GmbH
Ingersheimer Straße 24
D-70499 Stuttgart

Vector behält sich vor, die in diesen Dokumenten enthaltenen Angaben und Daten jederzeit ohne vorherige Ankündigung zu ändern. Vector lehnt jede Haftung für die Vollständigkeit oder Richtigkeit des Inhalts und für Schäden ab, die sich aus der Verwendung dieser Dokumentation ergeben können. Ohne ausdrückliche schriftliche Zustimmung von Vector dürfen diese Dokumente, auch nicht teilweise, vervielfältigt oder übertragen werden, unabhängig davon, auf welche Weise oder mit welchen Mitteln dies geschieht. Alle technischen Angaben, Texte, Bilder und Grafiken einschließlich deren Anordnung unterliegen soweit gesetzlich zulässig den geltenden gesetzlichen Vorschriften zum Schutz des geistigen Eigentums, insb. dem Schutz des Urheberrechts. Jede nicht genehmigte Verwendung kann eine Verletzung dieser Vorschriften darstellen.

© Copyright 2022 Vector Informatik GmbH. Printed in Germany.
Alle Rechte vorbehalten.

Inhaltsverzeichnis

1 Einführung	7
1.1 Überblick	8
1.2 Zu diesem Handbuch	9
1.2.1 Konventionen	9
1.2.2 Zertifizierung	10
1.2.3 Gewährleistung	10
1.2.4 Support	10
1.2.5 Marken	11
2 Lizenzierung und Aktivierung	12
2.1 Lizenzierung	13
2.2 Lizenzaktivierung	13
2.3 Lizenzeinstellungen in CANoe/CANalyzer	14
2.4 Lizenzprüfung und Programmstart ohne Lizenzen	14
3 Allgemeine Installation	15
3.1 Allgemein	16
3.2 Systemvoraussetzungen	16
3.2.1 Anforderungen an zugehörige Hardware	16
3.2.2 System Konfiguration	16
3.3 Installationsvoraussetzungen	17
3.4 Installationsvorgang	17
3.5 MOST	18
3.5.1 Installation von Most150: Betrieb mit Optolyzer G2 3150o	18
3.5.2 Installation von Most50: Betrieb mit Optolyzer G2 3050e	19
3.6 Weitere Optionen	19
3.7 Umschaltung der Sprachversionen	20
3.8 Test der Softwareinstallation	20
3.9 Troubleshooting	21
3.9.1 Hardwarespezifische Fehlermeldungen	21
3.9.2 Softwarespezifische Fehlermeldungen	21
4 MSI Setup	22
4.1 MSI Setup at a Glance	24
4.2 Setup Prerequisites	26
4.2.1 Overview	26
4.2.2 NET Framework 3.5 SP1	26

4.2.3 Windows Updates for .NET Framework 3.5 SP1	27
4.2.4 CANoe/CANalyzer Redistributables for 64 Bit Operating Systems	27
4.2.5 Microsoft Visual C++ 2013 Redistributable	27
4.2.6 Microsoft Visual C++ 2013 Redistributable (x64)	28
4.2.7 Microsoft Visual C++ 2015-2019 Redistributable	28
4.2.8 Microsoft Visual C++ 2015-2019 Redistributable (x64)	29
4.2.9 Microsoft .NET Framework 4.8	29
4.2.10 Vector CANdela Persistors P2	30
4.2.11 Vector CANdelaStudio 17 SP1	31
4.2.12 Vector ODXStudio 9 P4	31
4.2.13 Vector AUTOSAR Explorer 2	31
4.2.14 Vector FIBEX Explorer	32
4.2.15 Vector LDF Explorer	32
4.2.16 Vector ASAP2 Studio Viewer 2.4	33
4.2.17 Vector CANoe CANalyzer Scope for 64 Bit Operating Systems	33
4.2.18 Vector Aerospace Message Editor	33
4.2.19 Vector Shell Extensions	33
4.2.20 CodeMeter Runtime 7.30a	34
4.2.21 Vector CANoe Test Report Viewer	34
4.2.22 Vector CANoe Test Report Viewer DiVa API Assemblies	35
4.2.23 Vector CANoe Test Report Viewer Selector	35
4.2.24 Vector Support Assistant	35
4.2.25 Vector Network Driver	36
4.2.26 Vector Security Manager	36
4.2.27 Vector License Client	36
4.2.28 Vector Platform Manager	37
4.2.29 Vector vTESTstudio Viewer	37
4.2.30 Vector CANdb++ 3.1	37
4.2.31 Vector Modeling Components Add-On	38
4.2.32 Vector SmartCharging Components AddOn	38
4.2.33 Vector Application Updater	38
4.2.34 Python Runtime 3.9.2 (32-bit)	38
4.2.35 Python Runtime 3.9.2 (64-bit)	39
4.2.36 .NET Framework Reference Assemblies 4.0	39
4.2.37 .NET Framework Reference Assemblies 4.7	40
4.2.38 Vector Tool Manager	40
4.2.39 Japanese Language Kit	40

4.3 Settings	42
4.3.1 Customizable Properties	42
4.3.1.1 Public properties	42
4.3.2 Transforms	45
4.4 Sample Configurations	46
4.4.1 Customizable Properties	46
4.4.2 CANoe Sample Configurations	46
4.4.3 CANalyzer Sample Configurations	47
4.4.3.1 Installable Features	48
4.5 Further Installations	49
4.5.1 Silent Installation Examples	49
4.5.1.1 Install CANoe (64 Bit) and CANalyzer (64 Bit) on the Same Machine Silently	49
4.5.1.2 Install Several Instances of CANoe (64 Bit) on the Same Machine Silently	49
4.5.1.3 Install Japanese Language Kit	50
4.5.1.4 Instance Transforms for CANoe / CANalyzer	51
4.5.2 Service Pack Installation	57
4.5.2.1 Prerequisites	57
4.5.2.2 Silent Update	57
4.5.3 Special (Traceable) Product Codes for Software Deployment	58
4.5.4 Interactive Installation using Bootstrapper	60
4.5.5 Hardware Installation	60
5 Bootstrapper Setup	61
5.1 Bootstrapper Setup at a Glance	62
5.2 Installation Program User Interface	62
5.2.1 Overview of the Installation Program	62
5.2.2 Groups in the User Interface	63
5.2.3 Customizable Settings	64
5.2.4 Predefine Settings	64
5.3 Advanced Features	67
5.3.1 Command Line Parameters	67
5.3.2 Working with Definition Files	68
5.3.3 Working with User Settings Files	69
5.3.4 Hints on Instance Transforms of CANoe and CANalyzer	71
5.3.5 Prevent Installation/Update of CANdela Studio	71
5.3.6 Prevent Installation/Update of ODX Studio	72
5.3.7 Interactive Installation Using Bootstrapper	72
5.3.8 Hardware Installation	72

6 Appendix	73
6.1 Appendix A: Support	74
6.1.1 Need support?	74
6.1.2 What our support team needs to know	74
6.2 Appendix B: MSI	76
6.2.1 Location of installation files on DVD	76
6.3 Appendix C: UserSettings.xml File Format	78
6.3.1 Variables Supported in User Settings File	78
6.3.2 Properties that control the Installation Action	78
6.3.3 PackageGuid Values for UserSettings.xml	79
6.3.4 UserSettings.xml Examples	82

1 Einführung

In diesem Kapitel finden Sie die folgenden Informationen:

1.1 Überblick	8
1.2 Zu diesem Handbuch	9
1.2.1 Konventionen	9
1.2.2 Zertifizierung	10
1.2.3 Gewährleistung	10
1.2.4 Support	10
1.2.5 Marken	11

1.1 Überblick

Sie haben verschiedene Möglichkeiten um CANoe/CANalyzer zu installieren bzw. einzurichten. Je nachdem ob Sie CANoe/CANalyzer als Benutzer auf Ihrem lokalen Computer installieren oder die Installation von CANoe/CANalyzer als Administrator verwalten, finden Sie in diesem Handbuch die passenden Informationen.

Für Benutzer ist vorrangig die **Allgemeine Installation** relevant.

Für Administratoren sind vorrangig folgende Installationsmöglichkeiten relevant:

- ▶ **MSI Setup** (nur auf Englisch verfügbar/English version only)
- ▶ **Bootstrapper Setup** (nur auf Englisch verfügbar/English version only)

1.2 Zu diesem Handbuch

1.2.1 Konventionen

In den beiden folgenden Tabellen finden Sie die durchgängig im ganzen Handbuch verwendeten Konventionen für Schreibweisen und Symbole.

Stil	Verwendung
fett	Felder, Oberflächenelemente, Fenster- und Dialognamen der Software, besondere Hervorhebungen [OK] Schaltflächen in eckigen Klammern File Save Notation für Menüs und Menübefehle
Microsoft	Rechtlich geschützte Eigennamen
Quellcode	Datei- und Verzeichnisnamen, Quellcode, Klassen- und Objektnamen, Objektattribute und Werte
Hyperlink	Hyperlinks und Verweise
<CTRL>+<S>	Notation für Tastenkombinationen

Symbol	Verwendung
	Ergänzende Informationen. ► Hinweise und Tipps, die Ihnen die Arbeit erleichtern.
	Möglicherweise schädliche Situation! ► Nichtbeachtung kann Beschädigungen des Produktes oder der Umgebung zur Folge haben!
	Möglicherweise gefährliche Situation! ► Nichtbeachtung kann leichte oder geringfügige Verletzungen von Personen zur Folge haben! ► Nichtbeachtung kann Beschädigungen des Produktes oder der Umgebung zur Folge haben!
	Gefährliche Situation! ► Nichtbeachtung kann Tod oder schwerste Verletzungen von Personen zur Folge haben!
	Unmittelbar drohende Gefahr! ► Nichtbeachtung hat Tod oder schwerste Verletzungen von Personen zur Folge!
	Weiterführende Informationen.

Symbol	Verwendung
	Beispiele
	Schritt-für-Schritt-Anleitungen.
	Stellen, an denen Änderungen der aktuell beschriebenen Datei erlaubt oder nötig sind.
	Dateien, die Sie nicht ändern dürfen.
	Multimedia-Dateien, z.B. Videos.
	Einführung in ein bestimmtes Thema.
	Textbereiche, die Grundwissen enthalten.
	Textbereiche, die Expertenwissen enthalten.
	Es hat sich etwas geändert.

1.2.2 Zertifizierung

Die Vector Informatik GmbH ist gemäß ISO 9001:2008 zertifiziert. Der ISO-Standard ist ein weltweit anerkannter Qualitätsstandard.

1.2.3 Gewährleistung

Wir behalten uns inhaltliche Änderungen der Dokumentation und der Software ohne Ankündigung vor. Vector übernimmt keine Gewährleistung und/oder Haftung für die Vollständigkeit oder Richtigkeit der Inhalte oder für Schäden, die sich aus dem Gebrauch der Dokumentation ergeben.

1.2.4 Support

Sie können unsere Hotline telefonisch unter der Rufnummer
+49 (711) 80670-200
oder per Web-Formular unter Vector Informatik GmbH Support erreichen.

1.2.5 Marken

Alle in dieser Dokumentation genannten Produktbezeichnungen sind eingetragene oder nicht eingetragene Marken ihrer jeweiligen Inhaber.

2 Lizenzierung und Aktivierung

In diesem Kapitel finden Sie die folgenden Informationen:

2.1 Lizenzierung	13
2.2 Lizenzaktivierung	13
2.3 Lizenzeinstellungen in CANoe/CANalyzer	14
2.4 Lizenzprüfung und Programmstart ohne Lizenzen	14

2.1 Lizenzierung

Die Software, die Sie gerade installieren, setzt eine gültige Lizenz voraus. CANoe/CANalyzer bietet für die Lizenzierung standardmäßig die softwarebasierte Lizenzierung per Vector Lizenztechnologie an. Hierbei handelt es sich um Einzelplatzlizenzen.



Hinweis: Lizenzierung in früheren Programmversionen

- ▶ Für CANoe/CANalyzer stellt die Lizenzierung per Vector Lizenztechnologie ab Version 12.0 den Standardfall dar. Produktversionen ≥ 8.5 SP7 unterstützen bereits die Vector Lizenztechnologie.
- ▶ Hardware- und FLEXnet-basierte (Pool-)Lizenzen wurden ab Version 13.0 durch Lizenzen der neuen Vector Lizenztechnologie ersetzt.
- ▶ Sollten Sie noch über alte Lizenzen verfügen, können Sie diese evtl. auf neue Lizenzen migrieren. Bitte wenden Sie sich für die Migration Ihrer Lizenz auf die aktuelle Technologie an Ihren Vector Support.

2.2 Lizenzaktivierung

Zur Aktivierung öffnen Sie den Menüpfad **Startmenü|Alle Programme|Vector License Client** und aktivieren Sie Ihre Lizenz durch Eingabe eines Aktivierungsschlüssels für eine softwarebasierte Lizenz von CANoe/CANalyzer im **Vector License Client**.

Den Aktivierungsschlüssel finden Sie in der Lieferungs-E-Mail.



Hinweis

- ▶ Sie können die Aktivierung und Installation unabhängig voneinander in beliebiger Reihenfolge durchführen.
- ▶ Sie können über den **Vector License Client** Lizenzen auf verschiedenen Lizenzträgern aktivieren. Zu den Lizenzträgern zählen Keyman, Computer und Vector Netzwerkschnittstellen. Gegenüber der Lizenzaktivierung auf einem stationären Computer bietet ein Keyman eine größere Flexibilität, da Sie diesen an verschiedenen Computern verwenden können.
- ▶ Über den **Vector License Client** können Sie neben der Aktivierung von Lizenzen weitere Aktionen wie Deaktivierung, Reaktivierung oder Aktualisierungen vornehmen. Des Weiteren können Sie Lizenzinformationen in einer Tabelle ausgeben und Lizenzen reparieren.
- ▶ Wenn Sie viele Lizenzen aktivieren möchten (z.B. im Zusammenhang mit einer MSI- oder Bootstrapper Installation), finden Sie in der Hilfe des **Vector License Client** eine Anleitung zur Aktivierung per Kommandozeileingabe (CLI).
- ▶ Weitere Informationen zum **Vector License Client** finden Sie ebenfalls über Hilfe-Link im Startmenü.

2.3 Lizenzeinstellungen in CANoe/CANalyzer



Querverweis

- ▶ In der CANoe/CANalyzer Hilfe auf der Seite **Hintergrundinformationen zur Lizenzierung** finden Sie nähere Informationen zu den verschiedenen Varianten.
- ▶ Im Dialog **Optionen (Allgemein|Lizenz)** können Sie vorhandene Lizenzen einsehen.
- ▶ Für das Hinzu- oder Abschalten weiterer Bussysteme erscheint beim Start von CANoe/CANalyzer ein Dialog, der in der CANoe/CANalyzer Hilfe auf der Seite **Aktivierung von Bussystem-Optionen** beschrieben wird.

2.4 Lizenzprüfung und Programmstart ohne Lizenzen

Verfügen Sie über eine erfolgreiche CANoe/CANalyzer Installation und es können beim Programmstart keine Lizenzen gefunden werden, öffnet sich automatisch der Dialog **Lizenzprüfung**, der Ihnen folgende weitere Vorgehensweisen vorschlägt:

License Client öffnen

Hiermit öffnen Sie den **Vector License Client**. Dies kann z.B. dann sinnvoll sein, wenn Sie noch keine Lizenzen aktiviert haben. Über den **Vector License Client** können Sie neben der Aktivierung von Lizenzen weitere Aktionen wie Deaktivierung, Reaktivierung oder Aktualisierungen vornehmen. Des weiteren können Sie Lizenzinformationen in einer Tabelle ausgeben und Lizenzen reparieren.

Fortsetzen

Hiermit starten Sie CANoe/CANalyzer mit einem eingeschränkten Funktionsumfang. Dies kann in dem Fall sinnvoll sein, wenn z.B. Lizenzen auf einer korrekt angeschlossenen (RT) Hardware nicht gefunden werden.



Hinweis

- ▶ Führen Sie in diesem Modus die nötige Konfiguration der Hardware durch, damit die Lizenzen auf der Hardware gefunden werden. Starten Sie dann CANoe/CANalyzer neu.
- ▶ Mehr Informationen zur Hardware-Konfiguration und zum eingeschränkten Funktionsumfang finden Sie in der CANoe/CANalyzer Hilfe auf der Seite **Lizenzprüfung**.

Abbrechen

Hiermit brechen Sie den Programmstart ab.



Hinweis

- ▶ Überprüfen Sie, ob der ggf. verwendete Keyman korrekt mit dem Computer verbunden ist.
- ▶ Starten Sie CANoe/CANalyzer neu.

3 Allgemeine Installation

In diesem Kapitel finden Sie die folgenden Informationen:

3.1 Allgemein	16
3.2 Systemvoraussetzungen	16
3.2.1 Anforderungen an zugehörige Hardware	16
3.2.2 System Konfiguration	16
3.3 Installationsvoraussetzungen	17
3.4 Installationsvorgang	17
3.5 MOST	18
3.5.1 Installation von Most150: Betrieb mit Optolyzer G2 3150o	18
3.5.2 Installation von Most50: Betrieb mit Optolyzer G2 3050e	19
3.6 Weitere Optionen	19
3.7 Umschaltung der Sprachversionen	20
3.8 Test der Softwareinstallation	20
3.9 Troubleshooting	21
3.9.1 Hardwarespezifische Fehlermeldungen	21
3.9.2 Softwarespezifische Fehlermeldungen	21

3.1 Allgemein

Diese Anleitung beschreibt die Installation der Software sowie der zugehörigen Hardware. Sie beschreibt zudem einen Funktionstest, um die erfolgreiche Installation von Software und Hardware zu prüfen.

3.2 Systemvoraussetzungen

3.2.1 Anforderungen an zugehörige Hardware

Vor jeder Softwareinstallation müssen Sie zuerst die zugehörige Hardware konfigurieren. Bitte führen Sie die Installation in der folgenden Reihenfolge durch:



Schritt-für-Schritt-Anleitung

1. Installation der **Hardware** gemäß der Beschreibung im Hardware-Handbuch.
Wenn die Hardware bereits installiert ist, führen Sie zunächst ein **Treiber-Update** durch.
Nähere Hinweise dazu sind im Anhang.
2. Installation der **Software**.



Hinweis

Verwenden Sie stets die neuesten Treiber.

3.2.2 System Konfiguration

Für den Betrieb von CANoe/CANalyzer wird folgende Systemkonfiguration empfohlen:

CPU	Intel-kompatibel > 2 GHz ≥ 2 Kerne (Minimum: Intel-kompatibel 1 GHz 2 Kerne) CANoe/CANalyzer profitiert eher von höheren Taktraten als von mehr Kernen.
Speicher (RAM)	16 GB (Minimum: 4 GB)
Festplattenspeicher	≥ 20 GB SSD (Minimum: ≥ 3 GB) Je nach verwendeten Optionen und benötigten Betriebssystem-Komponenten
Bildschirmauflösung	Full HD (Minimum: 1280×1024 Pixel)
Betriebssystem	Windows 10 (≥ Version 1803) 64 Bit Windows 11 (≥ Version 21H2) 64 Bit
Sonstiges	Zur Unterstützung der COM-Schnittstelle benötigen Sie (D)COM in der Version 1.2 oder neuer.



Hinweis

Zur Installation von CANoe/CANalyzer sind Administrator-Rechte erforderlich.

3.3 Installationsvoraussetzungen

- ▶ CANoe/CANalyzer darf nur auf lokalen Windows-Benutzerprofilen installiert werden. Das Verwenden von servergespeicherten Profilen wird nicht unterstützt und kann zu fehlerhaftem Verhalten während und nach der Installation führen.
- ▶ Für zusätzlich ausgelieferte Optionen sind unter Umständen weitere Installationsschritte notwendig. Beachten Sie bitte die entsprechenden Installationshinweise im Handbuch der jeweiligen Option.



Hinweis

- ▶ Bitte beachten Sie, dass eine neuere Version von CANoe/CANalyzer nicht über eine ältere Version von CANoe/CANalyzer installiert werden darf.
- ▶ Um mit verschiedenen CANoe/CANalyzer Versionen zu arbeiten, haben Sie folgende Möglichkeit:
 - ▶ Installieren Sie die CANoe/CANalyzer Installation in ein neues Verzeichnis.

3.4 Installationsvorgang

Gehen Sie folgendermaßen vor um die CANoe/CANalyzer Software zu installieren:



Schritt-für-Schritt-Anleitung

1. Laden Sie die CANoe/CANalyzer Installationsdatei über den Link in Ihrer E-Mail herunter.
2. Entpacken Sie die ZIP-Datei.
3. Starten Sie die **autorun.exe**.
Bei der Lieferung auf einer DVD wird mit dem Einlegen der DVD der Installationsvorgang automatisch gestartet.
4. Folgen Sie den Anweisungen des Installationsprogramms.



Hinweis

Für die Installation benötigen Sie Administrator-Rechte. Sind Sie nur als Standardbenutzer (mit Standardbenutzerrechten) angemeldet, müssen Sie das CANoe/CANalyzer Installationsprogramm **autorun.exe** direkt im Explorer starten. Es wird ein Dialog geöffnet, um sich als Benutzer mit Administrationsrechten anzumelden, damit die Installationsroutine erfolgreich ausgeführt werden kann.

3.5 MOST

Voraussetzungen

Zum Betrieb der Option .MOST benötigen Sie folgendes:

- ▶ Eine Lizenz für Option .MOST.
- ▶ Zusätzlich für **MOST150**, für den Betrieb mit einem Optolyzer G2 3150o: Eine Lizenz für das Optolyzer Integration Package (OIP) von Vector .
- ▶ Zusätzlich für **MOST50**, für den Betrieb mit einem Optolyzer G2 3050e: Eine Lizenz für das Optolyzer Integration Package (OIP) von Vector.



Hinweis

Das Optolyzer Integration Package (OIP) deckt sowohl den Betrieb mit **MOST150**, als auch **MOST50** ab.



Hinweis

Hinweise zur Installation von MOST-Hardware erhalten Sie ggf. in den zugehörigen Installationsanleitungen.

3.5.1 Installation von Most150: Betrieb mit Optolyzer G2 3150o



Schritt-für-Schritt-Anleitung

1. Installieren Sie den Optolyzer G2 3150o oder Optolyzer G2 3150o Production entsprechend dem Handbuch des Optolyzer.



Hinweis

- ▶ Beachten Sie, dass zum Betrieb eine Lizenz des Optolyzer Integration Package (OIP) von Vector benötigt wird.
- ▶ Der Optolyzer G2 wird über folgende Ethernet-Port-Nummern angesprochen. Eine möglicherweise installierte Firewall darf diese nicht blockieren.
Spy: 27998
Node: 27999
- ▶ Computer-seitig werden die Port-Nummern automatisch vergeben. Sollten dennoch nur bestimmte Port-Nummern verwendet werden, muss die Datei CAN.ini angepasst werden. Für den Optolyzer G2 3150o (MOST150) an Kanal 1 gilt dabei folgender Abschnitt:
[OptolyzerG2_1]
MyPortNode=
MyPortSpy=

2. Wählen Sie im CANoe/CANalyzer Dialog **Netzwerk-Hardware-Konfiguration** (Registerkarte **Hardware** des Menübands|**Netzwerk-Hardware**) für den MOST-Kanal den Speedgrade MOST150 und den HW-Typ Optolyzer OL3150o.
3. Geben Sie die IP-Adresse des Optolyzer auf der Seite **Interface** ein. (Wenn der Optolyzer bereits angeschlossen ist, können Sie dessen IP-Adresse per Knopfdruck ermitteln).

4. Wählen Sie ebenfalls auf der Seite **Setup** den Netzwerkadapter an dem der Optolyzer angeschlossen ist.

3.5.2 Installation von Most50: Betrieb mit Optolyzer G2 3050e



Schritt-für-Schritt-Anleitung

1. Installieren Sie den Optolyzer G2 3050e oder Optolyzer G2 3050e Production entsprechend dem Handbuch des Optolyzer.



Hinweis

- ▶ Beachten Sie, dass zum Betrieb eine Lizenz des Optolyzer Integration Package (OIP) von Vector benötigt wird.
- ▶ Der Optolyzer G2 wird über folgende Ethernet-Port-Nummern angesprochen. Eine möglicherweise installierte Firewall darf diese nicht blockieren.
Spy: 27998
Node: 27999
- ▶ Computer-seitig werden die Port-Nummern automatisch vergeben. Sollten dennoch nur bestimmte Port-Nummern verwendet werden, muss die Datei CAN.ini angepasst werden. Für den Optolyzer G2 3050e (MOST150) an Kanal 1 gilt dabei folgender Abschnitt:

```
[OptolyzerG2_1]
MyPortNode=
MyPortSpy=
```

2. Wählen Sie im CANoe/CANalyzer Dialog **Netzwerk-Hardware-Konfiguration** (Registerkarte **Hardware** des Menübands|**Netzwerk-Hardware**) für den MOST-Kanal den Speedgrade MOST150 und den HW-Typ Optolyzer G2 3050e.
3. Geben Sie die IP-Adresse des Optolyzer auf der Seite **Interface** ein. (Wenn der Optolyzer bereits angeschlossen ist, können Sie dessen IP-Adresse per Knopfdruck ermitteln).
4. Wählen Sie ebenfalls auf der Seite **Setup** den Netzwerkadapter an dem der Optolyzer angeschlossen ist.

3.6 Weitere Optionen



Achtung!

Installieren oder deinstallieren Sie die entsprechenden Optionen nicht durch manuelles Kopieren oder Löschen von Dateien. Die Programme verwenden COM-Mechanismen von MS-Windows, die durch das Installationsprogramm registriert bzw. deregistriert werden müssen.

Die Optionen sind jeweils als Erweiterung des Standard-CANoe/CANalyzer ausgeführt. Bei der Installation werden einige Dateien des Standard-CANoe/CANalyzer durch optionsspezifische Dateien ersetzt (z.B. Treiber) sowie Erweiterungen hinzugefügt (z.B. Beispielkonfigurationen).

Es ist daher wichtig, dass die eingesetzten Versionen zusammenpassen. Das Installationsprogramm prüft diese Kompatibilität und warnt gegebenenfalls. Bei Inkompatibilität der Versionen sollte der Vector Support

verständlich werden. Neben den Beispielkonfigurationen des Standard-CANoe/CANalyzer werden optionsspezifische

Beispiele in ein separates Verzeichnis installiert, welches Sie bei der Installation angeben können. Dabei können mehrere verschiedene Schicht-7-Optionen gleichzeitig in einem Verzeichnis installiert sein, z.B. ISO11783, J1939 und CANopen.



Achtung! Installation der Option .Ethernet:

Bei der Installation der Option .Ethernet beachten Sie bitte folgendes:

- ▶ Während der Installation wird die Netzwerkverbindung zurückgesetzt. Beenden Sie deshalb alle Anwendungen, die eine Netzwerkverbindung benötigen.

3.7 Umschaltung der Sprachversionen

In der Standardeinstellung werden die deutsche und englische Sprachversion installiert.

Sie können die Sprache für alle Programmfunktionen und die Hilfe wie folgt einstellen:



Schritt-für-Schritt-Anleitung

1. Öffnen Sie CANoe/CANalyzer
2. Klicke Sie Registerkarte **Datei** des Menübands **Optionen|Erscheinungsbild|Programm**.
3. Wählen Sie Ihre Sprache.
4. Schließen Sie CANoe/CANalyzer und starten Sie CANoe/CANalyzer erneut.
Tipp: Dieser Schritt ist notwendig, damit die neue Spracheinstellung wirksam wird.
CANoe/CANalyzer erscheint in Ihrer gewählten Sprache.

3.8 Test der Softwareinstallation

Nun können Sie testen, ob Ihre CANoe/CANalyzer Softwareinstallation erfolgreich war. Eine Voraussetzung ist, dass die CAN-Hardware erfolgreich installiert wurde.



Schritt-für-Schritt-Anleitung

1. Verbinden Sie die beiden CAN-Schnittstellen Ihrer CAN-Hardware mit einem dem Bussystem entsprechend abgeschlossenen Kabel.
2. Laden Sie die Beispielkonfiguration.
 - ▶ Für CANoe: **CANSystemDemo.cfg** (Registerkarte **Datei** des Menübands|**Laden**: CANoe Sample Configurations\CAN\CANSystemDemo)
 - ▶ Für CANalyzer: **CANMainDemo.cfg** (Registerkarte **Datei** des Menübands|**Laden**: CANalyzer Sample Configurations\CAN\CANMainDemo)
3. Starten Sie die Beispielkonfiguration.
Bei erfolgreicher Installation können Sie im Trace-Fenster CAN-Botschaften beobachten. Dieser Funktionstest bestätigt auch eine korrekte Installation der CAN-Hardware.

3.9 Troubleshooting

3.9.1 Hardwarespezifische Fehlermeldungen

Einige Fehlermeldungen beziehen sich auf fehlerhafte Einstellungen im Treiberkonfigurationsdialog.

Sie öffnen den Treiberkonfigurationsdialog über das Windows-Menü unter **Start|Einstellungen|Systemsteuerung|Vector Hardware**.

Fehlermeldung	Lösung
Nr 4000: Der CAN-Kanal X ist in der Vector Hardware-Konfiguration nicht definiert!	Bitte passen Sie die Anzahl der Applikations-Kanäle an Ihre Konfiguration an und weisen Sie die zusätzlichen Kanäle den Netzwerk-Interfaces zu.
Nr 4001: Die dem CAN-Kanal X zugeordnete Hardware ist nicht vorhanden!	Überprüfen Sie, ob die PC-Karte eingesteckt ist. Überprüfen Sie außerdem die PC- Karte-(PCMCIA-)Einstellungen und die CAN-Hardware-Einstellungen in Ihrer Systemsteuerung!
Nr 4002: Fehler beim Treiberzugriff!	Überprüfen Sie, ob die PC-Karte eingesteckt ist. Ist dies der Fall, wiederholen Sie die CAN-Treiber-Installation.

3.9.2 Softwarespezifische Fehlermeldungen



Querverweis

Eine Auflistung der Systemmeldungen im Write-Fenster finden Sie in der Hilfe von CANoe/CANalyzer über die Übersichtseite des Write-Fensters.

4 MSI Setup

In this chapter you find the following information:

4.1 MSI Setup at a Glance	24
4.2 Setup Prerequisites	26
4.2.1 Overview	26
4.2.2 NET Framework 3.5 SP1	26
4.2.3 Windows Updates for .NET Framework 3.5 SP1	27
4.2.4 CANoe/CANalyzer Redistributables for 64 Bit Operating Systems	27
4.2.5 Microsoft Visual C++ 2013 Redistributable	27
4.2.6 Microsoft Visual C++ 2013 Redistributable (x64)	28
4.2.7 Microsoft Visual C++ 2015-2019 Redistributable	28
4.2.8 Microsoft Visual C++ 2015-2019 Redistributable (x64)	29
4.2.9 Microsoft .NET Framework 4.8	29
4.2.10 Vector CANdela Persistors P2	30
4.2.11 Vector CANdelaStudio 17 SP1	31
4.2.12 Vector ODXStudio 9 P4	31
4.2.13 Vector AUTOSAR Explorer 2	31
4.2.14 Vector FIBEX Explorer	32
4.2.15 Vector LDF Explorer	32
4.2.16 Vector ASAP2 Studio Viewer 2.4	33
4.2.17 Vector CANoe CANalyzer Scope for 64 Bit Operating Systems	33
4.2.18 Vector Aerospace Message Editor	33
4.2.19 Vector Shell Extensions	33
4.2.20 CodeMeter Runtime 7.30a	34
4.2.21 Vector CANoe Test Report Viewer	34
4.2.22 Vector CANoe Test Report Viewer DiVa API Assemblies	35
4.2.23 Vector CANoe Test Report Viewer Selector	35
4.2.24 Vector Support Assistant	35
4.2.25 Vector Network Driver	36
4.2.26 Vector Security Manager	36
4.2.27 Vector License Client	36
4.2.28 Vector Platform Manager	37
4.2.29 Vector vTESTstudio Viewer	37
4.2.30 Vector CANdb++ 3.1	37

4.2.31	Vector Modeling Components Add-On	38
4.2.32	Vector SmartCharging Components AddOn	38
4.2.33	Vector Application Updater	38
4.2.34	Python Runtime 3.9.2 (32-bit)	38
4.2.35	Python Runtime 3.9.2 (64-bit)	39
4.2.36	.NET Framework Reference Assemblies 4.0	39
4.2.37	.NET Framework Reference Assemblies 4.7	40
4.2.38	Vector Tool Manager	40
4.2.39	Japanese Language Kit	40
4.3	Settings	42
4.3.1	Customizable Properties	42
4.3.2	Transforms	45
4.4	Sample Configurations	46
4.4.1	Customizable Properties	46
4.4.2	CANoe Sample Configurations	46
4.4.3	CANalyzer Sample Configurations	47
4.5	Further Installations	49
4.5.1	Silent Installation Examples	49
4.5.2	Service Pack Installation	57
4.5.3	Special (Traceable) Product Codes for Software Deployment	58
4.5.4	Interactive Installation using Bootstrapper	60
4.5.5	Hardware Installation	60

4.1 MSI Setup at a Glance

This document provides an installation guide for IT departments who want to install Vector CANoe/CANalyzer silently on target machines using software deployment systems. It is assumed that the reader is familiar with the Windows Installer technology and the software deployment system used.

After depicting the necessary **Setup Prerequisites**, this document explains how the public properties of the installer can be configured in order to install the required application components and how embedded transforms can be used to setup **multiple instances** of CANoe and CANalyzer alongside on the same machine.

This document applies to CANoe/CANalyzer version 11.0 and up. For an updated version of this document please always check the documentation that came with your product before packaging the application as some items mentioned here are version dependent (e.g. updated installation prerequisites).



Note

- ▶ Unlike previous CANoe/CANalyzer versions, there is no longer just one Windows Installer database for CANoe and CANalyzer, but there is one database each for CANoe (CANoe64.msi) and CANalyzer (CANalyzer64.msi). Nevertheless, the term CANoe/CANalyzer is used for readability.
- ▶ The sample configurations are no longer part of the CANoe/CANalyzer Windows Installer databases. Instead, there are separate installation packages for CANoe sample configurations and for CANalyzer sample configurations.
- ▶ Beginning with version 11.0 of CANoe/CANalyzer it is also possible to perform a silent installation using the installation program (e.g. SetupCANoe64.exe). The chapter **Bootstrapper Setup** provides a reference on how the installation program can be used.

CANoe Test Bench Edition and CANalyzer Test Bench Edition

Beginning with version 16 SP3, the new products CANoe Test Bench Edition and CANalyzer Test Bench Edition are available. Regarding the installation of these two products, it is quite similar to the installation of CANoe and CANalyzer. The prerequisites are identical, only the installation databases for the product itself are different:

- ▶ For CANoe Test Bench Edition use `CANoeTBE.msi`.
- ▶ For CANalyzer Test Bench Edition use `CANalyzerTBE.msi`.

The installation databases of the new products contain different instance transform values. They can be found in the tables in the chapters **Instance Transforms for CANoe/CANalyzer** and **Special (Traceable) Product Codes for Software Deployment**.

Important Notes for Silent Installation

When silently installing CANoe/CANalyzer using MST transforms, make sure that all files and folders from the installation media's `\CANoe` or `\CANalyzer` folder are present in the folder from where the `CANoe64.msi` / `CANalyzer64.msi` will be called by your setup scripts (typically a network share or a local temporary folder on the target system).

Roaming User Profiles

Roaming user profiles are not supported by CANoe/CANalyzer. It is highly recommended to execute the installation on local user profiles only. Usage of roaming profiles may lead to:

- ▶ Inconsistencies of installations, including prerequisites
- ▶ Malfunction of future CANoe/CANalyzer updates

4.2 Setup Prerequisites

4.2.1 Overview

Prerequisites	Several prerequisites must be met in order to install and/or use CANoe/CANalyzer. Those prerequisites will be listed in the following sections. Please ensure that every client meets these prerequisites before installing CANoe/CANalyzer.
Setup Programs	You can find the setup programs for all prerequisites in the setup directory on your CD under <code>CANoe\Files</code>. The setup programs reside in individual directories. Chapter Appendix B: Location of installation files on DVD provides a reference on where to find the setup programs.

4.2.2 NET Framework 3.5 SP1

Optional Prerequisites	The .NET Framework 3.5 SP1 should only be installed when .NET code shall be used that targets the .NET runtime version 2.0. Besides this, it is not required to install the .NET Framework 3.5 SP1  Note This version of the .NET Framework is only required when .NET 2.0 is selected as .NET Target Framework in the program settings.
Installation Check	To check if the .NET Framework is installed you can check if the following registry key is present: <pre>HKEY_LOCAL_MACHINE\SOFTWARE\Microsoft\NET Framework Setup\NDP\v3.5</pre> If this registry key exists, the .NET Framework 3.5 is installed (this could also be 3.5 without any Service Pack). Please note that this registry key also exists, when a higher version of the .NET Framework is installed. Additionally, the following value must appear below this key and its value must be 1 or greater to be sure that SP 1 is installed: <pre>SP = 1</pre>  Note The .NET Framework 3.5 SP1 is delivered with Windows 7 SP1. You must use Turn Windows features on or off in the Control Panel to install or configure Microsoft .NET Framework 3.5 SP1. For more information on this, see http://social.msdn.microsoft.com/Forums/en-US/netfxsetup/thread/35d348e5-192e-4fa2-a45a-c1c2175ce111/.

	i Note The .NET Framework 3.5 SP1 is not delivered with Windows 8. You must use Turn Windows features on or off in the Control Panel to install or configure Microsoft .NET Framework 3.5 SP1. For more information on this, see http://msdn.microsoft.com/library/vstudio/506443.
--	---

4.2.3 Windows Updates for .NET Framework 3.5 SP1

Prerequisites	After installing the .NET Framework 3.5 SP1 it is recommended to immediately install also the update KB959209 in order to address a set of known application compatibility issues. This update consists of several files which are provided for each relevant target system. See http://support.microsoft.com/kb/959209/en-us for details.
Installation Check and Installation	It is assumed that there is a strategy for installing Windows updates on your client computers and that there are rules on how such Windows updates shall be applied. Thus no further information on this topic is given here.

4.2.4 CANoe/CANalyzer Redistributables for 64 Bit Operating Systems

Prerequisites	Some CANoe/CANalyzer Redistributables need to be installed to use CANoe/CANalyzer on 64 bit operating systems. These Redistributables do not bring their own setups so that they are integrated in one single Windows Installer packet.
Installation Check	There is no check needed. Just install the redistributable package. The package itself checks which Redistributables need to be installed. i Note CANoe/CANalyzer Redistributables Package for 32 bit operating systems has to be uninstalled before you install the 64 bit package. The 32 bit package can be identified by its product code: {FF9E31CF-F433-48FD-989E-A6E9A3FCFC01}.
Installation	Install the <code>CANoeCANalyzerRedistributable_x64.msi</code> packet before installing the CANoe/CANalyzer MSI packet on 64 bit operating systems.

4.2.5 Microsoft Visual C++ 2013 Redistributable

CANoe/CANalyzer v8.5 and Up	Effective with CANoe/CANalyzer v8.5 and up you also have to have the Microsoft Visual C++ 2013 redistributables package installed.
-----------------------------	--

Installation Check	Note that the Microsoft Visual C++ 2013 redistributables consist of a minimum runtime package and an additional runtime package. Both packages need to be checked. To verify that the Microsoft Visual C++ 2013 redistributables are installed, check if the software with the following product code is installed: Minimum runtime: {13A4EE12-23EA-3371-91EE-EFB36DDFFF3E} Additional runtime: {F8CFEB22-A2E7-3971-9EDA-4B11EDEFC185}
Installation	To install the Microsoft Visual C++ 2013 redistributables silently, use the following command: <pre>vc_redist_x86_VS2013_SP2.exe /install /quiet /norestart</pre>

4.2.6 Microsoft Visual C++ 2013 Redistributable (x64)

CANoe/CANalyzer v8.5 SP2 and Up	Effective with CANoe/CANalyzer v8.5 SP2 and up you also have to have the Microsoft Visual C++ 2013 (x64) redistributables package installed.
Installation Check	Note that the Microsoft Visual C++ 2013 (x64) redistributables consist of a minimum runtime package and an additional runtime package. Both packages need to be checked. To verify that the Microsoft Visual C++ 2013 (x64) redistributables are installed, check if the software with the following product code is installed: Minimum runtime: {A749D8E6-B613-3BE3-8F5F-045C84EBA29B} Additional runtime: {929FBD26-9020-399B-9A7A-751D61F0B942}
Installation	To install the Microsoft Visual C++ 2013 (x64) redistributables silently, use the following command: <pre>vc_redist_x64_VS2013_SP2.exe /install /quiet /norestart</pre>

4.2.7 Microsoft Visual C++ 2015-2019 Redistributable

CANoe/CANalyzer v11.0 SP3 and Up	Effective with CANoe/CANalyzer v16 and up you also have to have the Microsoft Visual C++ 2015-2019 redistributables package installed.
---	--

Installation Check	To verify that the Microsoft Visual C++ 2015-2019 redistributables are installed, check the following registry keys: <pre>HKEY_LOCAL_MACHINE\SOFTWARE\Wow6432Node\ Microsoft\VisualStudio\14.0\VC\Runtimes\x86</pre> <pre>HKEY_LOCAL_MACHINE\SOFTWARE\Classes\Installer\ Dependencies\Microsoft.VS.VC_RuntimeAdditionalVSU_x86,v14</pre> <pre>HKEY_LOCAL_MACHINE\SOFTWARE\Classes\Installer\ Dependencies\Microsoft.VS.VC_RuntimeMinimumVSU_x86,v14</pre> Install Microsoft Visual C++ 2015-2019 redistributables if ▶ it is not already installed (not all of the registry keys exist) or ▶ the Version value of any of these keys is less than 14.28.29914.0.
Installation	To install the Microsoft Visual C++ 2015-2019 redistributables silently, use the following command: <pre>vc_redist_2019_x86.exe /install /quiet /norestart</pre>

4.2.8 Microsoft Visual C++ 2015-2019 Redistributable (x64)

CANoe/CANalyzer v11.0 SP3 and Up	Effective with CANoe/CANalyzer v16 and up you also have to have the Microsoft Visual C++ 2015-2019 (x64) redistributables package installed.
Installation Check	To verify that the Microsoft Visual C++ 2015-2019 (x64) redistributables are installed, check the following registry keys: <pre>HKEY_LOCAL_MACHINE\SOFTWARE\Wow6432Node\ Microsoft\VisualStudio\14.0\VC\Runtimes\x64</pre> <pre>HKEY_LOCAL_MACHINE\SOFTWARE\Classes\Installer\ Dependencies\Microsoft.VS.VC_RuntimeAdditionalVSU_amd64,v14</pre> <pre>HKEY_LOCAL_MACHINE\SOFTWARE\Classes\Installer\ Dependencies\Microsoft.VS.VC_RuntimeMinimumVSU_amd64,v14</pre> Install Microsoft Visual C++ 2015-2019 (x64) redistributables if ▶ it is not already installed (one or all of the registry keys exist) or ▶ the Version value of any of these keys is less than 14.28.29914.0.
Installation	To install the Microsoft Visual C++ 2015-2019 (x64) redistributables silently, use the following command: <pre>vc_redist_2019_x64.exe /install /quiet /norestart</pre>

4.2.9 Microsoft .NET Framework 4.8

Prerequisites	The Microsoft .NET Framework 4.8 needs to be installed in order to use CANoe/CANalyzer. Note that the .NET Framework 4.8 does not include the .NET Framework versions up to 3.5.
----------------------	--

Installation Check	To check if the .NET Framework 4.8 or later is installed, check if the following DWORD value is present in the registry: <pre>HKEY_LOCAL_MACHINE\SOFTWARE\Microsoft\NET Framework Setup\NDP\v4\Full\Release</pre> If this value exists, check if it is equal or greater than 528040. If that is the case, a sufficient version of the Microsoft .NET Framework is present. In all other cases, you should install the Microsoft .NET Framework 4.8.  Note <pre>HKEY_LOCAL_MACHINE\SOFTWARE\Microsoft\NET Framework Setup\ NDP\v4\Full\</pre> does not exist at all if no .NET Framework of version 4.x is installed. See also https://docs.microsoft.com/en-us/dotnet/framework/migration-guide/how-to-determine-which-versions-are-installed for more information on how to determine which .NET Framework version is installed.
Installation	To install the Microsoft .NET Framework 4.8 silently, use the following command: <pre>ndp48-x86-x64-allos-enu.exe /q /norestart</pre> It is recommended to install either the German or the Japanese language pack for .NET Framework 4.8 on German and Japanese systems, respectively. To install it silently, use the following command: ▶ German: <code>ndp48-x86-x64-allos-deu.exe /q /norestart</code> ▶ Japanese: <code>ndp48-x86-x64-allos-jpn.exe /q /norestart</code>

4.2.10 Vector CANdela Persistors P2

CANoe/CANalyzer v8.0 and Up	Effective with CANoe/CANalyzer v8.0 and up you also have to have the Vector CANdela converters add-on installed. Note that this add-on may also be installed by other Vector products.
Installation Check	To verify that the latest version of the Vector CANdela converters add-on is installed, check the newest product of the product family with the following upgrade code: <pre>{4071CAEA-9245-4195-AD8C-163E19A2DD63}</pre> Install the Vector CANdela converters add-on if the installed version is less than 17.0.00102 or no version is installed.
Installation	The Vector CANdela converters add-on is provided as a Windows Installer Package. You can install it using the package CANdelaPersistors17P2.msi.

4.2.11 Vector CANdelaStudio 17 SP1

CANoe/CANalyzer v12.0 SP3 and Up	When CANoe/CANalyzer 12.0 SP3 (64 bit) or newer is installed, you should install the Vector CANdelaStudio (64 bit).
Installation Check	To verify that the latest version of the Vector CANdelaStudio is installed, check the newest product of the product family with the following upgrade code: <pre>{C9FE0144-75EA-4535-9018-13C9ACDA71C4}</pre> Install the Vector CANdelaStudio 17 SP1 if the installed version is less than 17.0.01100 or no version is installed.
Installation	The Vector CANdelaStudio is provided as a Windows Installer Package. You can install it using the package CANdelaStudio17SP1.msi. Set the following property during installation to prevent a reboot: <pre>REBOOTREQUIRED=0</pre>

4.2.12 Vector ODXStudio 9 P4

CANoe/CANalyzer v11.0 and Up	When CANoe/CANalyzer 11.0 (64 bit) or newer is installed, you should install the Vector ODXStudio 9 P4.  Note ▶ This tool may also be installed by other Vector products. ▶ There is a 32 bit variant of Vector ODXStudio as well which can be installed additionally to the 64-bit variant.
Installation Check	To verify that the latest version of the Vector ODXStudio is installed, check the newest product of the product family with the following upgrade code: <pre>{42E1A73D-DE86-4582-8901-8EF829F29ED9}</pre> Install the Vector ODXStudio 9 if the installed version is less than 9.0.0104 or no version is installed.
Installation	The Vector ODXStudio is provided as a Windows Installer Package. You can install it using the package ODXStudio9Patch4.msi.

4.2.13 Vector AUTOSAR Explorer 2

CANoe/CANalyzer Option .CAN, .FlexRay	When CANoe/CANalyzer 64 bit with option .CAN or .FlexRay is installed, you should install the Vector AUTOSAR Explorer 2. Note that this tool may also be installed by other Vector products.
--	--

Installation Check	To verify that the latest version of the Vector AUTOSAR Explorer 2.x is installed, check the newest product of the product family with the following upgrade code: {C53C0C39-CD73-4E20-A99D-371CC30A23A7}
Installation	The Vector AUTOSAR Explorer is provided as a Windows Installer Package. You can install it using the package AUTOSARExplorer2.msi .

4.2.14 Vector FIBEX Explorer

CANoe/CANalyzer Option .FlexRay	When CANoe/CANalyzer with option .FlexRay is installed, you should install the Vector FIBEX Explorer. Note that this tool may also be installed by other Vector products.
Installation Check	To verify that the latest version of the Vector FIBEX Explorer is installed, check the newest product of the product family with the following upgrade code: {1A240E4E-A1F2-4552-B430-770B01128C28}
Installation	The Vector FIBEX Explorer is provided as a Windows Installer Package. You can install it using the package FIBEXExplorer.msi . Set the following property during installation to register the XML file type for Vector FIBEX Explorer: VREGISTER_FILE_EXT=1 Note that this setting is likely to conflict with other applications using the XML file type. For that reason, it is recommended not to set VREGISTER_FILE_EXT.

4.2.15 Vector LDF Explorer

CANoe/CANalyzer Option .LIN	When CANoe/CANalyzer with option .LIN is installed, you should install the Vector LDF Explorer. Note that this tool may also be installed by other Vector products.
Installation Check	To verify that the latest version of the Vector LDF Explorer is installed, check the newest product of the product family with the following upgrade code: {5C652F7C-5EF5-411A-B611-345D5287BD5D}
Installation	The Vector LDF Explorer is provided as a Windows Installer Package. You can install it using the package LDFExplorer.msi . Set the following property during installation to register the LDF file type for Vector LDF Explorer: VREGISTER_FILE_EXT=1

4.2.16 Vector ASAP2 Studio Viewer 2.4

CANoe/CANalyzer Option .AMD/XCP	When CANoe/CANalyzer with option .AMD/XCP is installed, you should install the Vector ASAP2 Studio Viewer. Note that this tool may also be installed by other Vector products.
Installation Check	To verify that the latest version of the Vector ASAP2 Studio Viewer is installed, check the newest product of the product family with the following upgrade code: {AF7A0DAD-D449-4D5D-925A-20B9E362C608}
Installation	The Vector ASAP2 Studio Viewer is provided as a Windows Installer Package. You can install it using the package Vector ASAP2 Studio Viewer 2.4.msi .

4.2.17 Vector CANoe CANalyzer Scope for 64 Bit Operating Systems

CANoe/CANalyzer Option .Scope	When CANoe/CANalyzer with option .Scope is installed on a 64 bit operating system, you should install the Vector package CANoe/CANalyzerScope.
Installation Check	To verify that the latest version of the Vector CANoe/CANalyzerScope is installed, check the newest product of the product family with the following upgrade code: {CDEA67B2-8AA8-45F9-BF9A-2777207935A6}
Installation	The Vector CANoe/CANalyzerScope is provided as a Windows Installer Package. You can install it using the package CANoeCANalyzerScope_x64.msi .

4.2.18 Vector Aerospace Message Editor

CANoe/CANalyzer Option .AFDX, .CANAero, .A429	When CANoe/CANalyzer Option .AFDX, .CANAero or .A429 is installed, you also have to install the Vector Aerospace Message Editor.
Installation Check	To verify that the latest version of the Vector Aerospace Message Editor is installed, check the newest product of the product family with the following upgrade code: {2341551F-B4B2-4CED-9ABF-C7E31299BCC0}
Installation	The Vector Aerospace Message Editor is provided as a Windows Installer Package. You can install it using the package SetupVAME.msi .

4.2.19 Vector Shell Extensions

CANoe/CANalyzer v10.0 and Up	When CANoe/CANalyzer 10.0 or newer is installed, you should install the Vector Shell Extensions package to improve the handling of CANoe/CANalyzer compatible log and support file formats in Windows Explorer.
-------------------------------------	---

64 Bit Installation	On a 64 bit operating system, you should install both the 32 bit and the 64 bit Shell Extensions.
Installation Check	To verify that the latest version of the 32 bit Shell Extensions is installed, check the newest 32 bit product of the product family with the following upgrade code: <pre>{09D94F4D-1CBB-4868-9755-CC7091E3407F}</pre> Install the 32 bit Shell Extensions if the installed version is less than 5.0.10496 or no version is installed. To verify that the latest version of the 64 bit Shell Extensions is installed, check the newest 64 bit product of the product family with the upgrade code above. Install the 64 bit Shell Extensions if the installed version is less than 5.0.10879 or no version is installed.
Installation	The Vector Shell Extensions are provided as Windows Installer Packages. You can install them using the packages Vector ShellExtensions 32-bit.msi and Vector ShellExtensions 64-bit.msi respectively.

4.2.20 CodeMeter Runtime 7.30a

CANoe/CANalyzer v9.0 SP4 and Up	When CANoe/CANalyzer 16 or newer is installed, you should install the CodeMeterRuntime 7.30a.
Installation Check	To verify that the latest version of the CodeMeter Runtime (x64) is installed, check the following registry key: <pre>HKEY_LOCAL_MACHINE\SOFTWARE\WIBU-SYSTEMS\CodeMeter\RuntimeVersion</pre> If the value exists, it should be equal or greater than 7.30.4820.501. If that is the case, a sufficient version of the CodeMeter Runtime is present. In all other cases, you should install the CodeMeter Runtime 7.30a.
Installation	To install the CodeMeter Runtime silently, use the following command: <pre>CodeMeterRuntime.exe /componentargs "*"":"/qn ADDLOCAL=Complete,DotNET_Modules,AutomaticServerSearch REMOVE=WibuShellExtension,EnableNetworkServer,AccessToWebAdmin /l*v "C:\windows\temp\keyinst.log" /norestart PROP_CMCC="none"</pre>

4.2.21 Vector CANoe Test Report Viewer

CANoe v10.0 and Up	When CANoe/CANalyzer 10.0 or newer is installed, you should install Vector CANoe Test Report Viewer to be able to view CANoe Test Reports. Note that this tool may also be installed individually by its separately available Standalone Setup.
---------------------------	---

Installation Check	To verify if the Vector CANoe Test Report Viewer is installed, check the newest product of the product family with the following upgrade code: { 61A03B09-4A89-4165-838D-DE0749F57A31 }
Installation	The Vector CANoe Test Report Viewer is provided as a Windows Installer Package. You can install it using the package CANoeTestReportViewer.msi .

4.2.22 Vector CANoe Test Report Viewer DiVa API Assemblies

CANoe v11.0 SP3 and Up	You should install Vector CANoe Test Report Viewer DiVa API Assemblies.
Installation Check	To verify if the Vector CANoe Test Report Viewer DiVa API Assemblies are installed, check the newest product of the product family with the following upgrade code: { 3BA6D62D-0529-417E-9184-BCEA979FBF38 }
Installation	The Vector CANoe Test Report Viewer DiVa API Assemblies are provided as a Windows Installer Package. You can install it using the package ReportViewerDiVaApiAllVersions.msi .

4.2.23 Vector CANoe Test Report Viewer Selector

CANoe v11.0 SP3 and Up	When CANoe/CANalyzer 11.0 SP3 or newer is installed, you should install Vector CANoe Test Report Viewer Selector to be able to view CANoe Test Reports. Note that this tool may also be installed individually by its separately available Standalone Setup.
Installation Check	To verify if the Vector CANoe Test Report Viewer Selector is installed, check the newest product of the product family with the following upgrade code: { 41F7AC4A-9C7A-4D98-8EE6-5C22CB516E6E }
Installation	The Vector CANoe Test Report Viewer Selector is provided as a Windows Installer Package. You can install it using the package CANoeTestReportViewerSelector.msi .

4.2.24 Vector Support Assistant

CANoe/CANalyzer v10.0 and Up	When CANoe/CANalyzer 10.0 or newer is installed, you should install Vector Support Assistant to be able to send support reports to Vector Support Team. Note that the Vector Support Assistant needs the Vector Shell Extensions to be installed.
-------------------------------------	--

Installation Check	To verify if the Vector Support Assistant is installed, check the newest product of the product family with the following upgrade code: { 8B5CE374-D2B2-4778-98E4-B7D9D450E85D }
Installation	The Vector Support Assistant is provided as a Windows Installer Package. You can install it using the package Vector Support Assistant.msi .

4.2.25 Vector Network Driver

CANoe/CANalyzer v10.0 and up, Option .Ethernet, .AFDX, Optional	When CANoe/CANalyzer 10.0 or newer is installed, you may install Vector network driver to be able to use integrated network interface cards of the computer as interface hardware for CANoe/CANalyzer. Note that you do not need this driver to use Vector VN5610, VN5610A or VN5640.
Installation Check	To verify if the Vector network driver is installed, check the newest product of the product family with the following upgrade code: { 847086BF-C17B-4B8F-8B38-7BA38B2FA5DE }
Installation	The Vector network driver is provided as a Windows Installer Package which resides in the installation directory of the installed application. You can install it using the package NetworkDriver.msi .

4.2.26 Vector Security Manager

CANoe/CANalyzer v10.0 SP3 and Up	When CANoe/CANalyzer 10.0 SP3 or newer is installed, you should install Vector Security Manager.
Installation Check	To verify if the Vector Security Manager is installed, check the newest product of the product family with the following upgrade code: { 94D964B0-9083-4BAD-9E9F-28961884CF8E }
Installation	The Vector Security Manager is provided as a Windows Installer Package. You can install it using the package VectorSecurityManager.msi .

4.2.27 Vector License Client

CANoe/CANalyzer v10.0 SP4 and Up	When CANoe/CANalyzer 10.0 SP4 or newer is installed, you should install Vector License Client. Note that this tool may also be installed by other Vector products. Further note that this tool requires the CodeMeter runtime to function correctly.
---	---

Installation Check	To verify if the Vector License Client is installed, check the newest product of the product family with the following upgrade code: {25445C82-88D3-4C73-B37D-940F8AFEC7C6}
Installation	The Vector License Client is provided as a Windows Installer Package. You can install it using the package VectorLicenseClientInstaller.msi .

4.2.28 Vector Platform Manager

CANoe/CANalyzer v11.0 and Up	When CANoe/CANalyzer 11.0 or newer is installed, you should install Vector Platform Manager. Note: This tool may also be installed by other Vector products.
Installation Check	To verify if the Vector Platform Manager is installed, check the newest product of the product family with the following upgrade code: {F2D8FCB6-FA07-4F5F-95FD-25A7F8239CEB}
Installation	The Vector Platform Manager is provided as a Windows Installer Package. You can install it using the package Vector Platform Manager.msi .

4.2.29 Vector vTESTstudio Viewer

CANoe/CANalyzer v12.0 and Up	When CANoe/CANalyzer 12.0 or newer is installed, you should install Vector vTESTstudio Viewer. Note: This tool may also be installed by other Vector products. The full version of vTESTstudio can be obtained separately. You should not install vTESTstudio Viewer if a full version is installed
Installation Check	To verify if the Vector vTESTstudio Viewer is installed, check the newest product of the product family with the following upgrade code: {C2A84F0A-3008-48BE-85D8-7341B472C818}
Installation	The Vector vTESTstudio Viewer is provided as a Windows Installer Package. You can install it using the package Vector vTESTstudio Viewer 7.msi .

4.2.30 Vector CANdb++ 3.1

CANoe/CANalyzer v12.0 SP3 and Up	When CANoe/CANalyzer 12.0 SP3 or newer is installed, you should install Vector CANdb++ 3.1.
Installation Check	To verify if the Vector CANdb++ 3.1 is installed, check the newest product of the product family with the following upgrade code: {B0719DA9-E2EE-42CB-8645-5596058C3411}
Installation	Vector CANdb++ 3.1 is provided as a Windows Installer Package. You can install it using the package VectorCANdb++Installer.msi .

4.2.31 Vector Modeling Components Add-On

CANoe/CANalyzer v14 and Up	When CANoe/CANalyzer 14 or newer is installed, you should install Vector Modeling Components Add-on.
Installation Check	To verify if the Vector Modeling Components Add-on is installed, check the newest product of the product family with the following upgrade code: { F0E91637-04B2-4EA1-AAAF-5DB2E6DB4B70 }
Installation	Vector Modeling Components Add-on is provided as a Windows Installer Package. You can install it using the package Vector Modeling Components AddOn.msi .

4.2.32 Vector SmartCharging Components AddOn

CANoe/CANalyzer v14 and Up	When CANoe/CANalyzer 14 or newer is installed, you should install Vector SmartCharging Components AddOn.
Installation Check	To verify if the Vector SmartCharging Components AddOn is installed, check the newest product of the product family with the following upgrade code: { 78A1AD9C-D914-4DB4-9111-074C9BB8CA58 }
Installation	Vector SmartCharging Components AddOn is provided as a Windows Installer Package. You can install it using the package Vector SmartCharging Components AddOn.msi .

4.2.33 Vector Application Updater

CANoe/CANalyzer v15 and Up	When CANoe/CANalyzer 15 or newer is installed, you should install the Vector Application Updater.
Installation Check	To verify if the Vector Application Updater is installed, check the newest product of the product family with the following upgrade code: { 5E5E9F1D-BE05-4DA7-899B-EB57F247516A }
Installation	Vector Application Updater is provided as a Windows Installer Package. You can install it using the package VectorApplicationUpdaterInstaller.msi .

4.2.34 Python Runtime 3.9.2 (32-bit)

Prerequisites	The Python runtime 3.9.2 (32-bit) needs to be installed to use CANoe.
----------------------	---

Installation Check	To check if the Python runtime 3.9.2 (32-bit) or later is installed, check if the following DWORD value is present in the registry: HKEY_LOCAL_MACHINE\SOFTWARE\Python\PythonCore\3.9-32:Version If this value exists, check if it is equal or greater than 3.9.2. If that is the case, a sufficient version of the Python runtime (32-bit) is present. In all other cases, you should install the Python runtime 3.9.2 (32-bit).  Note The registry key named above has to be searched in the 32-bit view of the Windows registry. When searched in Registry Editor, the path is HKEY_LOCAL_MACHINE\SOFTWARE\WOW6432Node\Python\PythonCore\3.9-32.
Installation	To install the Python runtime 3.9.2 (32-bit) silently, use the following command: <pre>python-3.9.2.exe /quiet InstallAllUsers=1</pre>

4.2.35 Python Runtime 3.9.2 (64-bit)

Prerequisites	The Python runtime 3.9.2 (64-bit) needs to be installed to use CANoe.
Installation Check	To check if the Python runtime 3.9.2 (64-bit) or later is installed, check if the following DWORD value is present in the registry: HKEY_LOCAL_MACHINE\SOFTWARE\Python\PythonCore\3.9:Version If this value exists, check if it is equal or greater than 3.9.2. If that is the case, a sufficient version of the Python runtime (32-bit) is present. In all other cases, you should install the Python runtime 3.9.2 (64-bit).
Installation	To install the Python runtime 3.9.2 (64-bit) silently, use the following command: <pre>python-3.9.2-amd64.exe /quiet InstallAllUsers=1</pre>

4.2.36 .NET Framework Reference Assemblies 4.0

Prerequisites	You should install the .NET Framework Reference Assemblies 4.0.
Installation Check	To verify that the latest version of the .NET Framework Reference Assemblies 4.0 is installed, check if the following path exists: %PROGRAMFILES(X86)%\Reference Assemblies\Microsoft\Framework\.NETFramework\v4.0 If it does not exist, check the newest product of the product family with the following upgrade code: <pre>{F556F00A-0A20-4f6C-AE96-CFEE32BB182E}</pre> Install the .NET Framework Reference Assemblies 4.0 if no version is installed.

Installation	The .NET Framework Reference Assemblies 4.0 is provided as a Windows Installer Package. You can install it using the package .NET Framework Reference Assemblies 4.0.msi .
---------------------	---

4.2.37 .NET Framework Reference Assemblies 4.7

Prerequisites	You should install the .NET Framework Reference Assemblies 4.7.
Installation Check	To verify that the latest version of the .NET Framework Reference Assemblies 4.7 is installed, check if the following path exists: <pre>%PROGRAMFILES(X86)%\Reference Assemblies\Microsoft\Framework\.NETFramework\v4.7</pre> If it does not exist, check the newest product of the product family with the following upgrade code: <pre>{B198C64E-9769-43CD-B40A-2E135F4077F0}</pre> Install the .NET Framework Reference Assemblies 4.7 if no version is installed.
Installation	The .NET Framework Reference Assemblies 4.7 is provided as a Windows Installer Package. You can install it using the package .NET Framework Reference Assemblies 4.7.msi .

4.2.38 Vector Tool Manager

Prerequisites	You should install the Vector Tool Manager.
Installation Check	To verify if the Vector Tool Manager is installed, check the newest product of the product family with the following upgrade code: <pre>{C44141FE-2C86-44F4-A3D5-1E08DFFF0F37}</pre>
Installation	The Vector Tool Manager is provided as a Windows Installer Package. You can install it using the package VectorToolManager.msi .

4.2.39 Japanese Language Kit

Delivery Information	The Japanese Language Kit is usually delivered as a separate installation package after the release of CANoe/CANalyzer. It may also be delivered and installed together with CANoe/CANalyzer. If you received the Japanese Language Kit separately, you can copy the content of its Files folder into the Files folder of a CANoe/CANalyzer installation package to create such a combined installer. Each Japanese Language Kit is compatible only with its matching CANoe/CANalyzer version.
-----------------------------	---

CANoe/CANalyzer v13.0 and Up	If CANoe/CANalyzer 13.0 or newer is installed and Japanese language support is required, you should install the Vector CANoe Japanese Language Kit resp. Vector CANalyzer Japanese Language Kit.
Installation Check	When updating an existing CANoe/CANalyzer installation, it may have a matching Japanese Language Kit installed. In this case, check if a Windows installer patch with the following patch GUID is installed for the product: For CANoe: {59E4A509-C975-46E7-A8C5-AD4C29D28230} For CANalyzer: {A39826C7-BEA1-4A40-B4DB-86A1384B6974}
Removal on Update	If the Japanese Language Kit is present for a CANoe/CANalyzer installation that is being updated, make sure this patch installation is removed beforehand. This guarantees the consistency of the installation. After updating, install the recent patch file from the current distribution.
Installation	The Japanese Language Kit is delivered as a patch file (.MSP) for CANoe/CANalyzer. You can install it using the package CANoe_x64_JLK.msp for CANoe or CANalyzer_x64_JLK.msp for CANalyzer.

4.3 Settings

4.3.1 Customizable Properties

The MSI setup was created to ease the deployment of CANoe/CANalyzer in large IT networks via software deployment systems. To support this, the options that can be changed in the user interface setup are represented by public properties. Note that CANoe/CANalyzer are complex software utilities whose correct execution depends on some settings you might want to change. Only change the settings available through the properties described in the following table, otherwise, a correct setup execution cannot be guaranteed.

4.3.1.1 Public properties

The following table lists the public properties and their meaning, as well as their standard or predefined values respectively.

Note: In case one of the following public properties shall be set to a customized value, the respective property and its value.

- ▶ have to be either directly provided on the `msiexec` command line or
- ▶ have to be added and/or modified in the 'Property' table of the MST when using your own transform files for deployment.

For an example please refer to [Silent Installation Example](#).



Note

Property names are case sensitive.

Property	Meaning	Default Value
VAPPLICATION_DATA_FOLDER	Absolute path where the application data is stored (e.g. INI files)	No default value; see also VAPPLICATION_AND_DATA_ROOT
VUSER_DATA_FOLDER	Absolute path where the user data is stored (e.g. for templates)	No default value; see also VAPPLICATION_AND_DATA_ROOT

Property	Meaning	Default Value
VAPPLICATION_AND_DATA_ROOT	If neither VAPPLICATION_DATA_FOLDER nor VUSER_DATA_FOLDER is set, you can set both paths to predefined values using the following values for VAPPLICATION_AND_DATA_ROOT ▶ 2 = Application data and user data are stored in all users' profile (recommended). ▶ 3 = Application data and user data are stored in the CANoe/CANalyzer program folder (not recommended). This value is not supported on Windows Vista and later (see below)	The default value is set to 2. Thus, the default user data target is (example): %AllUsersProfile%Documents\Vector\CANoe\8.114 or %AllUsersProfile%Documents\Vector\CANalyzer\8.1 The default application data target is (example): %AllUsersProfile%Vector\CANoe\11.014 or %AllUsersProfile%Vector\CANalyzer\11.0
VPROGRAM_LANGUAGE	Language to use at program start. Possible values are: ▶ 01 = English ▶ 49 = German	01
VSTART_MENU_FOLDER	Program menu command that will be used for program shortcuts.	Vector CANoe 11.0 or Vector CANalyzer 11.0
INSTALLDIR	Absolute path where the application should be installed to.	%ProgramFilesFolder%Vector CANoe 11.0 or %ProgramFilesFolder%Vector CANalyzer 11.0

Property	Meaning	Default Value
VPRECOMPILE_QUEUE_LEVEL	Sets the queue priority that should be used when generating native images for .NET assemblies. ▶ 0 = use synchronous calls ▶ 1 = queue with highest priority ▶ 2 = queue with normal priority ▶ 3 = queue with low priority Note: The values 1, 2, 3 correspond to the values for the /queue parameter of the ngen utility	1
VPERFORM_PRECOMPILING	Enables or disables the creation of native images for .NET assemblies. ▶ 0 = disable creation ▶ 1 = enable creation It is strongly recommended to enable the creation of native images for the .NET assemblies to reduce start-up time of CANoe/CANalyzer significantly.	1
VISUSEDINUSA	Specifies if the application is used in the United States of America. ▶ 0 = application is not used in the USA ▶ 1 = application is used in the USA.	1
VDISABLESUFFIXFORAPPLICATIONDATAFOLDERS	Controls whether a suffix is added to the folders that contain application data (e.g. INI files or configuration templates). If no suffix is added, two parallel installations of the same main version will use the same settings files which can lead to conflicts. ▶ 0 = add suffix to folder name for application data folders	0

Property	Meaning	Default Value
	▶ 1 = do not add suffix to folder name for application data	



Note

- ▶ For correct execution of CANoe/CANalyzer it is important to keep the directory structure the same as defined in the installation package. Modifying this directory structure can lead to erroneous behavior which can lead to wrong simulation results.
- ▶ You **MUST NOT** change anything else than the public properties specified in the table above.
- ▶ Starting with Windows Vista, installing the application and user data in the system program folder (e.g. C:\Program Files) is not supported. If you install CANoe/CANalyzer in the system program directory (e.g. C:\Program Files\Vector CANoe 8.1), you **MUST NOT** set the value of the property **VAPPLICATION_AND_DATA_ROOT** to 3.

4.3.2 Transforms

Installing multiple instances of one product

The Vector CANoe/CANalyzer MSI setup does not enable you to install an arbitrary number of instances of the same product on one computer. However, a limited set of product codes is defined (refer to chapter [Instance Transforms for CANoe/CANalyzer](#)).



Important Note

Whenever you specify an instance ID to be used on installation, you also have to set the value of the property **MSINEWINSTANCE** to 1 (e.g. MSINEWINSTANCE=1 on command line), even if you install only one instance with a specific instance ID.

Otherwise you will encounter problems when updating the installation to a later service pack.

Those product codes can be used to install multiple versions of the product by using them for instance transformation.

Every product code can be used only for the application and variant it is delivered with – i.e. the [Instance Transforms for CANoe](#) lists product codes that are only valid for CANoe.

Be aware that you have to manage all subsequent operations on the product instance yourself. E.g. when installing multiple instances of Vector CANoe you need to take care to use the correct instance's product code when uninstalling one of them.



Note

When CANoe (or CANalyzer resp.) is installed using the graphical bootstrapper installation program (**SetupCANoe64.exe** / **SetupCANalyzer64.exe**), an instance transform is always applied. This implicitly isolates installations done by the bootstrapper installation program and installations done by deployment systems (using the MSI installer databases directly).

4.4 Sample Configurations

4.4.1 Customizable Properties

The following properties can be applied to **CANoe Sample Configurations / CANalyzer Sample Configurations** installation package for execution.

Property	Meaning	Default Value
INSTALLDIR	Absolute path where the sample configurations should be installed to.	C:\Users\Public\Documents\Vector\CANoe\Sample Configurations <ProductVersion> or C:\Users\Public\Documents\Vector\CANalyzer\Sample Configurations <ProductVersion>

4.4.2 CANoe Sample Configurations

CANoe v11.0 and Up

When CANoe 11.0 or newer is installed, you should install Vector CANoe Sample Configurations.

Installation Check

To verify if the Vector CANoe Sample Configurations is installed, check the products of the product family with the following upgrade code:

```
{D33E3FBE-2B3E-4CBE-B4D5-29C5ACE34A37}
```

The Vector CANoe Sample Configurations share the **ProductVersion** with Vector CANoe. Note that different versions of the CANoe Samples Configurations can be installed in parallel.

Installation

The Vector CANoe Sample Configurations is provided as a Windows Installer Package. You can install it using the package **CANoe_Samples.msi**.

Installable Features

The installation consists of following main features. All features can be (de)selected by the user:

- ▶ A429_CN
- ▶ ADAS_CN
- ▶ AFDX_CN
- ▶ CAN_CN
- ▶ CANaero_CN
- ▶ CANopen_CN
- ▶ CAR2X_CN

- ▶ Connectivity_CN
- ▶ Ethernet_CN
- ▶ FlexRay_CN
- ▶ For_EtherCAT_CN
- ▶ IO_HIL_CN
- ▶ ISO11783_CN
- ▶ J1587_CN
- ▶ J1939_CN
- ▶ LIN_CN
- ▶ Matlab_CN
- ▶ Medical_CN
- ▶ MOST_CN
- ▶ Programming_CN
- ▶ SC_CN
- ▶ SENSOR_CN
- ▶ SIL_CN
- ▶ SOA_CN
- ▶ XCP_AMD_CN

When performing a silent installation, specify the features to be installed with the ADDLOCAL property.



Beispiel

The following command installs only the sample configurations only for the bus systems CAN and Ethernet:

```
msiexec /i CANoe_Samples.msi ADDLOCAL=CAN_CN,Ethernet_CN /q
```

- ▶ For more information on the ADDLOCAL property, see <http://msdn.microsoft.com/en-us/library/aa367536%28v=vs.85%29.aspx>.

4.4.3 CANalyzer Sample Configurations

The CANalyzer Sample Configurations package contains the sample configurations for Vector CANalyzer.

CANalyzer v11.0 and Up

When CANalyzer 11.0 or newer is installed, you should install Vector CANalyzer Sample Configurations.

Installation Check

To verify if the Vector CANalyzer Sample Configurations is installed, check the products of the product family with the following upgrade code:

```
{3998B265-47E3-443C-8BE3-8CBCB2DE5B3D}
```

The Vector CANalyzer Sample Configurations share the **ProductVersion** with Vector CANalyzer. Note that different versions of the CANalyzer Samples Configurations can be installed in parallel.

Installation

The Vector CANalyzer Sample Configurations is provided as a Windows Installer Package. You can install it using the package **CANalyzer_Samples.msi**.

4.4.3.1 Installable Features

The installation consists of following main features. All features can be (de)selected by the user:

- ▶ A429_CL
- ▶ AFDX_CL
- ▶ CAN_CL
- ▶ CANaero_CL
- ▶ CANopen_CL
- ▶ CAR2X_CL
- ▶ Ethernet_CL
- ▶ FlexRay_CL
- ▶ IO_HIL_CL
- ▶ ISO11783_CL
- ▶ J1587_CL
- ▶ J1939_CL
- ▶ LIN_CL
- ▶ MOST_CL
- ▶ Programming_CL

When performing a silent installation, specify the features to be installed with the ADDLOCAL property.



Beispiel

The following command installs the sample configurations only for the bus systems CAN and LIN:

```
msiexec /i CANalyzer_Samples.msi ADDLOCAL=CAN_CL,LIN_CL /q
```

- ▶ For more information on the ADDLOCAL property, see <http://msdn.microsoft.com/en-us/library/aa367536%28v=vs.85%29.aspx>.

4.5 Further Installations

4.5.1 Silent Installation Examples

4.5.1.1 Install CANoe (64 Bit) and CANalyzer (64 Bit) on the Same Machine Silently

Installation sequence: **First CANoe (only program files), then CANalyzer (complete)**

Command Line Only

CANoe Installation	<code>msiexec /i CANoe64.msi /q</code>
CANalyzer Installation	Since the already installed CANoe is a different product, you do not have to install CANalyzer as a new instance using an instance transform. Instead, you can install CANalyzer the same way you did with CANoe: <pre>msiexec /i CANalyzer64.msi /q</pre> Of course, further properties can be set to customize the installation. Therefore, you can use the defined properties described in chapter Settings.
Examples	Setting the desired language to German: <pre>VPROGRAM_LANGUAGE=49</pre> Setting the installation directory: <pre>INSTALLDIR="C:\Programs\My Vector Folder\CANoe 11.0"</pre>  Note The various software deployment tools might provide different methods to enable the Windows Installer logging. To enable Windows Installer logging on the command line you can use the parameter <code>/l</code> with its various options, e.g. you can use <code>/l*v <log file path></code> to enable a verbose logging.

4.5.1.2 Install Several Instances of CANoe (64 Bit) on the Same Machine Silently

Installing several instances of CANoe might be necessary when multiple projects with different version requirements are developed.

Installation sequence: **First CANoe (only program files), then CANoe (complete)**

Command Line Only

CANoe Installation	<code>msiexec /i CANoe64.msi /q</code>
2nd CANoe	Since CANoe is already installed, a new instance has to be installed using an

Installation

instance transform:

```
msiexec /i CANoe64.msi TRANSFORMS=:InstanceId1.mst
MSINewInstance=1 /q
```

```
MSINewInstance=1
```

Specifies that a new instance will be installed. This property has to be set anytime an instance id transform is applied.

```
TRANSFORMS=:InstanceId1.mst;
```

Applies the embedded transform 'InstanceId1' for installing a new instance. Choosing 'InstanceId1.mst' will set the product code for your CANalyzer installation as specified in Setup.ini in the section [InstanceId1].

**Note**

All instance transforms (InstanceId1 ... InstanceId50) are embedded transforms, i.e. when selecting an instance transform set a ":" prior to the desired transform.

Creating an Own Transform (.mst) for the Command Line

For the examples above, the installation is executed on the command line setting various public properties. In case an own transform (.mst) should be created to install CANoe and/or CANalyzer you have to set the respective properties as shown for the command line. Therefore, create a transform for CANoe (e.g. MyCANoeTransform.mst) and one for CANalyzer (e.g. MyCANalyzerTransform.mst) and set the properties in the **Property** table. In case the respective property is not yet available in the 'Property' table, insert it and set the desired value.

**Note**

Property names are case sensitive.

4.5.1.3 Install Japanese Language Kit

After a silent CANoe installation as denoted in the previous examples, the Japanese Language Kit can be added as follows. Note that the patch will automatically find its target and requires neither product code nor installation path.

Command Line Only**CANoe Installation**

```
msiexec.exe /p CANoe_x64_JLK.msp REINSTALLMODE="omus"
REINSTALL="ALL" /q
```

4.5.1.4 Instance Transforms for CANoe / CANalyzer

Instance Transforms for CANoe

Name of Embedded Transform	Instance Product Code
:Instanceld1.mst	{43A36858-70FC-42DF-98FD-65424985508B}
:Instanceld2.mst	{98EAA151-D058-45EB-819E-47E0A0881817}
:Instanceld3.mst	{B02ACEEF-C0DA-46DA-9E20-8D4A9175A21B}
:Instanceld4.mst	{4370290E-B53D-48E4-A312-2FDAD24C0C80}
:Instanceld5.mst	{6C4A0CDD-F646-4944-A87D-9CA1CBFB98E0}
:Instanceld6.mst	{8E66BED6-D2F5-4CD0-80AC-3718E49FF25F}
:Instanceld7.mst	{67D77409-B45A-4561-85D4-13BBFE13DFF4}
:Instanceld8.mst	{2AEDBF1F-455C-4D54-A25C-081B3D51E2F9}
:Instanceld9.mst	{1810EFC A-2A64-45D5-8725-F1828C556995}
:Instanceld10.mst	{1A759E25-F492-4B9F-9035-93A3B935E6FB}
:Instanceld11.mst	{E7DE823C-2C75-4BD6-9966-386FFEFC8CAD}
:Instanceld12.mst	{13F53DCC-E90E-4AD8-8D62-7968AFA41751}
:Instanceld13.mst	{28C00D3F-016F-443F-BECF-7B6D33BB7427}
:Instanceld14.mst	{F85B6852-0BD9-485D-A4E6-3EACDB40450D}
:Instanceld15.mst	{884F4440-79EC-4DA2-AF14-F12775AE68FB}
:Instanceld16.mst	{8F36B105-AFAB-43E9-8E40-42FC73A654EF}
:Instanceld17.mst	{47289C8A-8E00-48C6-913B-5B3DA065141D}
:Instanceld18.mst	{635CC336-32A6-480A-B3E6-72B188DAD98C}
:Instanceld19.mst	{6F375990-98AC-4A06-9413-36D98CC98066}
:Instanceld20.mst	{1F352804-17F0-475C-85CD-22EDFD0D3E8F}
:Instanceld21.mst	{CA206B24-7359-4191-958B-333AAA28E3CB}
:Instanceld22.mst	{7F0A5258-02DB-4BDE-A402-5969DDE57C70}
:Instanceld23.mst	{1C0639A4-E83E-4AF5-B163-44FB9DF6CE70}
:Instanceld24.mst	{B55AF8F8-7196-4468-9EE6-512B5568277B}
:Instanceld25.mst	{81ADFD60-5CAE-4FBF-BBCE-989CE9AC6A88}
:Instanceld26.mst	{8F27A652-66FA-45D8-B3D4-E42A4B45A6E2}
:Instanceld27.mst	{852DED6C-FA7B-4C05-878D-6B80026FC05B}
:Instanceld28.mst	{E3B36478-22D8-44B6-A23E-59F75ECC2DCB}
:Instanceld29.mst	{8098C2E4-5759-4465-A522-FE9DF1C94255}
:Instanceld30.mst	{E2DC21F6-D293-4F20-8AE7-52DBDFFB624F}

Name of Embedded Transform	Instance Product Code
:Instanceld31.mst	{AE68B63C-D5B1-459A-BF1E-67282849DBD5}
:Instanceld32.mst	{30257CB0-4584-42EB-8318-CC1EC95DBF70}
:Instanceld33.mst	{FC679C59-4DA8-44A0-8595-A58273303B83}
:Instanceld34.mst	{43A1CA67-5D74-4457-86E2-7DD19A2B31C5}
:Instanceld35.mst	{F6910425-C886-4051-95B3-6D4E08ECE4D9}
:Instanceld36.mst	{8DADFB05-DD23-427A-BE9D-EDD35377B06F}
:Instanceld37.mst	{2C3F580B-49C7-44AE-82EF-1FD37918AC33}
:Instanceld38.mst	{444FD730-9F82-4B51-8746-2260C26ECB2A}
:Instanceld39.mst	{417C3401-ECEA-49BA-9766-BC97BB98D480}
:Instanceld40.mst	{A1087807-FC55-4E18-A550-886FA0DC9A7D}
:Instanceld41.mst	{77975FF2-0FCB-41ED-B617-F033C03B0571}
:Instanceld42.mst	{5234DC0B-B8C0-493F-A07D-E711F664C68E}
:Instanceld43.mst	{1992792F-DA58-4B87-82F9-3239CE0089E9}
:Instanceld44.mst	{3425108B-CBEE-4E22-9148-16B313A85107}
:Instanceld45.mst	{758EFE48-7B5F-4B20-B5F5-DC241020D856}
:Instanceld46.mst	{11D8EAD8-13B2-4703-96E9-CAE7547FF95C}
:Instanceld47.mst	{F38A53AC-3D28-479B-AB6D-22835B02A035}
:Instanceld48.mst	{06D27BBB-1A73-4164-AC91-E74C50645861}
:Instanceld49.mst	{2C584BF2-A6FF-4F7E-9EBD-27E1C70251FD}
:Instanceld50.mst	{BF01D41F-0AE7-4AB0-AD73-AE39E22D96F3}

Instance Transforms for CANoe Test Bench Edition

Name of Embedded Transform	Instance Product Code
:Instanceld1.mst	{670E42BA-89FA-4724-945E-4B2E85D194E8}
:Instanceld2.mst	{AF6F96DA-1E4A-4196-A8B5-148D3CD3A5B3}
:Instanceld3.mst	{F8C9468D-5E82-4FC2-AC04-6DBB91D41234}
:Instanceld4.mst	{D181F331-9053-44D8-B8F7-9511B8F66697}
:Instanceld5.mst	{677328C8-3CEF-4AE4-A079-64A5E6D2B86B}
:Instanceld6.mst	{1B1810B1-1743-41C6-8E78-62A657DD53F7}
:Instanceld7.mst	{91BBF57A-3BEE-4EA1-B60D-24B93319850D}
:Instanceld8.mst	{83FB035F-7CE5-48B8-8A89-747EFAC87095}
:Instanceld9.mst	{2A8ECE1D-EBBC-4B58-B52C-C69578346D00}
:Instanceld10.mst	{C1B17CFC-7F79-4C29-A212-8650CA3C3678}
:Instanceld11.mst	{1C4E3F2C-1F9F-4CB8-8A9C-FE090AD88CB6}

Name of Embedded Transform	Instance Product Code
:Instanceld12.mst	{6141D911-A9AB-4560-B219-554C3AE192F1}
:Instanceld13.mst	{34CF1DD8-DF07-43C3-AC2F-9D356B21A128}
:Instanceld14.mst	{E26B65B6-2DA8-4E6D-B332-A6F2CE6970CF}
:Instanceld15.mst	{C997CC15-F75A-4433-BFB1-54C2C7493CF2}
:Instanceld16.mst	{99B217AE-63EF-419D-862E-9B0395E5530D}
:Instanceld17.mst	{D6209AFD-DEA6-4325-8F23-0DE490F65B6B}
:Instanceld18.mst	{441A2EA8-F2C9-4310-B991-435972A47E56}
:Instanceld19.mst	{A6272461-BF24-43F7-817C-C0E037782A06}
:Instanceld20.mst	{3A7CBE36-E060-4733-994D-9D411EC037F1}
:Instanceld21.mst	{7E7194A1-2965-46C1-A550-CD805D408B9B}
:Instanceld22.mst	{FA227BDA-4FE8-4FE4-AB00-ECD792DB6BF7}
:Instanceld23.mst	{B600C572-6B59-4E42-9365-41F7698756D7}
:Instanceld24.mst	{68C5FE9C-C1DE-47BB-A4DE-6D291DC42F7B}
:Instanceld25.mst	{86A22407-89BA-4136-98AB-81787567B859}
:Instanceld26.mst	{45E551AC-BF30-4A9C-A70F-48CBF7957D30}
:Instanceld27.mst	{113F04E7-5D24-486E-8CE1-7CBC14BF601A}
:Instanceld28.mst	{DC56CC95-8AC6-4989-85B2-8E27DE5B45EF}
:Instanceld29.mst	{0DA0D8CA-198E-44F4-8CD3-98BD7BDC01E3}
:Instanceld30.mst	{3385CC60-A295-450B-89D2-A12E45A3C81E}
:Instanceld31.mst	{5B5704D6-2A9F-4EA1-9C86-6736FD6CE556}
:Instanceld32.mst	{23B7C98C-137F-44F5-9ED6-6DE900D13BF8}
:Instanceld33.mst	{9B6212D3-95A9-4C67-B34A-67181E58E02C}
:Instanceld34.mst	{EBFA74CE-0D01-428F-9A34-AEC7C497281B}
:Instanceld35.mst	{84647FE8-E79D-4B87-A502-2C5F62450E3D}
:Instanceld36.mst	{7FC35599-7ADA-4B67-80C4-18110E00F697}
:Instanceld37.mst	{A7BB9E32-D8C0-47D1-845F-A0BC3A6B836E}
:Instanceld38.mst	{DEC13CA6-504A-4972-B839-04C5D9DC9D95}
:Instanceld39.mst	{ABC4A25E-F873-4D8B-937D-7D5E7B28D472}
:Instanceld40.mst	{A98CB1A7-80B0-47B8-ACA1-71AABAA38D66}
:Instanceld41.mst	{6374B790-A7AD-4415-B148-F631F4B58693}
:Instanceld42.mst	{3FE692CF-B3A5-4407-8AE3-FCFCC2A94A5A}
:Instanceld43.mst	{B25CDA08-6D64-41CA-88D8-619C587B9EAE}
:Instanceld44.mst	{F601911C-6DD8-4021-82AF-EF9FCCA700BB}
:Instanceld45.mst	{45C6C548-B1CB-453C-9BEE-333C5642D598}

Name of Embedded Transform	Instance Product Code
:Instanceld46.mst	{B6D5C976-F35F-4C92-9C35-46C58AF525F1}
:Instanceld47.mst	{08DDBE17-5AE9-499F-8C5C-537D5E84CBB4}
:Instanceld48.mst	{A10EF488-CE3E-4DDF-85A7-23AE4485EA8A}
:Instanceld49.mst	{EB59D505-FD68-4285-9576-6CA2897F67AC}
:Instanceld50.mst	{7C198657-4CE5-460E-8713-712652435863}

Instance Transforms for CANalyzer

Name of Embedded Transform	Instance Product Code
:Instanceld1.mst	{246EEA9C-122A-4B3E-B5FA-9BB645EE415A}
:Instanceld2.mst	{C08EFCBF-6C00-4104-9CE9-B1FC30B3A4D7}
:Instanceld3.mst	{F80EB9F7-EB30-4810-A3F9-ACE9B0BCB00D}
:Instanceld4.mst	{3687730B-AAD2-4EB3-AA32-CD7B95161EF3}
:Instanceld5.mst	{EC8A980E-4AE5-4989-A523-1234A1228982}
:Instanceld6.mst	{04185F44-E5C9-4A75-8984-265D4F24B9C8}
:Instanceld7.mst	{74A5DB6B-E969-4EC3-A8AF-E47E5434BF0A}
:Instanceld8.mst	{F2E516A5-6BB8-42B2-9EFC-65E60DB43CD6}
:Instanceld9.mst	{2285544E-6256-4125-AF48-3022445FF7A9}
:Instanceld10.mst	{C1B1C0B6-DF3D-4E36-97DB-514DA01D1A96}
:Instanceld11.mst	{05413EDE-83AF-45CA-B6D6-8EE2B58C0C27}
:Instanceld12.mst	{64870181-8FD3-40A9-B070-A5A8F5127A87}
:Instanceld13.mst	{6A4B910F-39A9-41F1-ABC3-3340F272AF18}
:Instanceld14.mst	{4F298949-DB66-42BE-BD03-2FCB09919233}
:Instanceld15.mst	{E1B44C13-B400-47D5-AD27-A8F77910A5AE}
:Instanceld16.mst	{547538F0-3731-4C70-83EB-74183373BDF5}
:Instanceld17.mst	{3143B200-ACBF-47CB-9CE6-C2F4CF980F44}
:Instanceld18.mst	{C2A924D9-F0D1-4B7E-AE3F-079267BFF9A9}
:Instanceld19.mst	{8F709EFB-E300-4221-A5A4-053AA4FDDC78}
:Instanceld20.mst	{B53E21B9-4761-4436-8634-22C2DE7A7FB4}
:Instanceld21.mst	{48EF74DA-CD6A-4A78-979A-165815112EF4}
:Instanceld22.mst	{0F3CFF41-68C5-42EB-B4EC-4FB2C4442517}
:Instanceld23.mst	{A79E0BE3-3DBF-4837-9969-DC8036DB0E08}
:Instanceld24.mst	{3ADEA9D7-DE46-48CE-A8F6-BA41AB41798A}
:Instanceld25.mst	{E33B4E79-B571-4FD0-A126-9727CB031CD1}
:Instanceld26.mst	{6C3F5C77-4123-4E27-82F7-E1AD0E9D2D59}

Name of Embedded Transform	Instance Product Code
:Instanceld27.mst	{671C013E-6ABA-4EB9-976B-572AB96EFD83}
:Instanceld28.mst	{C7306E8D-FE4E-4D84-A7B6-0CE2B62A5D74}
:Instanceld29.mst	{EDB1CFA6-90E8-4432-89C2-6E4A1DCEF815}
:Instanceld30.mst	{E20670EC-00CA-4A4B-AD41-C6F813ADE40E}
:Instanceld31.mst	{3BC9B350-C44D-48C8-8C29-383299915BB9}
:Instanceld32.mst	{3A614A5C-B77D-4C55-AB49-DC42BD5B5FEC}
:Instanceld33.mst	{D09FE2AA-FCCA-4B77-9DFB-B14AD8731BC4}
:Instanceld34.mst	{DDED953B-1AE3-40E3-AACF-84751669DD11}
:Instanceld35.mst	{9B404110-C835-49DB-A190-4FC00F57B6F7}
:Instanceld36.mst	{0E47FE8F-52BF-40C4-8E89-8F421E597D3F}
:Instanceld37.mst	{5A125EED-4E5C-4F86-A3D3-69A9A39862E7}
:Instanceld38.mst	{0CA88AC9-1764-4421-A88C-DFC10978E11B}
:Instanceld39.mst	{6379C71A-BC02-40A6-AD5A-65E7C6E22EC1}
:Instanceld40.mst	{9B33DEFB-6E42-4F4A-B0E6-C66BFD13C6BF}
:Instanceld41.mst	{6215672E-6F20-4ECF-B728-A7A103890C0C}
:Instanceld42.mst	{F156BB16-E913-4856-B7F8-A13A56086336}
:Instanceld43.mst	{A34D78E0-58E6-45FA-B977-C024E1784B7B}
:Instanceld44.mst	{8F0F0C1D-68C3-4D62-90BE-4B18B01EF38F}
:Instanceld45.mst	{916CFB3E-2D4F-4BB5-A21D-A362E3EDCF16}
:Instanceld46.mst	{786048F0-1E80-4300-976C-EB98AFF66A29}
:Instanceld47.mst	{9BD29270-4561-4557-BF10-5C0309C167CB}
:Instanceld48.mst	{7E6CB19F-EF51-42BD-AAD5-D684C98DC87B}
:Instanceld49.mst	{C07BA6AC-F234-4340-A668-665A298D90B6}
:Instanceld50.mst	{DF8E18CD-B074-407C-8267-A4E28E5E3E6D}

Instance Transforms for CANalyzer Test Bench Edition

Name of Embedded Transform	Instance Product Code
:Instanceld1.mst	{D0B1C813-D745-476F-A29D-DF53A7BFA8DB}
:Instanceld2.mst	{4C08BD3B-E7E7-470D-AD33-10CA74C3078D}
:Instanceld3.mst	{79163E6D-36E7-4023-A8DA-9427004912C8}
:Instanceld4.mst	{6F73C9DD-9F6C-4514-A8AA-DEE32B708755}
:Instanceld5.mst	{9F29B3B1-EB0B-4881-9E77-4AC0A8FE27F0}
:Instanceld6.mst	{358D183A-2D6B-4C53-AA10-2DD28AA1FB5F}
:Instanceld7.mst	{4821B5E6-F7C8-4976-B676-CB1595A081A8}

Name of Embedded Transform	Instance Product Code
:Instanceld8.mst	{7D331207-A51C-4DC7-9A19-BD4768327AAB}
:Instanceld9.mst	{424508F1-ACB9-4AE8-8811-0F7751B0F21C}
:Instanceld10.mst	{22475F92-4837-4604-841C-82A0F7A83313}
:Instanceld11.mst	{61F7B6B7-725A-4953-8477-3428C5F76166}
:Instanceld12.mst	{E02E4944-0B7A-4E70-80BD-6C927A8A0254}
:Instanceld13.mst	{BAB9ED7C-33B1-489E-99BA-72EF745B0E11}
:Instanceld14.mst	{0555152A-EE0A-4620-97C1-BACE56F01B28}
:Instanceld15.mst	{D6C098B2-F2FE-4C08-8651-3E1DD90C8676}
:Instanceld16.mst	{15285246-14AB-4DD0-A761-F63ADDAB3483}
:Instanceld17.mst	{FB836055-28A8-40D3-80E5-E871A6D16463}
:Instanceld18.mst	{11574CB5-0371-4628-BE1F-88F6465C3267}
:Instanceld19.mst	{00A41897-F947-4097-AAB7-17A1641C3774}
:Instanceld20.mst	{3EDC2E8D-B40A-47A0-A8EE-8362FDD51A68}
:Instanceld21.mst	{F1128E60-C6E9-4C99-A909-5B802241D694}
:Instanceld22.mst	{6DB32B66-064C-45C5-8969-BD1F35E95861}
:Instanceld23.mst	{D9FD196D-A6AF-428E-92E7-B94B96088266}
:Instanceld24.mst	{0BB5861E-4215-443A-AC52-D7C38A44184B}
:Instanceld25.mst	{23234E85-AD7C-4F6F-B79E-3DB2756C8062}
:Instanceld26.mst	{DE99594E-3617-464C-8CD4-4C060EAF2403}
:Instanceld27.mst	{8ADB9EDB-DD0A-4B39-A074-F1987ECF42F1}
:Instanceld28.mst	{36F91C98-510A-4075-96A1-4ECE8BCE7A6A}
:Instanceld29.mst	{0AA8C3D8-9AB6-40B8-9482-A48694521AC8}
:Instanceld30.mst	{8B793301-F773-4C18-8E59-46090B759C49}
:Instanceld31.mst	{9D3184E5-A1CA-4079-832F-D38F5886F808}
:Instanceld32.mst	{CF98523D-C907-462B-B42E-E4084F75F55D}
:Instanceld33.mst	{6C799F32-9DC5-41C1-A90B-607788034059}
:Instanceld34.mst	{751CE335-3142-4686-B6A3-30D679810951}
:Instanceld35.mst	{A505EEEE-3741-44FD-ABDD-44990861D63A}
:Instanceld36.mst	{A9CDCA71-57A6-4EE5-9FFE-29030857E419}
:Instanceld37.mst	{EB72EDCE-4A2B-46B4-B16C-D065981548F0}
:Instanceld38.mst	{3BD5D4AB-9007-455A-B22F-B10A5AD30DDB}
:Instanceld39.mst	{02856C98-5C0C-4DE7-ABC6-EC1C2D2F26D9}
:Instanceld40.mst	{699AB7EC-5D64-435F-B67B-8F836FB42400}
:Instanceld41.mst	{164E740D-1058-4263-B1D8-5A45D4C28F8E}

Name of Embedded Transform	Instance Product Code
:InstanceId42.mst	{38A87A5B-E021-41C4-B51F-6DC655F04E98}
:InstanceId43.mst	{E85FEEE6-FAE0-4879-B5F8-8CFAC6D63122}
:InstanceId44.mst	{325F2F0C-FB2B-48D7-981C-0B7ADAF33F3E}
:InstanceId45.mst	{02498B9C-E242-4342-8B83-B3F445E57F72}
:InstanceId46.mst	{A9195828-E884-4CF2-AB00-E3FA699DE0B2}
:InstanceId47.mst	{F4F2A7CD-E8EB-443F-B3D4-7B5A7A0118EE}
:InstanceId48.mst	{8CBA916F-BC13-436D-9CF9-8561460F5E2B}
:InstanceId49.mst	{BFF615FD-42FF-443B-89AA-46EF0A78737E}
:InstanceId50.mst	{FB8F4869-CCA2-465F-B1DC-C555E3409D42}

4.5.2 Service Pack Installation

4.5.2.1 Prerequisites

A service pack installation can only be executed if a CANoe/CANalyzer of the same main version, but lower SP level is already installed. Otherwise a full installation has to be done.

The service pack installation is compressed as a self-extracting executable when downloaded from the web. In case you want to run the installation interactively, just start the executable. Otherwise (e.g. for silent installation or deployment) load the executable in a ZIP utility (e.g. WinZip or 7-Zip) and extract the contents first.

4.5.2.2 Silent Update

For a silent update the following parameters have to be set at the command line:

```
msiexec /i CANoe64.msi REINSTALLMODE=vomus REINSTALL=ALL IS_MINOR_UPGRADE=1 /q
```

In case multiple instances are installed on the machine, you can specify the instance to be updated by adding the parameter `/n {Product-Code}`.



Note

- ▶ Be sure to use the correct installation database to update the installed product. Use **CANoe64.msi** to update a CANoe installation, **CANalyzer64.msi** to update a CANalyzer installation.
- ▶ The parameter `(/n {Product-Code})` **must not be set**, in case you want to update a CANoe/CANalyzer installation which was installed using the base product code. The base product code is defined in the file **Setup.ini** in the section **[Startup]** table **Instance Transforms for vVIRTUALtarget**.

Please make sure to remove any existing patches before updating.



Beispiel

To remove the Japanese Language Kit from the first CANoe installation on the system, call

```
msiexec.exe /uninstall {59E4A509-C975-46E7-A8C5-AD4C29D28230}
/package {CBBBC2B9-E02F-4720-AA0B-3F3C6F9F13FD}
```

4.5.3 Special (Traceable) Product Codes for Software Deployment

When the CANoe/CANalyzer installation is deployed using a software deployment system, it might be a requirement to map a unique product code to a concrete installation in order to identify and maintain this installation. Due to the architecture of the current installation package, this mapping does not happen automatically.

When it is required to use unique product codes to identify different CANoe/CANalyzer installations (e.g. they may differ in matter of service pack level), you can use the following special product codes / product instance transforms.

You can then e.g. use **:Instanceld51.mst .. :Instanceld60.mst** for CANoe/CANalyzer (e.g. **:Instanceld51.mst** for main version, **:Instanceld52.mst** for service pack 2, ...) deployments.

Note that these special product code instances will not be used when the installation is performed interactively (by starting setup.exe).

Instance transforms for CANoe 64 Bit

Special instance transforms for CANoe 64 bit variant installation:

Name of Embedded Transform	Instance Product Code
:Instanceld51.mst	{C740640F-4F7A-4723-A144-701FC570781E}
:Instanceld52.mst	{C6475808-C15F-462B-8D12-BE463F1FD11A}
:Instanceld53.mst	{AA4E50CC-A1B7-4DF3-9060-EEDCEE068C80}
:Instanceld54.mst	{B3578563-5F71-4F5F-9352-3E12E5F08172}
:Instanceld55.mst	{BB531117-2B38-4BCC-A09F-C2E6FBA0154C}
:Instanceld56.mst	{CD4B0693-0322-41D2-8EAB-9BFA38D5ED4B}
:Instanceld57.mst	{11ED5FEB-12DF-4F19-9069-E8C6BBDC7464}
:Instanceld58.mst	{D9F898EF-A8CE-4C59-9E4B-0B3529E7E844}
:Instanceld59.mst	{544AC8C8-DBAC-45D4-8FCA-966DAFAFAA16}
:Instanceld60.mst	{C8E3BF42-1F5A-4C3B-83D5-8C7C1003E643}

Instance Transforms for CANoe Test Bench Edition

Special instance transforms for CANoe Test Bench Edition installation:

Name of Embedded Transform	Instance Product Code
:Instanceld51.mst	{A2D0D688-106C-473B-9A0F-D0AEF72788FF}
:Instanceld52.mst	{8702FF1F-FBB3-4B39-B19C-6A4D642AE3DB}
:Instanceld53.mst	{AF2A0C22-50E8-4409-B92B-4642C37A260A}
:Instanceld54.mst	{15E2291C-6613-499D-B27D-25CE8A8BEB3}

Name of Embedded Transform	Instance Product Code
:Instanceld55.mst	{3A44F6EC-7340-48A1-BB02-9B6C0FE8813D}
:Instanceld56.mst	{13B3CF2A-4F5F-4828-A45D-AA74EBB9F543}
:Instanceld57.mst	{F1CD38B8-3BF6-4DC0-AB02-FF67EEBD7003}
:Instanceld58.mst	{BC1F5EF1-F626-4356-8E7D-E54D5C3D6BDA}
:Instanceld59.mst	{5F72905F-CC96-42DF-9588-F175161F6399}
:Instanceld60.mst	{645E1D9B-E3F5-48FF-8E44-182E78DACD7D}

Instance Transforms for CANalyzer 64 Bit

Special instance transforms for CANalyzer 64 bit variant installation:

Name of Embedded Transform	Instance Product Code
:Instanceld51.mst	{0772EFDC-D240-4160-B567-B81EC87A4FF1}
:Instanceld52.mst	{8308129B-4D6B-419D-B276-C6250F6AC311}
:Instanceld53.mst	{263952EE-8592-4D00-ABC8-AD55B479424A}
:Instanceld54.mst	{17B7C4E8-F92E-42C0-8A03-41F4DEE3D8D3}
:Instanceld55.mst	{9BA5A50D-5774-4ACD-A1E8-5B8D7CD7E8D8}
:Instanceld56.mst	{5E45D4C2-D28E-494C-808E-487A1761B8C0}
:Instanceld57.mst	{56CA12DB-9AEE-4CB5-ADE0-1EA863235C59}
:Instanceld58.mst	{678017F7-1062-458F-A4E1-D10A6D61A8F3}
:Instanceld59.mst	{330B59CD-F34E-4340-B8D2-D90DD3A3D0DF}
:Instanceld60.mst	{0E75BB5D-9744-4843-965C-2FC5750A4FF5}

Instance Transforms for CANalyzer Test Bench Edition

Special instance transforms for CANalyzer Test Bench Edition installation:

Name of Embedded Transform	Instance Product Code
:Instanceld51.mst	{3D7277C1-E56C-440D-BD75-593539612C1D}
:Instanceld52.mst	{8A1B58F2-ADCA-4725-9C6E-4EDE2BC8477D}
:Instanceld53.mst	{03F9E860-A967-429B-9D2C-8D65A521609D}
:Instanceld54.mst	{E6582D2E-05CD-4AE6-AD11-2401085F17DE}
:Instanceld55.mst	{3D120B5F-BB40-4ABC-8952-2E83D5DD37EE}
:Instanceld56.mst	{053538D5-9292-4EDE-81BF-97BB52B33123}
:Instanceld57.mst	{A4E486B6-E54F-4842-8EE0-1DDCF2B0C358}
:Instanceld58.mst	{290C051A-4D01-43DD-888C-6D680BFE0B3C}
:Instanceld59.mst	{F2C11BE9-F0CA-4933-9A17-D6707187C3F7}
:Instanceld60.mst	{E7C92D90-9D87-499A-8AB4-94386BCF9872}

4.5.4 Interactive Installation using Bootstrapper

When the installation is executed in interactive mode by running the bootstrapper application (setup.exe), the installation of a prerequisite can be prevented. When an installation package is deleted from the **Files** directory, it will not be installed.

**Note**

You will delete prerequisites at your own risk. Important prerequisites for CANoe/CANalyzer can be lost, which may cause malfunction of CANoe/CANalyzer.

4.5.5 Hardware Installation

The drivers for Vector network interfaces are not installed via the Windows Installer setup. At the moment there are no Windows Installer installations available for Vector hardware drivers. You have to ensure that the drivers for the used Vector hardware are installed on the target machines.

5 Bootstrapper Setup

In this chapter you find the following information:

5.1 Bootstrapper Setup at a Glance	62
5.2 Installation Program User Interface	62
5.2.1 Overview of the Installation Program	62
5.2.2 Groups in the User Interface	63
5.2.3 Customizable Settings	64
5.2.4 Predefine Settings	64
5.3 Advanced Features	67
5.3.1 Command Line Parameters	67
5.3.2 Working with Definition Files	68
5.3.3 Working with User Settings Files	69
5.3.4 Hints on Instance Transforms of CANoe and CANalyzer	71
5.3.5 Prevent Installation/Update of CANdela Studio	71
5.3.6 Prevent Installation/Update of ODX Studio	72
5.3.7 Interactive Installation Using Bootstrapper	72
5.3.8 Hardware Installation	72

5.1 Bootstrapper Setup at a Glance

This chapter provides an installation guide for IT departments that want to install Vector CANoe/CANalyzer silently on target machines using the proprietary setup bootstrapper of Vector CANoe/CANalyzer. For information on how to deploy silently on target machines using software deployment systems, refer to the chapter **MSI Setup**.

It is assumed that the reader is familiar with the Windows Installer technology.

After depicting the necessary Setup Prerequisites (refer to chapter **Installation Program User Interface**), this chapter explains how the public properties of the installer can be configured in order to install the required application components and how embedded transforms can be used to setup CANoe and CANalyzer alongside on the same machine.

This chapter applies to CANoe/CANalyzer version 11.0 and up. For an updated version of this document please always check the documentation that came with your product before packaging the application as some items mentioned here are version dependent (e.g. updated installation prerequisites).

Roaming user profiles

Roaming user profiles are not supported by CANoe/CANalyzer. It is highly recommended to execute the installation on local user profiles only. Usage of roaming profiles may lead to:


- ▶ Inconsistencies of installations, including prerequisites
- ▶ Malfunction of future CANoe/CANalyzer updates

5.2 Installation Program User Interface

5.2.1 Overview of the Installation Program

When the installation program is started, it will present a grouped list of applications which can be installed. The application group will be expanded (see picture below).

When the installation program is started, it analyzes the current computer's state and sets the installation action (for each item) to the recommended value. The installation action can be changed for any particular item or for a whole group of items. However, the installation can be performed with default settings by just continuing with **[Next]**.

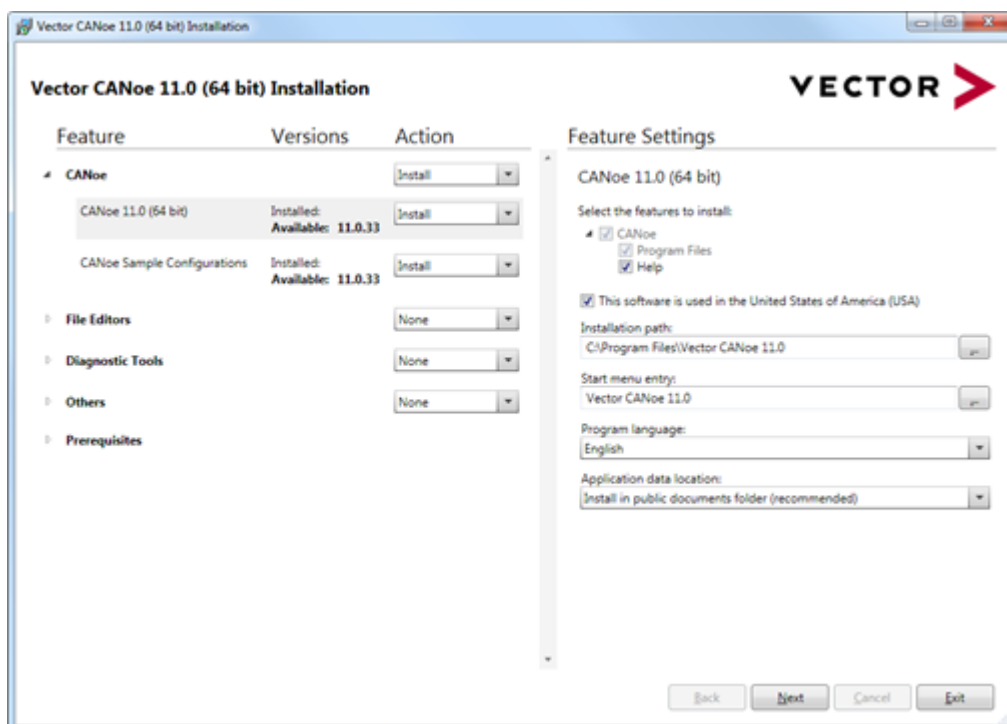

5.2.2 Groups in the User Interface

The installation items are categorized as groups as stated in chapter [Overview](#) above. The main contents of the groups will be listed in the following sections.

Group	Description
CANoe (CANalyzer)	The group "CANoe" ("CANalyzer" in a CANalyzer installation user interface) contains the main items of the application. It consists of the application itself and the sample configurations.
File Editors	This group contains editing tools provided by Vector for file formats like e.g. AUTOSAR XML, LDF or FIBEX.
Diagnostic Tools	This group contains Vector's diagnostic tools like CANdela Studio and ODX Studio which are bundled with CANoe (CANalyzer resp.). Note that additional licenses might be required to enable the full functionality of these tools.
Others	This group contains different tools or products which provide additional functionality when working with CANoe/CANalyzer.
Prerequisites	Several prerequisites must be met in order to install and/or use CANoe/CANalyzer. Those prerequisites are listed in this group and cannot be deselected from installation.

5.2.3 Customizable Settings

Customizable settings

When an installation item is selected in the list, you can customize the settings for this installation item in the detail view on the right.



Note

The availability of customizable settings depends on the selected installation action and the availability of settings defined by the installation item.

Input validation



Note

The value of settings is validated when you enter them. A validation error is presented by an exclamation mark to the left of the value and a red border around the value.

Add-on Packages

Add-on packages, e.g. patches, may be available to extend an application. If available, they can be configured as part of the application's feature settings.

If the application is already installed, add-on packages can be installed or uninstalled using the **Modify** option of the application.

5.2.4 Predefine Settings

It is possible to predefine values for installation settings which will be applied during installation. To predefine installation settings, follow the procedure below.



Step by Step Procedure

1. Create an XML as shown in the sample below.
2. Save it in the following path, where <username> is the login name of the logged-in user:
 - ▶ C:\Users\<username>\AppData\Local\Vector\CANoe Installation\UserSettings.xml (for CANoe installations)
 - ▶ C:\Users\<username>\AppData\Local\Vector\CANalyzer Installation\UserSettings.xml (for CANalyzer installations)

Note: When you start the installation program in the SYSTEM context (e.g. by using tools like SysInternals' psexec), the XML file should be saved under the following path:

 - ▶ C:\Windows\System32\config\systemprofile\AppData\Local\Vector\CANoe Installation\UserSettings.xml (for CANoe installations)
 - ▶ C:\Windows\System32\config\systemprofile\AppData\Local\Vector\CANalyzer Installation\UserSettings.xml (for CANalyzer installations)
3. Alternatively to saving the XML file in a predefined path, you can start the installation program with the corresponding parameter to specify the path to a user settings XML file (refer to chapter [Command Line Parameters](#)).



Example

Installing CANoe (64 bit) and the CANoe sample configurations to a different installation directory using **UserSettings.xml** file:

```
<?xml version="1.0" encoding="utf-8"?>

<UserPropertySettings xmlns:xsi="http://www.w3.org/2001/XMLSchema-
instance" xmlns:xsd="http://www.w3.org/2001/XMLSchema">

  <Programs>

    <!-- set installation path and start menu directory for CANoe (64
bit) -->

    <UserPropertyList PackageGuid="2d2d758a-571d-4239-ba27-
ceca9435a110">

      <UserPropertyValues>

        <UserProperty>

          <Name>INSTALLDIR</Name>

          <Value>[ProgramFiles64Folder]\Vector Tools\CANoe
11.0</Value>

        </UserProperty>

        <UserProperty>

          <Name>VSTART_MENU_FOLDER</Name>

          <Value>Vector Tools\Vector CANoe 11.0</Value>

        </UserProperty>

      </UserPropertyValues>

    </UserPropertyList>

    <!-- set installation path for CANoe sample configurations -->

    <UserPropertyList PackageGuid="2c7971bb-03c5-4a14-a217-
884bfb04145d">

      <UserPropertyValues>

        <UserProperty>

          <Name>INSTALLDIR</Name>

          <Value>C:\Users\Public\Documents\Vector Tools\Vector CANoe
Sample Configurations[ProductVersion]</Value>

        </UserProperty>

      </UserPropertyValues>

    </UserPropertyList>

  </Programs>

</UserPropertySettings>
```

Consequences in installation program user interface

When you predefine values for properties which can be changed in the installation program user interface (e.g. installation path), these values will be visible to the user and can still be changed.

When you predefine values for properties which cannot be changed in the installation program user interface, these changes will neither be visible to the user nor can they be changed by the user.

Supported variable values

Some variable identifiers can be used to specify that they should be replaced with the value of the variable on the executing computer. A reference of possible values can be found in chapter [Appendix C: Variables Supported in User Settings](#).

PackageGuid values

The product to which the specified settings apply is defined using the PackageGuid value. A reference of possible values can be found in chapter [Appendix C: PackageGuid Values](#).

Further Properties

Of course, further properties can be set to customize the installation. You can refer to the corresponding documentation of the desired installation item to know which properties can be set.



Example: Setting the desired language to German.

```
<!-- program language for CANoe (64 bit) to German -->
<UserPropertyList PackageGuid="2d2d758a-571d-4239-ba27-
ceca9435a110">
  <UserPropertyValues>
    ...
    <UserProperty>
      <Name>VPROGRAM_LANGUAGE</Name>
      <Value>49</Value>
    </UserProperty>
    ...
  </UserPropertyValues>
</UserPropertyList>
```

Control installation action

You can control the installation action with special properties defined in the user settings XML file. These properties are also defined in chapter [Appendix C: Properties that Control the Installation Action](#) or [Appendix B: MSI](#).

5.3 Advanced Features

5.3.1 Command Line Parameters

The installation program can be started using following command line parameters:

```
SetupCANoe.exe [/passive|/noGui|/createDefinition <file
path>|/createUserSettings <file path> [/ignoreSystemState]]
                [/noReboot]
                [/userSettings <file path>]
                [/expert]
                [/definitionFile <file path>]
```

Parameter	Description
/passive	Starts the installation program with passive user interface. The recommended actions are set dependent on the current computer's state and the installation is started without user interaction. Note: The installation can still be canceled in the user interface.
/noGui	Starts the installation program without any user interface. The recommended actions are set dependent on the current computer's state and the installation is started without user interaction.
/noReboot	Forces the installation program to suppress any reboots.
/userSettings <file path>	Starts the installation program and sets an explicit path to a user settings file (refer to chapter Predefine Settings).
/expert	Starts the installation program with additional user interface features. Currently this is for support issues only.
/createDefinition <file path>	Starts the installation program with normal user interface to allow you to create a definition file which can be used in later installations. For details refer to chapter Working With Definition Files . Please note that the usage of definition files is deprecated beginning with version 12.0. Consider user settings files as alternative.
/definitionFile <file path>	Starts the installation program and uses a definition file you created before. For details refer to chapter Working With Definition Files . Please note that the usage of definition files is deprecated beginning with version 12.0. Consider user settings files as alternative.

/noAlternatePaths	By default, alternative installation paths are computed when the specified ones (either the default values or values defined in a user settings file) already exist. By using this switch, the computation of alternative paths is disabled. If the specified paths already exist, a validation error might be shown in the installation program. Note that this parameter does only affect paths which may be set in the user interface of the installation program. If similar computations exist for paths that cannot directly be manipulated in the installation program, there might be properties valid for the affected installation databases (as is the case with CANoe and CANalyzer).
/createUserSettings <file path>	Starts the installation program in a way that lets you define a user settings file. For details refer to chapter Working with User Settings Files .
/ignoreSystemState	Can be used in combination with /createUserSettings . This allows you to create settings which are independent of the current system's state. For details refer to chapter Working with User Settings Files .
/disableFilesInUseHandling	Can be used to disable the handling of "Files in Use" situations of the installation program. Should only be set to solve problems that occur otherwise.

5.3.2 Working with Definition Files



Note

The usage of definition files is deprecated beginning with version 12.0. You should instead use **user settings files**.

Definition files

It is possible to create a definition file on a reference computer and apply the settings from the reference file when executing the installation program at a later time.

Create definition file on reference computer

To create a definition file, start the installation program with the parameter **/createDefinition** and specify a path where the definition file should be saved, e.g.:

```
SetupCANoe64.exe /createDefinition
D:\Admin\VectorCANoe\CANoe64Definition.xml
```

The installation program's user interface is started where you can select the desired options, e.g. you can set the installation action for CANdelaStudio to **None** or you can set the installation path for CANoe to `C:\Vector Tools\Vector CANoe 11.0`.

Click **[Next]** to see the summary. Click **[Create]** to create the definition file under the specified path.

You can choose between following installation options:

- ▶ **Install:** The program is only installed if it is not already present on the target computer. If an older version of the program is already installed, it will not be updated.
- ▶ **Update:** The program is only updated if it is already present on the target computer in an older version. If no older version is installed, the program will not be installed.

- **Install / Update:** The program will be installed (if it is not already present) or updated (if an older version is already present). This option will always lead to the program being installed in the latest version.
- **Uninstall:** The program will be uninstalled.

Start installation program with definition file

To use an existing definition file, start the installation program with the parameter `/definitionFile/userSettings` and specify the path where the definition file is located, e.g:

```
SetupCANoe64.exe /definitionFile
```

```
D:\Admin\VectorCANoe\CANoe64Definition.xml
```

The installation program will start with normal user interface and reflect the settings which are defined in the definition file.



Note

If the state of the computer on which the installation program is started via a definition file differs from the state of the (reference) computer at the time the definition was created, there may be deviations from the desired settings, e.g.:

- An item selected for installation is not installed if there is already a newer version on the computer.
- An item selected for installation is updated if there is already an earlier version on the computer that can be updated

5.3.3 Working with User Settings Files

User settings files

It is possible to create a user settings file on any reference computer and apply the settings from the user settings file when executing the installation program at a later time. Unlike definition files, user settings files do not need the target computer to be in the same state as the reference computer was when the user settings file was created.

Create user settings file on reference computer

To create a user settings file, start the installation program with the parameter `/createUserSettings` and specify a path where the definition file should be saved, e.g.:

```
SetupCANoe64.exe /createUserSettings
```

```
D:\Admin\VectorCANoe\CANoe64Settings.xml
```

You should also specify the parameter `/ignoreSystemState` so that the state of the reference computer is ignored:

```
SetupCANoe64.exe /createUserSettings
```

```
D:\Admin\VectorCANoe\CANoe64Settings.xml /ignoreSystemState
```

The installation program's user interface is started where you can select the desired options, e.g. you can set the installation action for **CANdelaStudio** to **None** or you can set the installation path for **CANoe** to `C:\Vector Tools\Vector CANoe 12.0`.

Click **[Next]** to see the summary. Click **[Create]** to create the definition file under the specified path.

You can choose between following installation options:

- ▶ **Install:** The program is only installed if it is not already present on the target computer. If an older version of the program is already installed, it will not be updated.
- ▶ **Modify:** An existing installation of the program is modified. This is used to configure add-on packages (see below).
- ▶ **Update:** The program is only updated if it is already present on the target computer in an older version. If no older version is installed, the program will not be installed.
- ▶ **Install / Update:** The program will be installed (if it is not already present) or updated (if an older version is already present). This option will always lead to the program being installed in the latest version.
- ▶ **Uninstall:** The program will be uninstalled.

For add-on packages (e.g. Japanese Language Kit), the following installation options are available:

- ▶ **Install:** The package is installed if it is not already present for the target installation (only valid if the main product is set to **Install** or **Modify**).
- ▶ **Update:** Older versions of the package are removed and the recent one is installed (only valid if the main product is set to **Update**).
- ▶ **Uninstall:** The package will be uninstalled (only valid if the main product is set to **Update** or **Modify**).

Start installation program with user settings file

To use an existing user settings file, start the installation program with the parameter /userSettings and specify the path where the definition file is located, e.g:

```
SetupCANoe64.exe /userSettings
```

```
D:\Admin\VectorCANoe\CANoe64Settings.xml
```

The installation program will start with normal user interface and reflect the settings which are defined in the user settings file.

To start a silent installation with the user settings applied:

```
SetupCANoe64.exe /userSettings
```

```
D:\Admin\VectorCANoe\CANoe64Settings.xml /nogui /noreboot
```

Specifying instance transforms to be used

Although the graphical installation program provides no possibility to define an instance transform which should be used (for installation / uninstallation), it can be defined in the user settings file.

To use the instance transform 50 (with GUID 77d1c088-6c2e-48bc-a84e-1970a8c26c51) when installing CANoe, specify the following user settings for CANoe:

...

```
<UserProperty>
<Name>&lt;InstallationOption&gt;</Name>
<Value>Install</Value>
</UserProperty>
<UserProperty>
<Name>&lt;InstallationInstance&gt;</Name>
<Value>77d1c088-6c2e-48bc-a84e-1970a8c26c51</Value>
</UserProperty>
```

...

To uninstall the installation with instance transform 50, specify the following user settings for CANoe:

```
...
<UserProperty>
<Name>&lt;InstallationOption&gt;</Name>
<Value>Uninstall</Value>
</UserProperty>
<UserProperty>
<Name>&lt;InstallationInstance&gt;</Name>
<Value>77d1c088-6c2e-48bc-a84e-1970a8c26c51</Value>
</UserProperty>
...
```

**Note**

A sample user settings file which installs CANoe using a specific instance transform is provided in `UserSettings.xml` Examples.

5.3.4 Hints on Instance Transforms of CANoe and CANalyzer

The installation program always installs CANoe (or CANalyzer resp.) using an instance transform. When an installation is done using a deployment system, this installation might not be configurable (uninstall, modify, update) in the installation program when the base product code was used for deployment.

5.3.5 Prevent Installation/Update of CANdela Studio

Prevent installation/update of CANdelaStudio

It is possible to prevent the installation / update of CANdelaStudio when its installation is run during a CANoe/CANalyzer installation, although the user selected to install / update it. Technically, the actual installation is skipped by the CANdelaStudio installer on execution. The installation is shown as succeeded.

To activate this "installation skip" feature, you need to set a value in the Windows Registry.

32-bit version of CANdelaStudio

To prevent installation / update of the 32-bit version of CANdelaStudio, set the following registry value before installation:

- ▶ On a 64-bit operating system:
[HKEY_LOCAL_MACHINE\SOFTWARE\Wow6432Node\VECTOR\CANdelaStudio]
"DoNotInstallAsBundledProduct"="1"
- ▶ On a 32-bit operating system:
[HKEY_LOCAL_MACHINE\SOFTWARE\VECTOR\CANdelaStudio]
"DoNotInstallAsBundledProduct"="1"

64-bit version of CANdelaStudio

To prevent installation / update of the 64-bit version of CANdelaStudio, set the following registry value before installation:

```
[HKEY_LOCAL_MACHINE\SOFTWARE\VECTOR\CANdelaStudio]
```

```
"DoNotInstallAsBundledProduct"="1"
```

5.3.6 Prevent Installation/Update of ODX Studio

Prevent installation/update of ODXStudio

It is possible to prevent the installation/update of ODXStudio when its installation is run during a CANoe/CANalyzer installation, although the user selected to install / update it. Technically, the actual installation is skipped by the ODXStudio installer on execution. The installation is shown as succeeded.

To activate this "installation skip" feature, you need to set a value in the Windows Registry.

32-bit version of ODXStudio

To prevent installation / update of the 32-bit version of ODXStudio, set the following registry value (of type string) before installation:

- ▶ On a 64-bit operating system:

```
[HKEY_LOCAL_MACHINE\SOFTWARE\Wow6432Node\VECTOR\ODXStudio]  
"DoNotInstallAsBundledProduct"="1"
```

- ▶ On a 32-bit operating system:

```
[HKEY_LOCAL_MACHINE\SOFTWARE\VECTOR\ODXStudio]  
"DoNotInstallAsBundledProduct"="1"
```

64-bit version of ODXStudio

To prevent installation / update of the 64-bit version of ODXStudio, set the following registry value before installation:

```
[HKEY_LOCAL_MACHINE\SOFTWARE\VECTOR\ODXStudio]  
"DoNotInstallAsBundledProduct"="1"
```

5.3.7 Interactive Installation Using Bootstrapper

Prevent installation of prerequisite

When the installation is executed in interactive mode by running the bootstrapper application (e.g. SetupCANoe64.exe), the installation of a prerequisite can be prevented. When an installation package is deleted from the **Files** directory, it will not be installed.



Achtung!

You delete prerequisites at your own risk. Important prerequisites for CANoe/CANalyzer can be lost. This may cause malfunction of CANoe/CANalyzer.

5.3.8 Hardware Installation

Installation

The drivers for Vector network interfaces are not installed via the CANoe/CANalyzer installation program. You must ensure that the drivers for the used Vector hardware are installed on the target machines.

6 Appendix

In this chapter you find the following information:

6.1 Appendix A: Support	74
6.1.1 Need support?	74
6.1.2 What our support team needs to know	74
6.2 Appendix B: MSI	76
6.2.1 Location of installation files on DVD	76
6.3 Appendix C: UserSettings.xml File Format	78
6.3.1 Variables Supported in User Settings File	78
6.3.2 Properties that control the Installation Action	78
6.3.3 PackageGuid Values for UserSettings.xml	79
6.3.4 UserSettings.xml Examples	82

6.1 Appendix A: Support

6.1.1 Need support?

Our hotline can be reached

- ▶ by calling +49 (711) 80670-200
- ▶ by e-mail (support@vector.com)
- ▶ or by filling out our [Problem Report](#) form online

6.1.2 What our support team needs to know

To answer your support questions quickly, whether by phone, e-mail, fax or mail, we require the following information:

Software

- ▶ Detailed description of the software, hardware model and version number, e.g., CANoe/CANalyzer 7.5.66 (SP2), CANcardXL
- ▶ Serial number

Note: You will find this information in CANoe/CANalyzer on **File** ribbon tab|**Help**|**Details**.

Hardware

- ▶ Exact description of the hardware (e.g. CANcardXL)
- ▶ Hardware serial number
- ▶ Driver and firmware versions
You will find this information in the **Vector Hardware Config** dialog
(Windows start menu path: **Settings**|**Control Panel**|**Vector Hardware**).

If you have hardware problems:

- ▶ Create log file in the Vector Hardware Config dialog
(Windows start menu path: **Settings**|**Control Panel**|**Vector Hardware** -> **File**|**Save Configuration Report**).

Computer

- ▶ Detailed description (e.g. Dell Latitude D830)
- ▶ Laptop or desktop computer
- ▶ Operating system (e.g. Windows 7, SP 1)
- ▶ Processor type and speed (e.g. Core2Duo, 1,6 GHz)
- ▶ Memory (e.g. 1 GB RAM)

Error description

- ▶ What problems occurred?
- ▶ Which configuration did these problems occur with?
- ▶ Are you getting error notifications in the software, e.g. in the Write Window?

Customer Data

- ▶ Company, company address
- ▶ First name, last name
- ▶ Department
- ▶ Telephone number, fax number, e-mail address

6.2 Appendix B: MSI

6.2.1 Location of installation files on DVD

You can find the installation files in a directory in

- CANoe\Files (with CANoe)
- CANalyzer\Files (with CANalyzer)

on your installation DVD.

Installation File	Directory Name
CANoe64.msi	2d2d758a-571d-4239-ba27-ceca9435a110
CANalyzer64.msi	fc4bf6b1-1d35-4cab-84d3-b806da7f7aca
CANoeTBE.msi	511c8fad-cebb-4faf-9547-bce5347d7469
CANalyzerTBE.msi	92ABFC00-0D9C-4E0B-A57B-BE9693D3A996
CANoeCANalyzerRedistributable_x64.msi	5397c3f5-c1c8-4d1a-8818-6f76abf3e668
vcredist_x86_VS2013_SP2.exe	820b78cb-3414-40b0-b3a9-aaf8be7d6e0f
vcredist_x64_VS2013_SP2.exe	8937a4a9-0137-4727-ac03-f1b1704d69e1
vcredist_2019_x86.exe	657ede8a-a0eb-48de-832a-cc09c0fde02
vcredist_2019_x64.exe	1bb22aaf-dd4c-4bad-b3ae-c0b87c26fe59
ndp48-x86-x64-allos-enu.exe	baef5275-ca35-4c14-a93d-a7847fcdc948
ndp48-x86-x64-allos-deu.exe	1b950a7d-f850-45d7-ba7a-c765c61e02c2
ndp48-x86-x64-allos-jpn.exe	2d950c71-39eb-4ce6-ac3f-c1571f129ba6
CANdelaPersistors17P2.msi	f578bf3e-9dde-4ce9-b907-683584757694
CANdelaStudio17SP1.msi	ec112e25-9279-4392-a57e-1c3442d6a9b3
ODXStudio9Patch4.msi	e53ea56a-2d31-4a61-b220-1637c3b69752
AUTOSARExplorer2.msi	f4cf6ed2-e676-4fd6-b18a-f75294698c89
FIBEXExplorer.msi	8a23c25a-5e06-4404-a9a3-fb4933d34e22
LDFExplorer.msi	62525589-7521-4d6c-8f9f-b4d6b82abd1d
Vector ASAP2 Studio Viewer 2.4.msi	e023a911-5570-460a-8f1c-e131133d6222
CANoeCANalyzerScope_x64.msi	59c3b77b-ec7f-4d99-a738-a03e286f71ee
SetupVAME.msi	0f0d7561-5f02-4beb-b582-7909550d1df5
Vector ShellExtensions 32-bit.msi	70846f8d-a98d-4200-91e3-885590ad942e
Vector ShellExtensions 64-bit.msi	b5cda055-528e-4855-ae90-96b9c7171e3b
CodeMeterRuntime.exe	3a509f4b-46b5-48c1-9c72-cb27f9f15ce7
CANoeTestReportViewer.msi	7c9d7c9e-6c50-4055-8a75-54159de5db45

Installation File	Directory Name
ReportViewerDivaApiAllVersions.msi	78696e90-61d6-4109-8881-0d86d67305ea
TestReportViewerSelector.msi	a4477b60-21a4-4180-a085-8ffac97ba24c
Vector Support Assistant.msi	42030c54-6332-425c-ae1e-f8e5b063ee7b
VectorSecurityManager.msi	6bb6328e-e9ca-4864-bcb2-7ec02f2e446e
VectorLicenseClientInstaller.msi	e9362143-7b0c-4ebf-be5b-0d2c61d33e3c
Vector Platform Manager.msi	955c519d-0940-45bd-b8c5-f84bcd302a98
Vector vTESTstudio Viewer 6.msi	8fd22eaf-333a-4753-a501-dcf4e5d5f961
VectorCANDb++Installer.msi	9ee1987c-0cdb-4c8f-af3a-a9480680153c
Vector Modeling Components AddOn.msi	2e7bb435-482a-4f73-a65e-a96fc0c59b73
Vector SmartCharging Components AddOn.msi	9a789cb2-47b1-4c33-a0a5-ffcad8f20005
VectorApplicationUpdaterInstaller.msi	b11f5aaf-c8ce-4231-892c-9a04c8484013
python-3.9.2.exe	d5901165-62d1-4c7c-9540-44c54fe62c10
python-3.9.2-amd64.exe	35f803c2-1be2-4351-84b1-f20d7a8fb955
.NET Framework Reference Assemblies 4.0.msi	64bac7d3-ab8a-4160-9c12-9da0be1eee37
.NET Framework Reference Assemblies 4.7.msi	07c53c92-1c9d-4704-8957-3cc7b50dcd34
VectorToolManager.msi	7dff6b78-12c8-4369-b905-6937bd8f0c06

6.3 Appendix C: UserSettings.xml File Format

6.3.1 Variables Supported in User Settings File

The following variables are supported in user settings files (UserSettings.xml, refer to chapter **Predefine Settings**).

Following variables map to the common Windows Installer variables with the same name:

- ▶ [AppDataFolder]
- ▶ [CommonAppDataFolder]
- ▶ [CommonFiles64Folder]
- ▶ [CommonFilesFolder]
- ▶ [DesktopFolder]
- ▶ [LocalAppDataFolder]
- ▶ [MyPicturesFolder]
- ▶ [PersonalFolder]
- ▶ [ProductName]
- ▶ [ProductVersion]
- ▶ [ProgramFiles64Folder]
- ▶ [ProgramFilesFolder]
- ▶ [ProgramMenuFolder]
- ▶ [StartMenuFolder]
- ▶ [System64Folder]
- ▶ [SystemFolder]
- ▶ [WindowsFolder]
- ▶ [WindowsVolume]

The following variables have no Windows Installer equivalent:

- ▶ [_CommonDocumentsFolder_]: Documents Directory for the **public** user profile, i.e.
C:\Users\Public\Documents

6.3.2 Properties that control the Installation Action

Control variables for UserSettings.xml

The following properties are supported in user settings files (UserSettings.xml, refer to chapter **Predefine Settings**) and control the installation of items

To set the installation action of an item, use the property **<InstallationOption>**: Note that the **greater-than** sign and the **less-than** sign need to be escaped as ">" and "<" respective.

The “<InstallationOption>” property supports following values:

- ▶ None
- ▶ Install
- ▶ Update
- ▶ Uninstall

Note that an installation option value of the user settings XML file is only applied when it is one of the possible values. E.g., you cannot uninstall a program that is not installed at all.

Because CANoe and CANalyzer can be installed multiple times with the same main version, you need to specify the installation instance to which the specified action shall apply. Use the property **<InstallationInstance>** to specify the instance. Its value is the product instance GUID. Note that if only one installation is present, the instance can be omitted.

6.3.3 PackageGuid Values for UserSettings.xml

Use the following GUIDs as PackageGuid value in the UserSettings.xml file to control the installation of the related item.

PackageGuid	Product / Item
2d2d758a-571d-4239-ba27-ceca9435a110	CANoe (64 bit)
511c8fad-cebb-4faf-9547-bce5347d7469	CANoe Test Bench Edition
2c7971bb-03c5-4a14-a217-884bfb04145d	CANoe sample configurations
fc4bf6b1-1d35-4cab-84d3-b806da7f7aca	CANalyzer (64 bit)
92ABFC00-0D9C-4E0B-A57B-BE9693D3A996	CANalyzer Test Bench Edition
9c8ce6a5-0c5b-44d9-a582-calbed67d8bc	CANalyzer sample configurations
f578bf3e-9dde-4ce9-b907-683584757694	CANdela Persistors
ec112e25-9279-4392-a57e-1c3442d6a9b3	CANdelaStudio
e53ea56a-2d31-4a61-b220-1637c3b69752	ODXStudio
f4cf6ed2-e676-4fd6-b18a-f75294698c89	AUTOSAR Explorer2
8a23c25a-5e06-4404-a9a3-fb4933d34e22	FIBEX Explorer
62525589-7521-4d6c-8f9f-b4d6b82abd1d	LDF Explorer

PackageGuid	Product / Item
e023a911-5570-460a-8f1c-e131133d6222	ASAP2 Studio Viewer
0f0d7561-5f02-4beb-b582-7909550d1df5	Vector Aerospace Message Editor
7c9d7c9e-6c50-4055-8a75-54159de5db45	CANoe Test Report Viewer
78696e90-61d6-4109-8881-0d86d67305ea	Vector CANoe Test Report Viewer DiVa API Assemblies
a4477b60-21a4-4180-a085-8ffac97ba24c	Vector Test Report Viewer Selector
42030c54-6332-425c-ae1e-f8e5b063ee7b	Vector Support Assistant
6bb6328e-e9ca-4864-bcb2-7ec02f2e446e	Vector Security Manager
e9362143-7b0c-4ebf-be5b-0d2c61d33e3c	Vector License Client
955c519d-0940-45bd-b8c5-f84bcd302a98	Vector Platform Manager
8fd22eaf-333a-4753-a501-dcf4e5d5f961	Vector vTESTstudio Viewer
59c3b77b-ec7f-4d99-a738-a03e286f71ee	CANoe / CANalyzer Scope (drivers for 64 bit operating systems)
70846f8d-a98d-4200-91e3-885590ad942e	Vector ShellExtensions for 32 bit processes
b5cda055-528e-4855-ae90-96b9c7171e3b	Vector ShellExtensions for 64 bit processes
9ee1987c-0cdb-4c8f-af3a-a9480680153c	Vector CANdb++
2e7bb435-482a-4f73-a65e-a96fc0c59b73	Vector AddOn Components
9a789cb2-47b1-4c33-a0a5-ffcad8f20005	Vector SmartCharging Components
b11f5aaf-c8ce-4231-892c-9a04c8484013	Vector Application Updater
64bac7d3-ab8a-4160-9c12-9da0be1eee37	.NET Framework Reference Assemblies 4.0
07c53c92-1c9d-4704-8957-3cc7b50dcd34	.NET Framework Reference Assemblies 4.7
7dff6b78-12c8-4369-b905-6937bd8f0c06	Vector Tool Manager

It is possible to launch the Vector License Client after a successful CANoe or CANalyzer installation. This operation can be enabled or disabled by the user via a checkbox at the end of the installation. You can use the PackageGuid "00000000-0000-0000-0000-000000000001" in the UserSettings.xml file to control the default state of this checkbox.

6.3.4 UserSettings.xml Examples



Example: UserSettings.xml; install CANoe with predefined settings, do not install CANoe sample configurations:

```
<?xml version="1.0" encoding="utf-8"?>

<UserPropertySettings xmlns:xsi="http://www.w3.org/2001/XMLSchema-
instance" xmlns:xsd="http://www.w3.org/2001/XMLSchema">

  <Programs>

    <!-- set installation path and start menu directory for CANoe (64
bit) -->

    <UserPropertyList PackageGuid="2d2d758a-571d-4239-ba27-
ceca9435a110">

      <UserPropertyValues>

        <UserProperty>

          <Name>INSTALLDIR</Name>

          <Value>[ProgramFiles64Folder]\Vector Tools\CANoe
11.0</Value>

        </UserProperty>

        <UserProperty>

          <Name>VSTART_MENU_FOLDER</Name>

          <Value>Vector Tools\Vector CANoe 11.0</Value>

        </UserProperty>

      </UserPropertyValues>

    </UserPropertyList>

    <!-- set installation action for CANoe sample configurations to
"None" -->

    <UserPropertyList PackageGuid="2c7971bb-03c5-4a14-a217-
884bfb04145d">

      <UserPropertyValues>

        <UserProperty>

          <Name>&lt;InstallationOption&gt;</Name>

          <Value>None</Value>

        </UserProperty>

      </UserPropertyValues>

    </UserPropertyList>

  </Programs>

</UserPropertySettings>
```



Example: UserSettings.xml example; uninstall CANoe instance with specified ProductCode

```
<?xml version="1.0" encoding="utf-8"?>

<UserPropertySettings xmlns:xsi="http://www.w3.org/2001/XMLSchema-
instance" xmlns:xsd="http://www.w3.org/2001/XMLSchema">

  <Programs>

    <!-- uninstall CANoe (64 bit) instance with product code
    '3d69df56-184b-4888-bbc8-abf7cef2a180' -->

    <UserPropertyList PackageGuid="2d2d758a-571d-4239-ba27-
ceca9435a110">

      <UserPropertyValues>

        <UserProperty>

          <Name>&lt;InstallationOption&gt;</Name>

          <Value>Uninstall</Value>

        </UserProperty>

        <UserProperty>

          <Name>&lt;InstallationInstance&gt;</Name>

          <Value>{3d69df56-184b-4888-bbc8-abf7cef2a180}</Value>

        </UserProperty>

      </UserPropertyValues>

    </UserPropertyList>

  </Programs>

</UserPropertySettings>
```



Example: UserSettings.xml; install CANoe (use instance transform 50), do not install CANoe sample configurations

```
<?xml version="1.0" encoding="utf-8"?>

<UserPropertySettings xmlns:xsi="http://www.w3.org/2001/XMLSchema-
instance" xmlns:xsd="http://www.w3.org/2001/XMLSchema">

  <Programs>

    <UserPropertyList PackageGuid="2d2d758a-571d-4239-ba27-
ceca9435a110" Name="Vector CANoe 12.0 (64 bit)">

      <UserPropertyValues>

        <UserProperty>

          <DisplayName>This software is used in the United States of
America (USA)</DisplayName>

          <Name>VISUSEDINUSA</Name>

          <Value>0</Value>
```

```

</UserProperty>
<UserProperty>
  <DisplayName>Installation path:</DisplayName>
  <Name>INSTALLDIR</Name>
  <Value>C:\Vector\ Vector CANoe [ProductVersion]</Value>
</UserProperty>
<UserProperty>
  <DisplayName>Start menu entry:</DisplayName>
  <Name>VSTART_MENU_FOLDER</Name>
  <Value>CANwin\Vector CANoe [ProductVersion]</Value>
</UserProperty>
<UserProperty>
  <DisplayName>Program language:</DisplayName>
  <Name>VPROGRAM_LANGUAGE</Name>
  <Value>49</Value>
</UserProperty>
<UserProperty>
  <DisplayName>Application data location:</DisplayName>
  <Name>VAPPLICATION_AND_DATA_ROOT</Name>
  <Value>2</Value>
</UserProperty>
<UserProperty>
  <Name>&lt;InstallationOption&gt;</Name>
  <Value>Install</Value>
</UserProperty>
<UserProperty>
  <Name>&lt;InstallationInstance&gt;</Name>
  <Value>77d1c088-6c2e-48bc-a84e-1970a8c26c51</Value>
</UserProperty>
</UserPropertyValues>
</UserPropertyList>
<UserPropertyList PackageGuid="2c7971bb-03c5-4a14-a217-
884bfb04145d" Name="Vector CANoe Sample Configurations">
  <UserPropertyValues>
    <UserProperty>
      <DisplayName>Installation path:</DisplayName>

```

```

        <Name>INSTALLDIR</Name>
        <Value>C:\Users\Public\Documents\Vector\CANoe\Sample
Configurations [ProductVersion]</Value>
    </UserProperty>
    <UserProperty>
        <Name>&lt;InstallationOption&gt;</Name>
        <Value>Install</Value>
    </UserProperty>
</UserPropertyValues>
</UserPropertyList>
<UserPropertyList PackageGuid="e023a911-5570-460a-8f1c-
e131133d6222" Name="Vector ASAP2 Studio Viewer 1.4">
    <UserPropertyValues>
        <UserProperty>
            <DisplayName>Installation path:</DisplayName>
            <Name>INSTALLDIR</Name>
            <Value>[ProgramFiles64Folder]\Vector ASAP2
Studio\ASAP2StudioViewer 1.4</Value>
        </UserProperty>
        <UserProperty>
            <Name>&lt;InstallationOption&gt;</Name>
            <Value>InstallOrUpdate</Value>
        </UserProperty>
    </UserPropertyValues>
</UserPropertyList>
</Programs>
</UserPropertySettings>

```



Example: UserSettings.xml example; set default value of checkbox for automatic launch of Vector License Client (1: checked, 0: unchecked)

```

<?xml version="1.0" encoding="utf-8"?>
<UserPropertySettings xmlns:xsi="http://www.w3.org/2001/XMLSchema-
instance" xmlns:xsd="http://www.w3.org/2001/XMLSchema">
    <Programs>
        <!-- Set default value of Start Vector License Client action -->
        <UserPropertyList PackageGuid="00000000-0000-0000-0000-
000000000001">
            <UserPropertyValues>

```

```
<UserProperty>
  <Name>IsChecked</Name>
  <Value>1</Value>
</UserProperty>
</UserPropertyValues>
</UserPropertyList>
</Programs>
</UserPropertySettings>
```



Mehr Informationen

- ▶ Neues
- ▶ Produkte
- ▶ Demosoftware
- ▶ Support
- ▶ Schulungen
- ▶ Adressen

www.vector.com