Alternative Assessment Tool (AAT) Report on

"Design and Verification of Combinational and Sequential Digital Modules using Verilog HDL"

Submitted in partial fulfilment of the requirements of the Alternative Assessment Tool (AAT) for the course

ADVANCED DIGITAL AND LOGIC DESIGN (ADLD)

[Course Code: 23ECSPE1AD]

Submitted by

Krishnamurthy A K **1BM24EC087**

Submitted to

Prof. Ajaykumar Devarapalli

DEPARTMENT OF ELECTRONICS AND COMMUNICATION ENGINEERING

BMS College of Engineering
Bull Temple Road, Basavanagudi, Bengaluru-560019

Academic Year


2026 – 2027

Table of Contents

Sl no.	Question	Pg no.
1	4-Bit Comparator	1
2	4-Bit Shift Register	4

4-Bit Comparator

Circuit Diagram:

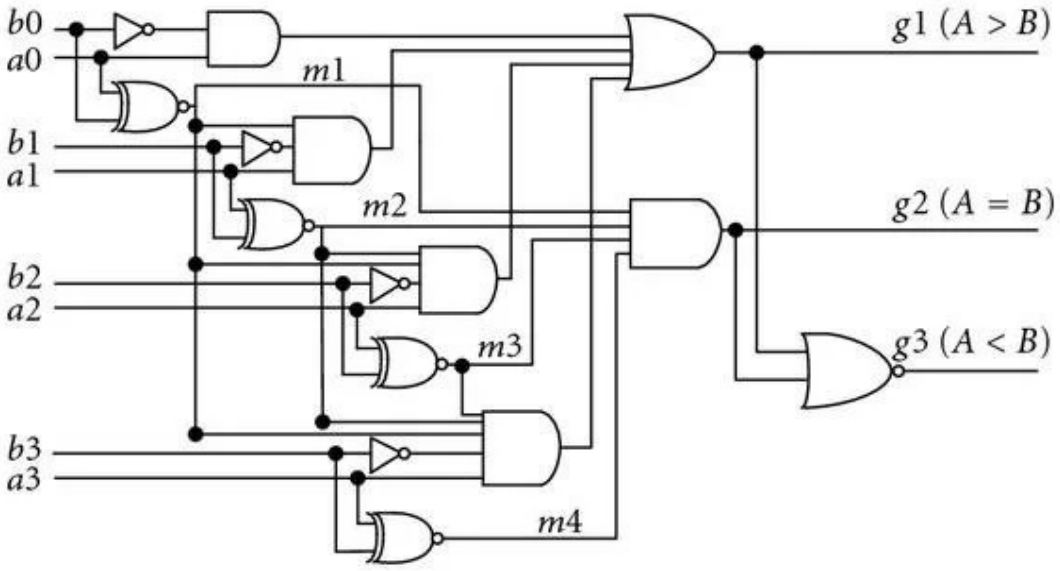

Design Code:

```
module comparator_4bit (
   input [3:0] A,
   input [3:0] B,
   output A_gt_B,
   output A_lt_B,
   output A_eq_B
);
assign A_gt_B = (A > B);
assign A_lt_B = (A < B);
assign A_eq_B = (A == B);

endmodule
```

Testbench:

```
module tb_comparator;
reg [3:0] A, B;
wire A_gt_B, A_lt_B, A_eq_B;

comparator_4bit uut (
   .A(A),
   .B(B),
   .A_gt_B(A_gt_B),
   .A_lt_B(A_lt_B),
   .A_eq_B(A_eq_B)
);

initial begin

   A = 4'b1010; B = 4'b0101;
   #10;


   A = 4'b0011; B = 4'b1001;
   #10;

   A = 4'b1100; B = 4'b1100;
   #10;

   $finish;
end
```


```
initial begin
$dumpfile("comp.vcd");
$dumpvars;
end
endmodule
```

Simulation:

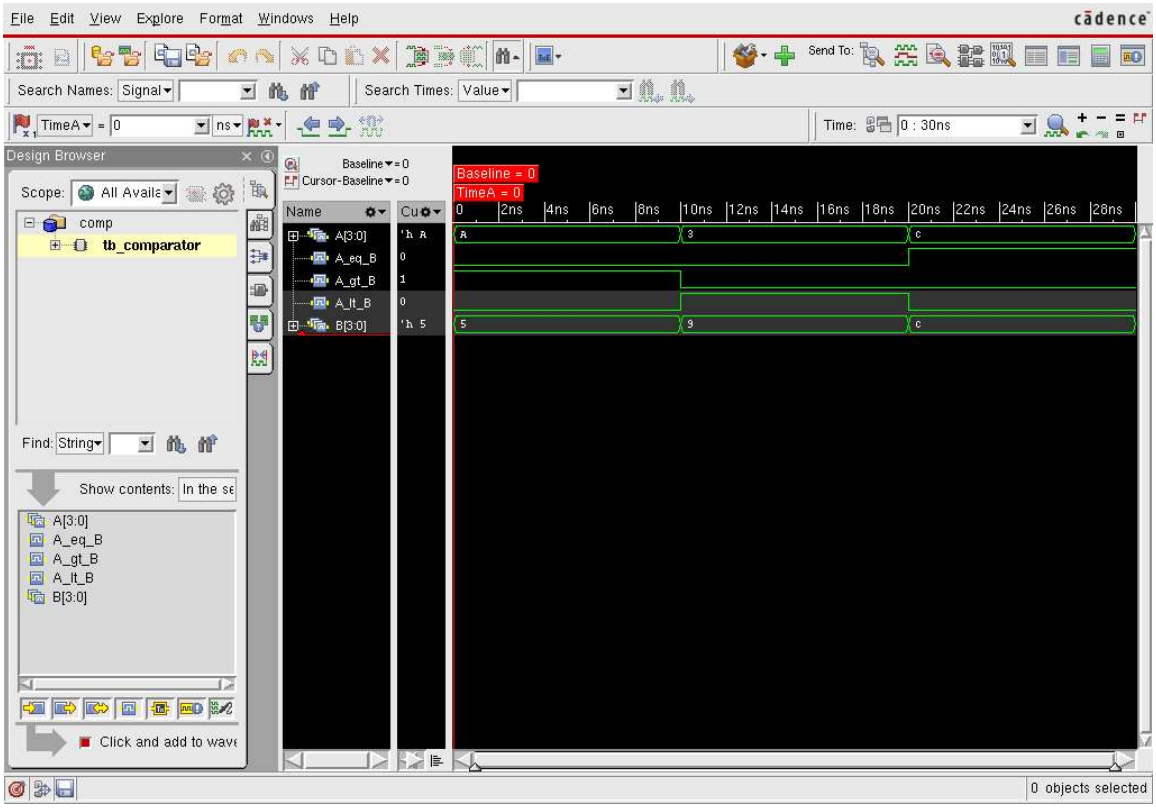

4-bit Shift Register

Circuit Diagram:

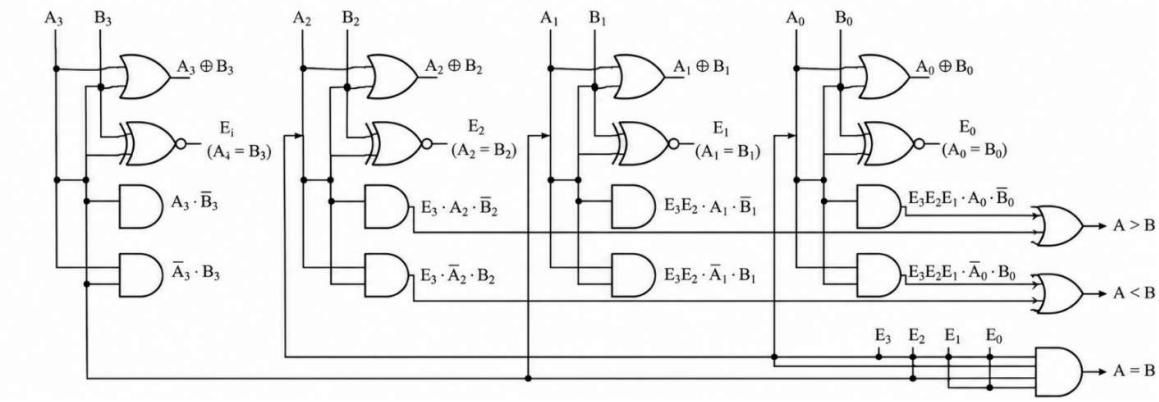

Design Code:

```
module shift_register (
   input clk,
   input reset,
   input serial_in,
   output reg serial_out
);

reg [3:0] q;
always @(posedge clk or posedge reset)
begin
   if (reset)
      q <= 4'b0000;
   else
```

```
        q <= {q[2:0], serial_in};
end
always @(*)
begin
    serial_out = q[3];
end

endmodule
```

Testbench:

```
module tb_shift_register;
reg clk, reset, serial_in;
wire serial_out;

shift_register uut (
    .clk(clk),
    .reset(reset),
    .serial_in(serial_in),
    .serial_out(serial_out)
);
always #5 clk = ~clk;
initial begin
    clk = 0;
    reset = 1;
    serial_in = 0;
    #10 reset = 0;
    serial_in = 1; #10;
```

```
    serial_in = 0; #10;
    serial_in = 1; #10;
    serial_in = 1; #10;
    serial_in = 0; #10;
    #20 $finish;
end
initial begin
$dumpfile("reg.vcd");
$dumpvars;
end
endmodule
```

Simulation:

