
CHASSIS WIRING DRAFT: purchased isolated modules, not a 230 V PCB.
110 V bus feeds a separate regulator; it is NOT the DUT output.

J1



230 VAC / 32 A CIRCUIT

SW1




2-POLE MAINS SWITCH - TBD

F1



AC BRANCH FUSE - TBD

A1A

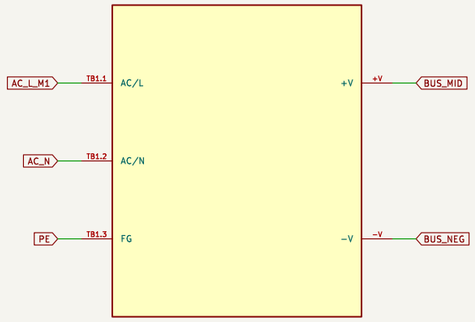

RSP-3000-48 / SVR 55.0 V

Each output: 55 V nominal.
BUS_MID links A1 +V to A2 -V.
Never connect BUS_MID to PE.
Diode K to own +V, A to own -V.




REVERSE DIODE >=200 V / IFSM >62.5 A

J2



110 V DC BUS - NOT DUT OUTPUT

A2A

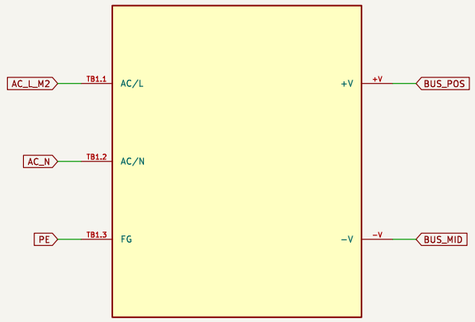

RSP-3000-48 / SVR 55.0 V

F2



AC BRANCH FUSE - TBD



REVERSE DIODE >=200 V / IFSM >62.5 A

Module OVP: 57.6..67.2 V each.
Threshold sum upper: 134.4 V.
This is NOT a transient clamp.
BUS_OVP, disconnect, inrush and
all-module fault logic missing.

AC wiring, fuses, switch, protective earth and busbars require final rated parts.
No full-load, isolation, thermal or fault test has been performed.
The power prototype procedural input maximum 120 V is NOT guaranteed by module OVP.

Independent module enable and sense

File: control.kicad_sch

Modules have independent local controls and sense
FG and cabinet to PE; floating BUS_NEG is NOT PE
No mains PCB; no fabrication release; final protections pending
2 x RSP-3000-48 set to 55 V; nominal 110 V bus

Sheet: /
File: frontend.kicad_sch


Title: ISOLATED FRONT-END - CHASSIS WIRING DRAFT

Size: A3	Date:	**Rev:**
KiCad E.D.A. 9.0.2		Id: 1/2

Keep each module control on its own local output reference.
The ENABLE contact symbols are requirements: coil/drivers and hardware fault interlock are missing.

A1 lower module


A1B

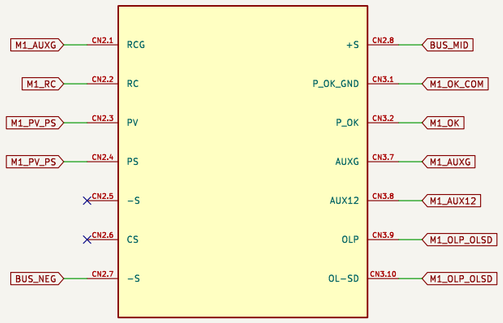

RSP-3000-48 / SVR 55.0 V

A2 upper module

A2B

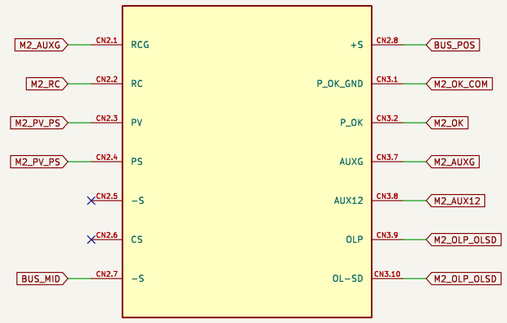

RSP-3000-48 / SVR 55.0 V

R1




1k / 1% / >=0.25 W

R2




1k / 1% / >=0.25 W

K1



ISOLATED NO CONTACT – ENABLE

K2



ISOLATED NO CONTACT – ENABLE

J3



TWO ISOLATED P_OK CONTACTS

AUX12: 12 V / 100 mA control-only per module. No direct common MCU wiring.
P_OK isolated contacts do not replace separate voltage, OVP, OTP and full bus supervision.
CN2.5 (-S duplicate) and CN2.6 (CS parallel-current-share) intentionally unused.

NO common AUXG, CS, remote sense or RC between modules
PV-PS and OLP-OLSD denote retained factory jumpers
Spec remote-enable example 3.2C; contact open = OFF

Sheet: /Independent module enable and sense/
File: control.kicad_sch

Title: RSP-3000 INDEPENDENT ENABLE / SENSE

Size: A3	Date:	**Rev:**
KiCad E.D.A. 9.0.2		Id: 2/2