


I comest 12

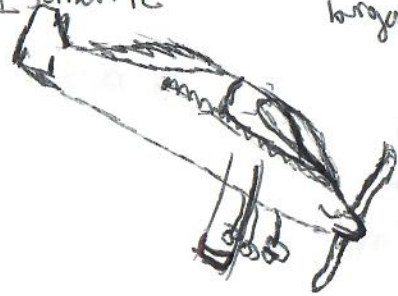

moderate tail moment arm, somewhat longer empennage, air foil



- Use tail volume coefficient
- for longitudinal stability $V_H = \frac{S_H \cdot l_H}{S_W \cdot \bar{c}}$
- $\bar{c}$ mac $\cdot l_H$ tail moment arm
- S_H horizontal tail area $\cdot S_W$ wing area

Primary Flight Display: Process

- DO ^{supplier} document that Aviation company need to follow

- Start with Boeing reference (ADIRU)
- Air data sys. Calculates how much aircraft is banking.
- When software requirements write in stub code.
- Requirements need to be ^{able to be} validated & verified & cannot be using "shall not".
- FAA ~~has~~ ^{we} has the mandatoriness to follow (regulations)
- Use for flight to setup their flight plan: flight management system (MC DU) it is a display bottom left
- DARS 1, 2, 3... : The phases of a cert. plan
 - 1: All processes ^{inside code when software} to develop sys. work & check with RAA & EUM (OER)
 - 2: Validation, benchmark sense, ^{state with for} does it accomplish what the
 - 3: Verify, testing the product if it follows requirement
 - 4: Show to RAA product work & follows requirement