
SIROKKO 262.01 — COMMON CONTROLLER INTERFACES / DRAFT
ESP32-S3-DevKitC-1-N8R8 v1.1; J1 and J3 numbers follow the Espressif Header Block.
Native KiCad project. This sheet is NOT the complete heater wiring or a manufacturing release.


EXTERNAL SENSOR MODULES
J10/J11 pin order is OUR HARNESS, not the manufacturer's header order.
1 Vin=3V3; 2 GND; 3 SCK; 4 SDO; 5 SDI; 6 CS; 7 DRDY.
K probes connect to T+/T- of each external module, not to this logic board.

J10

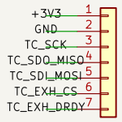


MAX31856_EXHAUST_HARNESS

J11

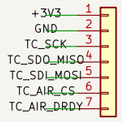


MAX31856_AIR_HARNESS

J1

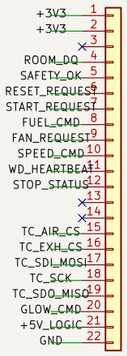


DEVKITC1_J1

J3

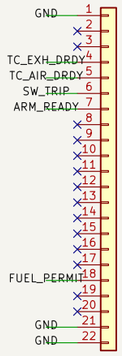

DEVKITC1_J3

J20



DRIVER_LOGIC_3V3_ONLY

J21



SAFETY_INTERFACE_3V3_ONLY

J12



ROOM_DS18B20_HARNESS

EXTERNAL POWER AND SAFETY STAGES
J20/J21 carry 3V3 LOGIC ONLY. NO 24V, coil or motor current here.
FUEL_PERMIT must pass through independent watchdog + latched limit chain.
STOP must also break the external fuel permission directly.
Protective fuel/glow disconnects and fan off-delay are not implemented on this sheet.


J22



PANEL_DRY_CONTACTS_3V3

POWER / ROOM SENSOR
J13: externally regulated +5V only, never raw 24V.
Do not combine USB and external supply without verified power isolation.
J12 harness: 1 VDD=3V3; 2 DQ; 3 GND. Actual DS18B20 package pinout differs.

J13



5V_LOGIC_INPUT_ONLY



R1: ROOM PULL-UP. R2/R3: SPI CS PULL-UPS. R4-R12: DEFINED LOW / DISCONNECTED SAFETY STATUS.
NC flags mean intentionally unused external DevKit connections, not deleted checks.
Rev A: SPEED_CMD selects low speed through a non-overlapping changeover contact.
Rev B: SPEED_CMD is PWM; low-speed motor lead is isolated; independent full-speed purge path required.
ERC checks this interface network only; it cannot verify combustion, external modules or protective timing.

Interface circuit only; not a burner safety approval

Sheet: /
File: Sirokko26201_control.kicad_sch

Title: Sirokko 262.01 — common controller interfaces

Size: A3	Date: 2026-10-23	**Rev: DRAFT-01**
KiCad E.D.A. 10.0.6		Id: 1/1