


Polo - Tech Pack

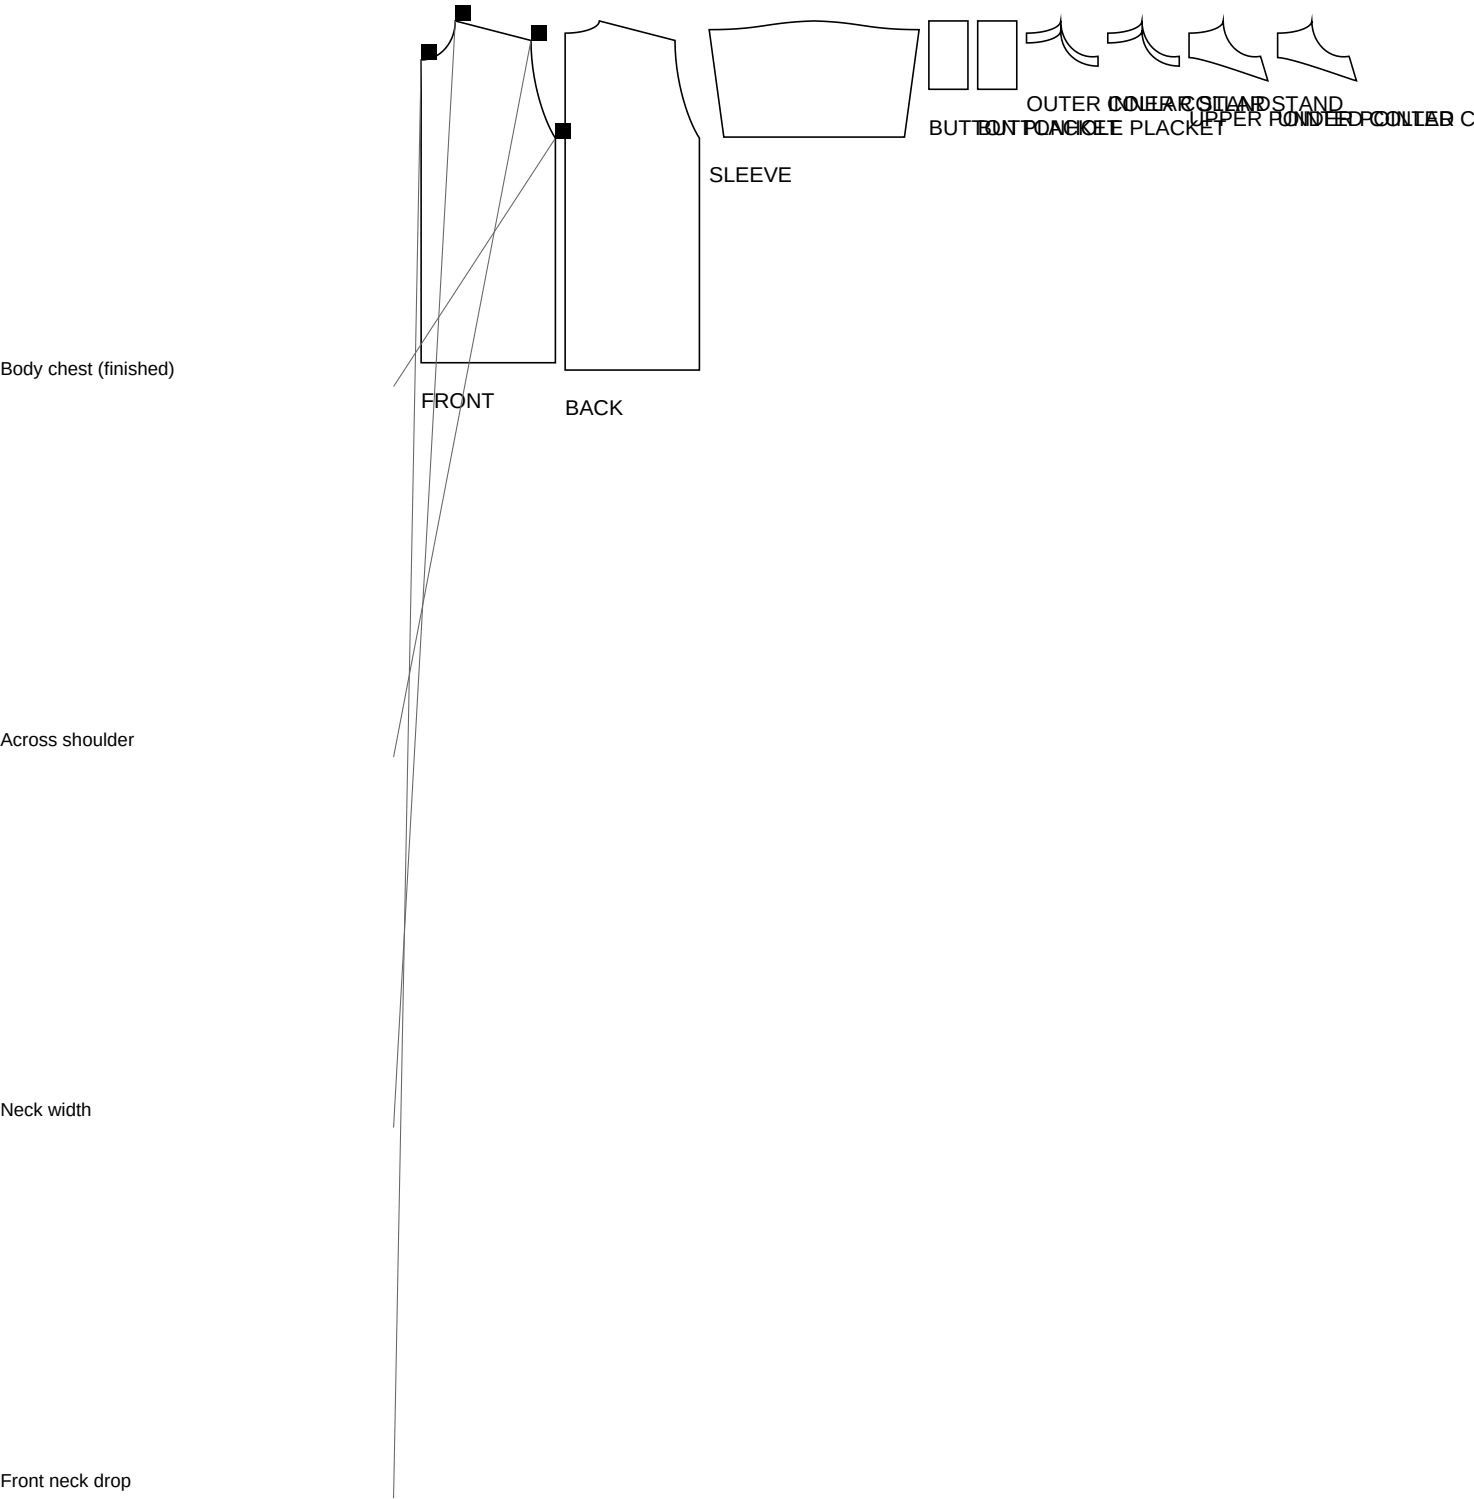

Measurement Spec (cm)

	Tol +/-	XS	S	M	L	XL
Body chest (finished)	1.3	100.0	105.0	110.0	115.0	120.0
Across shoulder	0.6	42.6	43.8	45.0	46.2	47.4
Shoulder seam	0.3	15.3	15.7	16.0	16.3	16.7
Armhole (front + back)	0.6	38.7	40.2	41.7	43.2	44.8
Neck width	0.6	13.0	13.5	14.0	14.5	15.0
Front neck drop	0.3	7.5	7.8	8.0	8.3	8.5
Sleeve length (cap-hem)	1.0	22.2	22.9	23.8	24.8	25.8
Sleeve bicep width	0.6	40.0	41.5	43.0	44.5	46.0
Sleeve hem	0.3	34.0	35.5	37.0	38.5	40.0
Finished placket length	0.3	14.0	14.0	14.0	14.0	14.0
Finished placket width	0.2	3.0	3.0	3.0	3.0	3.0
Button spacing	0.1	3.5	3.5	3.5	3.5	3.5
Finished collar stand height	0.2	2.0	2.0	2.0	2.0	2.0
Finished pointed collar leaf	0.3	5.0	5.0	5.0	5.0	5.0
Stand front rise	0.2	0.8	0.8	0.8	0.8	0.8
Collar point extension	0.2	1.5	1.5	1.5	1.5	1.5
Front side-vent depth	0.3	6.0	6.0	6.0	6.0	6.0
Back side-vent depth	0.3	7.5	7.5	7.5	7.5	7.5
Front body length (HPS-hem)	1.3	66.0	68.0	70.0	72.0	74.0
Back body length (HPS-hem)	1.3	67.5	69.5	71.5	73.5	75.5
Back hem drop	0.2	1.5	1.5	1.5	1.5	1.5

Bill of Materials

Material	Placement	Qty
Cotton jersey, main	Body, sleeves, collar & plackets	1.3 m
Lightweight knit fusible stabilizer	Plackets, collar & stands	0.25 m
Buttons	Front placket	3
Woven brand label	Centre back neck	1
Care/content label	Left side seam	1
Stretch sewing thread	All seams	1 cone

Construction

1. Apply lightweight knit-compatible stabilizer to placket, collar, and stand layers.
2. Reinforce the marked placket base, clip the two diagonal corners, and cut the centre-front slit; sew and fold both plackets at their marked
3. Make buttonholes and attach three buttons at the marked 3.5 cm centres.
4. Join upper and under collar around the outer edge; turn and press the points.
5. Sew collar layers into outer and inner stands, matching centre-back folds and front ends.
6. Attach the outer stand to the neckline; turn inner stand inside and finish securely.
7. Join shoulder seams, set sleeves flat, then close side and underarm seams only to the marked vent tops.
8. Finish and bar-tack the open side vents; press the sewn-to-open transitions before hemming.
9. Hem front and back body edges separately to preserve the selected back drop; hem sleeves and inspect placket flatness, collar roll, and

Polo - Fit Record

Sew the sample size, measure the finished garment, write the actual value in cm.

Fabric: _____ Sewn by: _____ Date: _____

Point of measure	Tol +/-	Predicted	Actual	Pass?
Body chest (finished)	1.3	110.0 cm	_____	_____
Across shoulder	0.6	45.0 cm	_____	_____
Shoulder seam	0.3	16.0 cm	_____	_____
Armhole (front + back)	0.6	41.7 cm	_____	_____
Neck width	0.6	14.0 cm	_____	_____
Front neck drop	0.3	8.0 cm	_____	_____
Sleeve length (cap-hem)	1.0	23.8 cm	_____	_____
Sleeve bicep width	0.6	43.0 cm	_____	_____
Sleeve hem	0.3	37.0 cm	_____	_____
Finished placket length	0.3	14.0 cm	_____	_____
Finished placket width	0.2	3.0 cm	_____	_____
Button spacing	0.1	3.5 cm	_____	_____
Finished collar stand height	0.2	2.0 cm	_____	_____
Finished pointed collar leaf	0.3	5.0 cm	_____	_____
Stand front rise	0.2	0.8 cm	_____	_____
Collar point extension	0.2	1.5 cm	_____	_____
Front side-vent depth	0.3	6.0 cm	_____	_____
Back side-vent depth	0.3	7.5 cm	_____	_____
Front body length (HPS-hem)	1.3	70.0 cm	_____	_____
Back body length (HPS-hem)	1.3	71.5 cm	_____	_____
Back hem drop	0.2	1.5 cm	_____	_____