
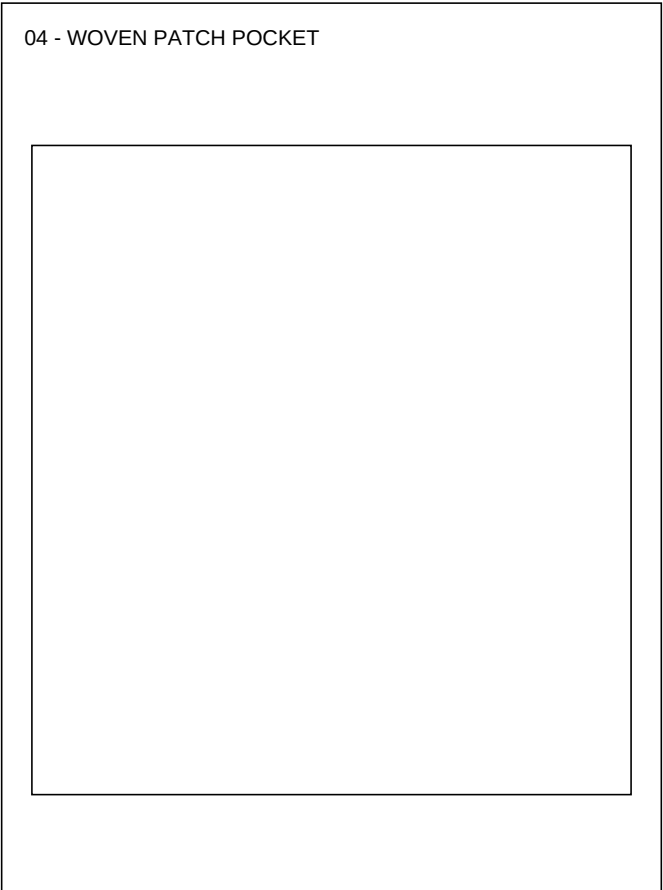
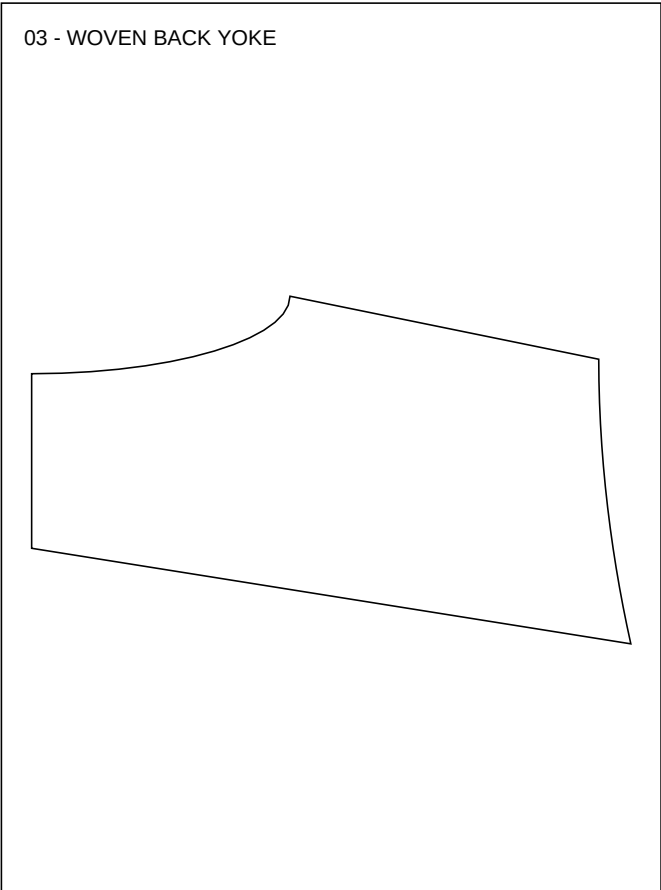
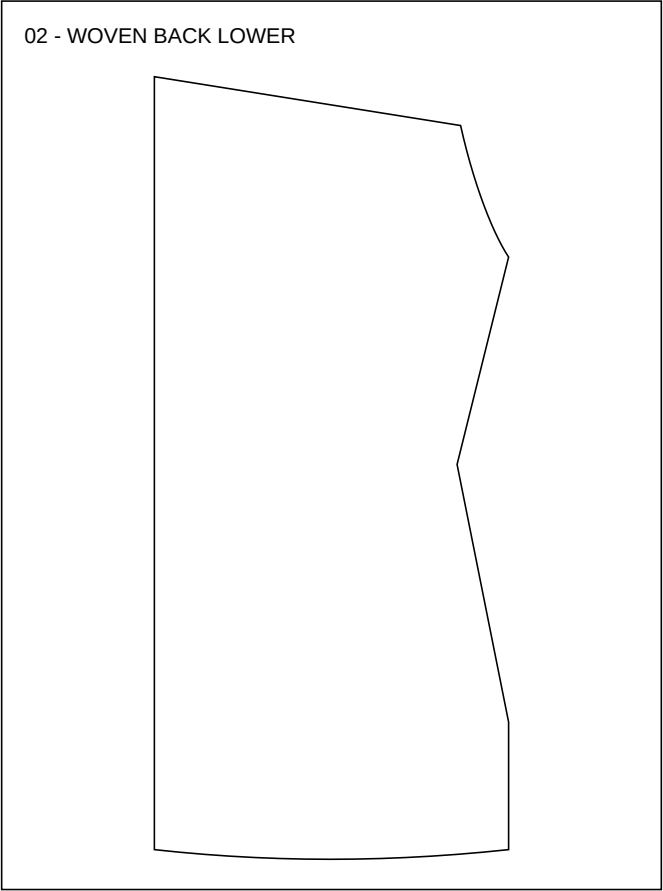






Woven shirt - Pattern Piece Overview (1/3)

Each piece is fitted independently. NOT TO SCALE - never cut from this overview.
POM names and size values are listed on the Measurement Spec page.

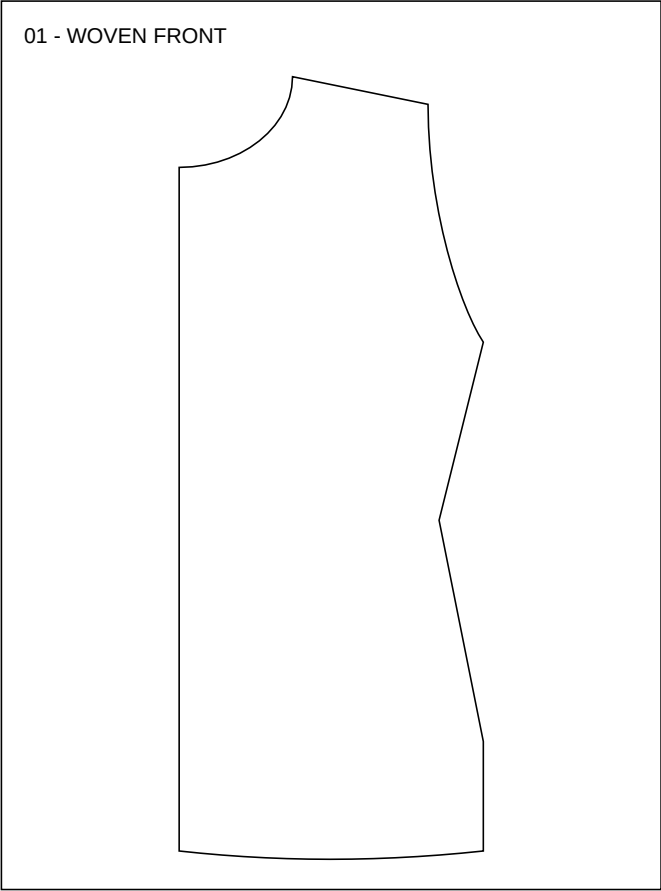





Woven shirt - Pattern Piece Overview (2/3)

Each piece is fitted independently. NOT TO SCALE - never cut from this overview.
POM names and size values are listed on the Measurement Spec page.

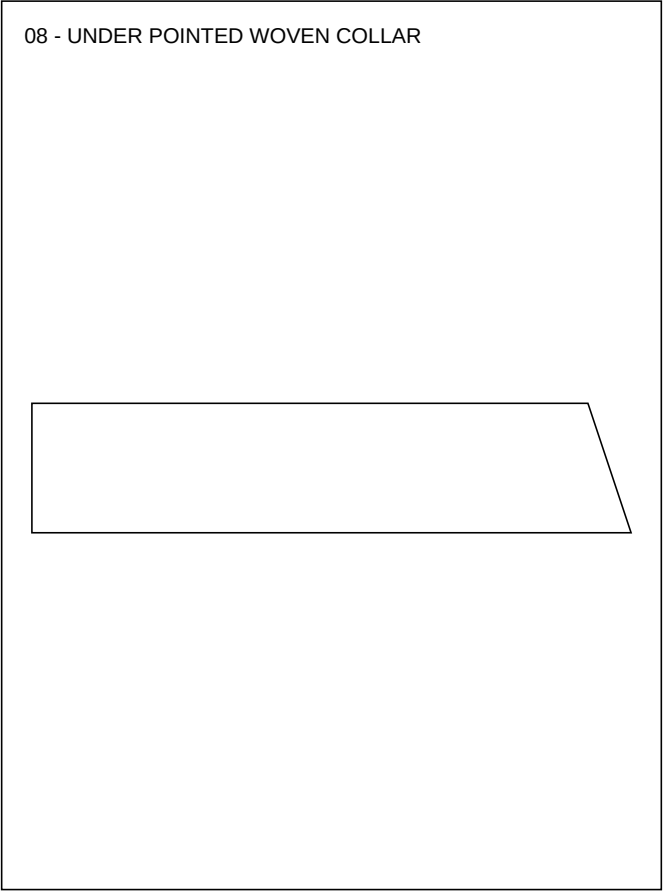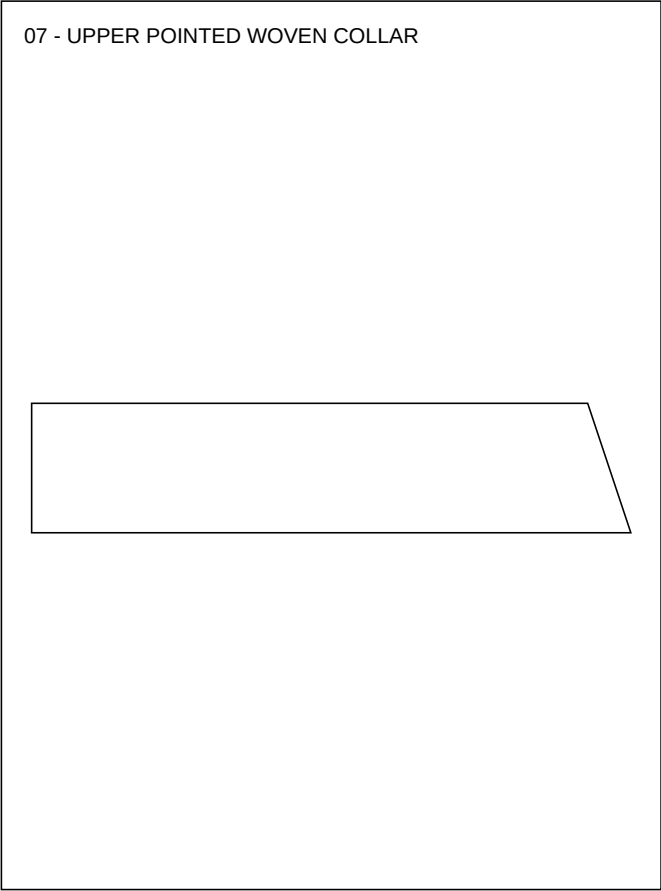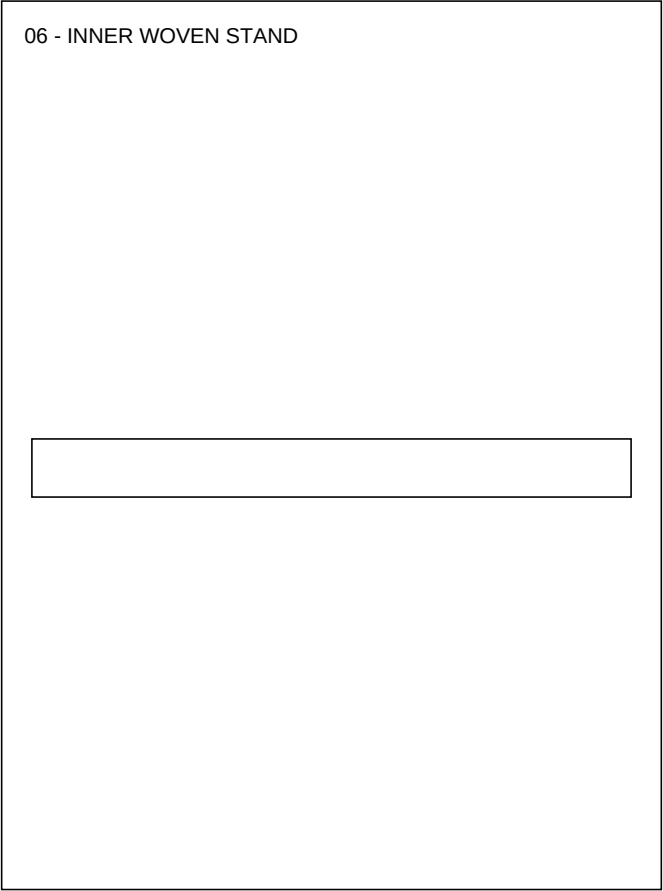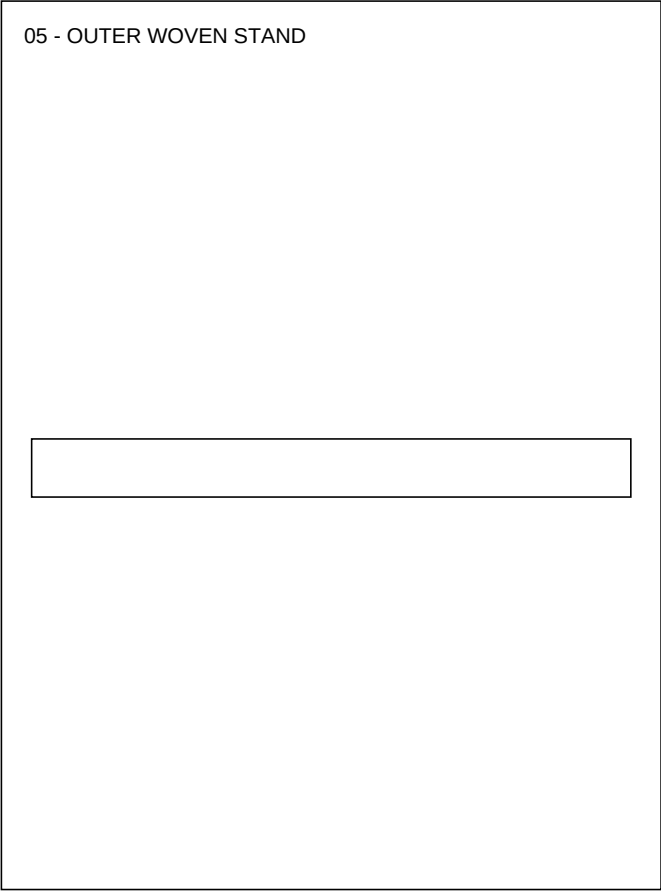

Woven shirt - Pattern Piece Overview (3/3)

Each piece is fitted independently. NOT TO SCALE - never cut from this overview.
POM names and size values are listed on the Measurement Spec page.

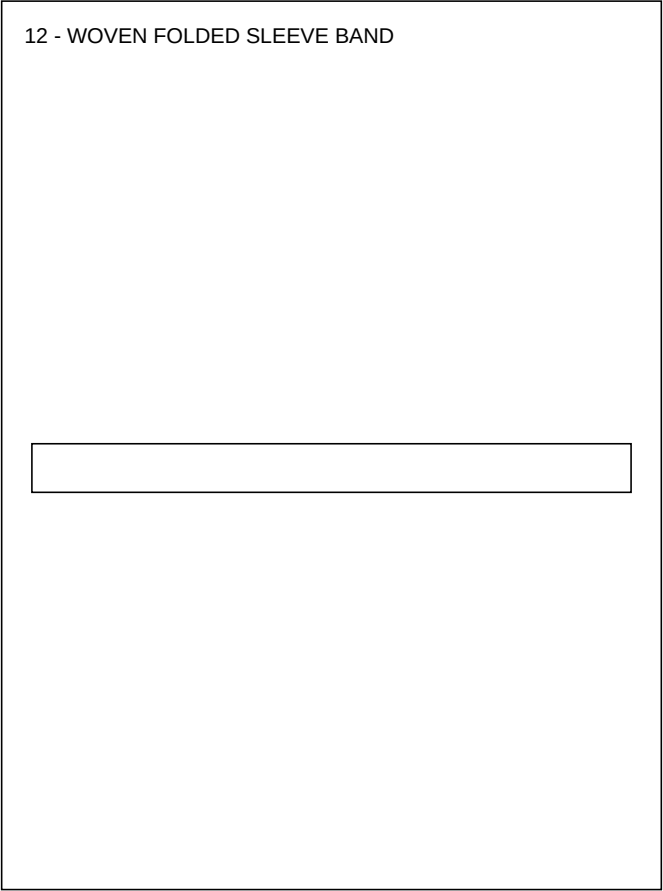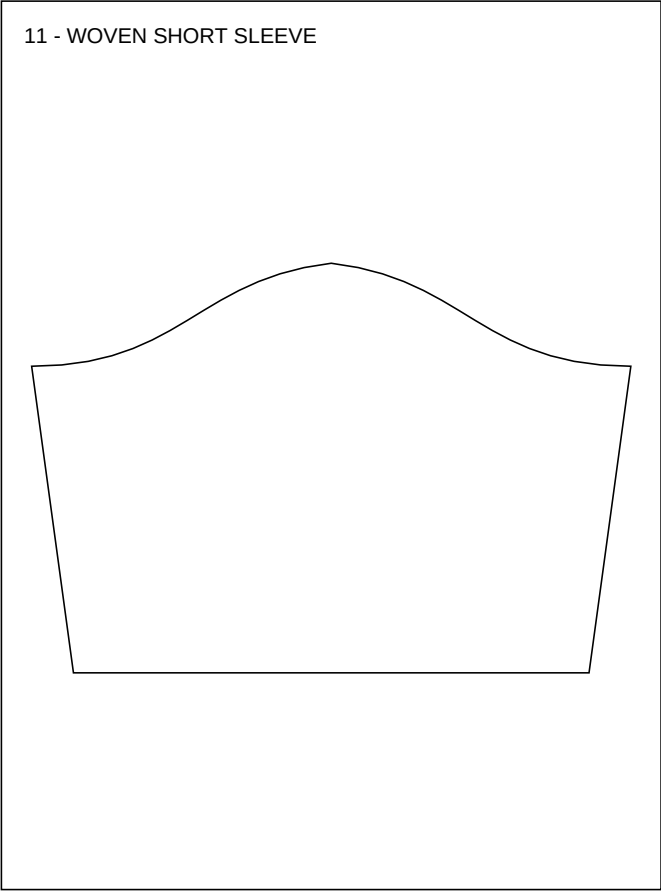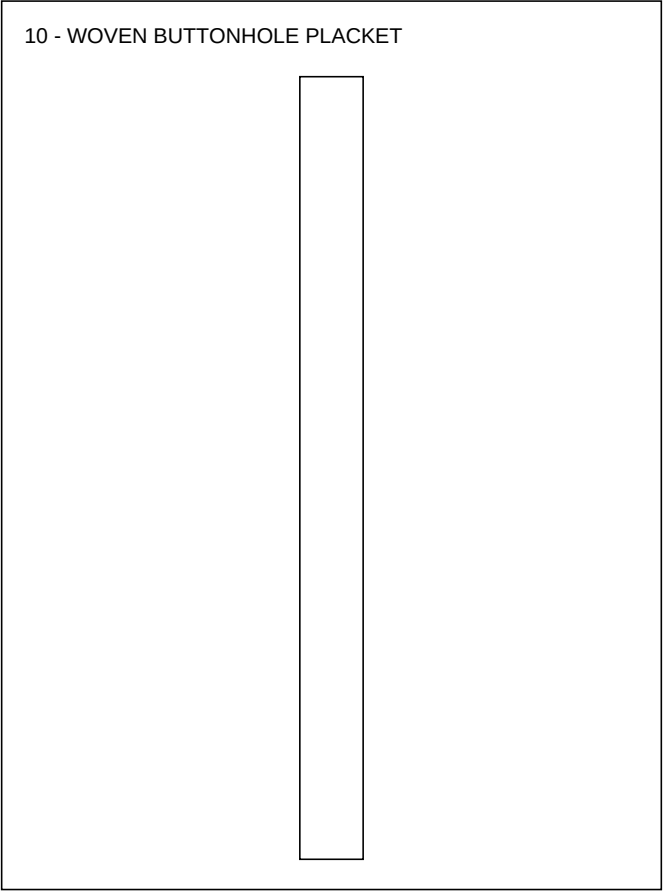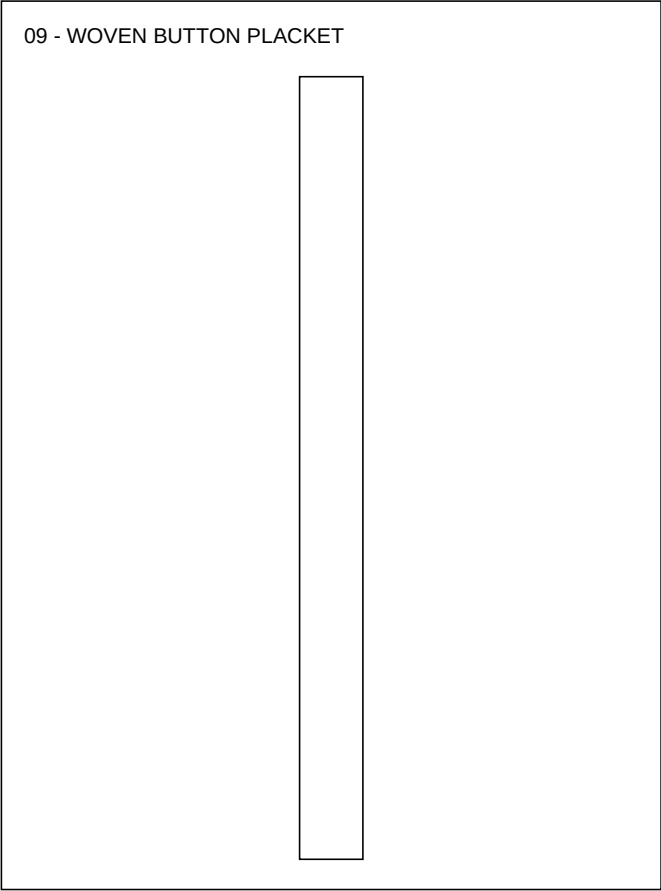

Measurement Spec (cm)

	Tol +/-	XS	S	M	L	XL
Body chest (finished)	1.3	100.0	105.0	110.0	115.0	120.0
Body length (HPS-hem)	1.3	66.0	68.0	70.0	72.0	74.0
Neck circumference (pattern)	0.6	47.8	49.7	51.6	53.4	55.3
Back yoke depth	0.5	10.0	10.0	10.0	10.0	10.0
Finished placket width	0.2	3.0	3.0	3.0	3.0	3.0
Front button spacing	0.2	8.0	8.0	8.0	8.0	8.0
Patch pocket width	0.3	12.0	12.0	12.0	12.0	12.0
Patch pocket height	0.3	13.0	13.0	13.0	13.0	13.0
Finished sleeve band depth	0.2	3.0	3.0	3.0	3.0	3.0
Side vent depth	0.3	3.0	3.0	3.0	3.0	3.0

Bill of Materials

Material	Placement	Qty
Lightweight woven fabric	Body, sleeves, yoke, collar & pocket	1.5 m
Fusible interfacing	Collar, stand & front plackets	0.35 m
Buttons	Front placket + collar stand	7 front + 1 stand
Woven brand label	Centre back neck	1
Care/content label	Left side seam	1
All-purpose thread	All seams	1 spool

Construction

1. Fuse the collar, stand, and front placket areas according to the selected fabric and interfacing instructions.
2. Join the front plackets to the two centre-front edges; press the folds and work the marked buttonholes.
3. Attach 7 front buttons at the marked even spacing, plus one additional button on the collar stand.
4. Sew the yoke to the lower back with the enclosed shoulder construction; match the yoke notches.
5. Join the upper and under collar, turn the points, and sew the collar into the two stand layers.
6. Attach the outer stand to the neckline, turn the inner stand, and secure the inside edge.
7. Sew the patch pocket to its placement mark, set the sleeves, and attach the folded sleeve bands.
8. Close side seams above the marked vents, finish the vent edges, and turn the curved hem.

Woven shirt - Fit Record

Sew the sample size, measure the finished garment, write the actual value in cm.

Fabric: _____ Sewn by: _____ Date: _____

Point of measure	Tol +/-	Predicted	Actual	Pass?
Body chest (finished)	1.3	110.0 cm	_____	_____
Body length (HPS-hem)	1.3	70.0 cm	_____	_____
Neck circumference (pattern)	0.6	51.6 cm	_____	_____
Back yoke depth	0.5	10.0 cm	_____	_____
Finished placket width	0.2	3.0 cm	_____	_____
Front button spacing	0.2	8.0 cm	_____	_____
Patch pocket width	0.3	12.0 cm	_____	_____
Patch pocket height	0.3	13.0 cm	_____	_____
Finished sleeve band depth	0.2	3.0 cm	_____	_____
Side vent depth	0.3	3.0 cm	_____	_____