Clock, reset and run/step

File: p8x-control-card-1.kicad_sch

Instruction register, step counter, condition mux

File: p8x-control-card-2.kicad_sch

Microcode ROMs and pipeline register

File: p8x-control-card-3.kicad_sch

Interrupt controller (DNP)

File: p8x-control-card-4.kicad_sch

Bus connector, decoupling


File: p8x-control-card-5.kicad_sch


Generated by generators/sch/p8x_kicad_sch.py — do not edit
Root sheet: one block per functional sheet
P8X


Sheet: /
File: p8x-control-card.kicad_sch


Title: P8X CONTROL/MICROCODE CARD REV B


Size: A4	Date:	**Rev:**
KiCad E.D.A. 10.0.6		Id: 1/6

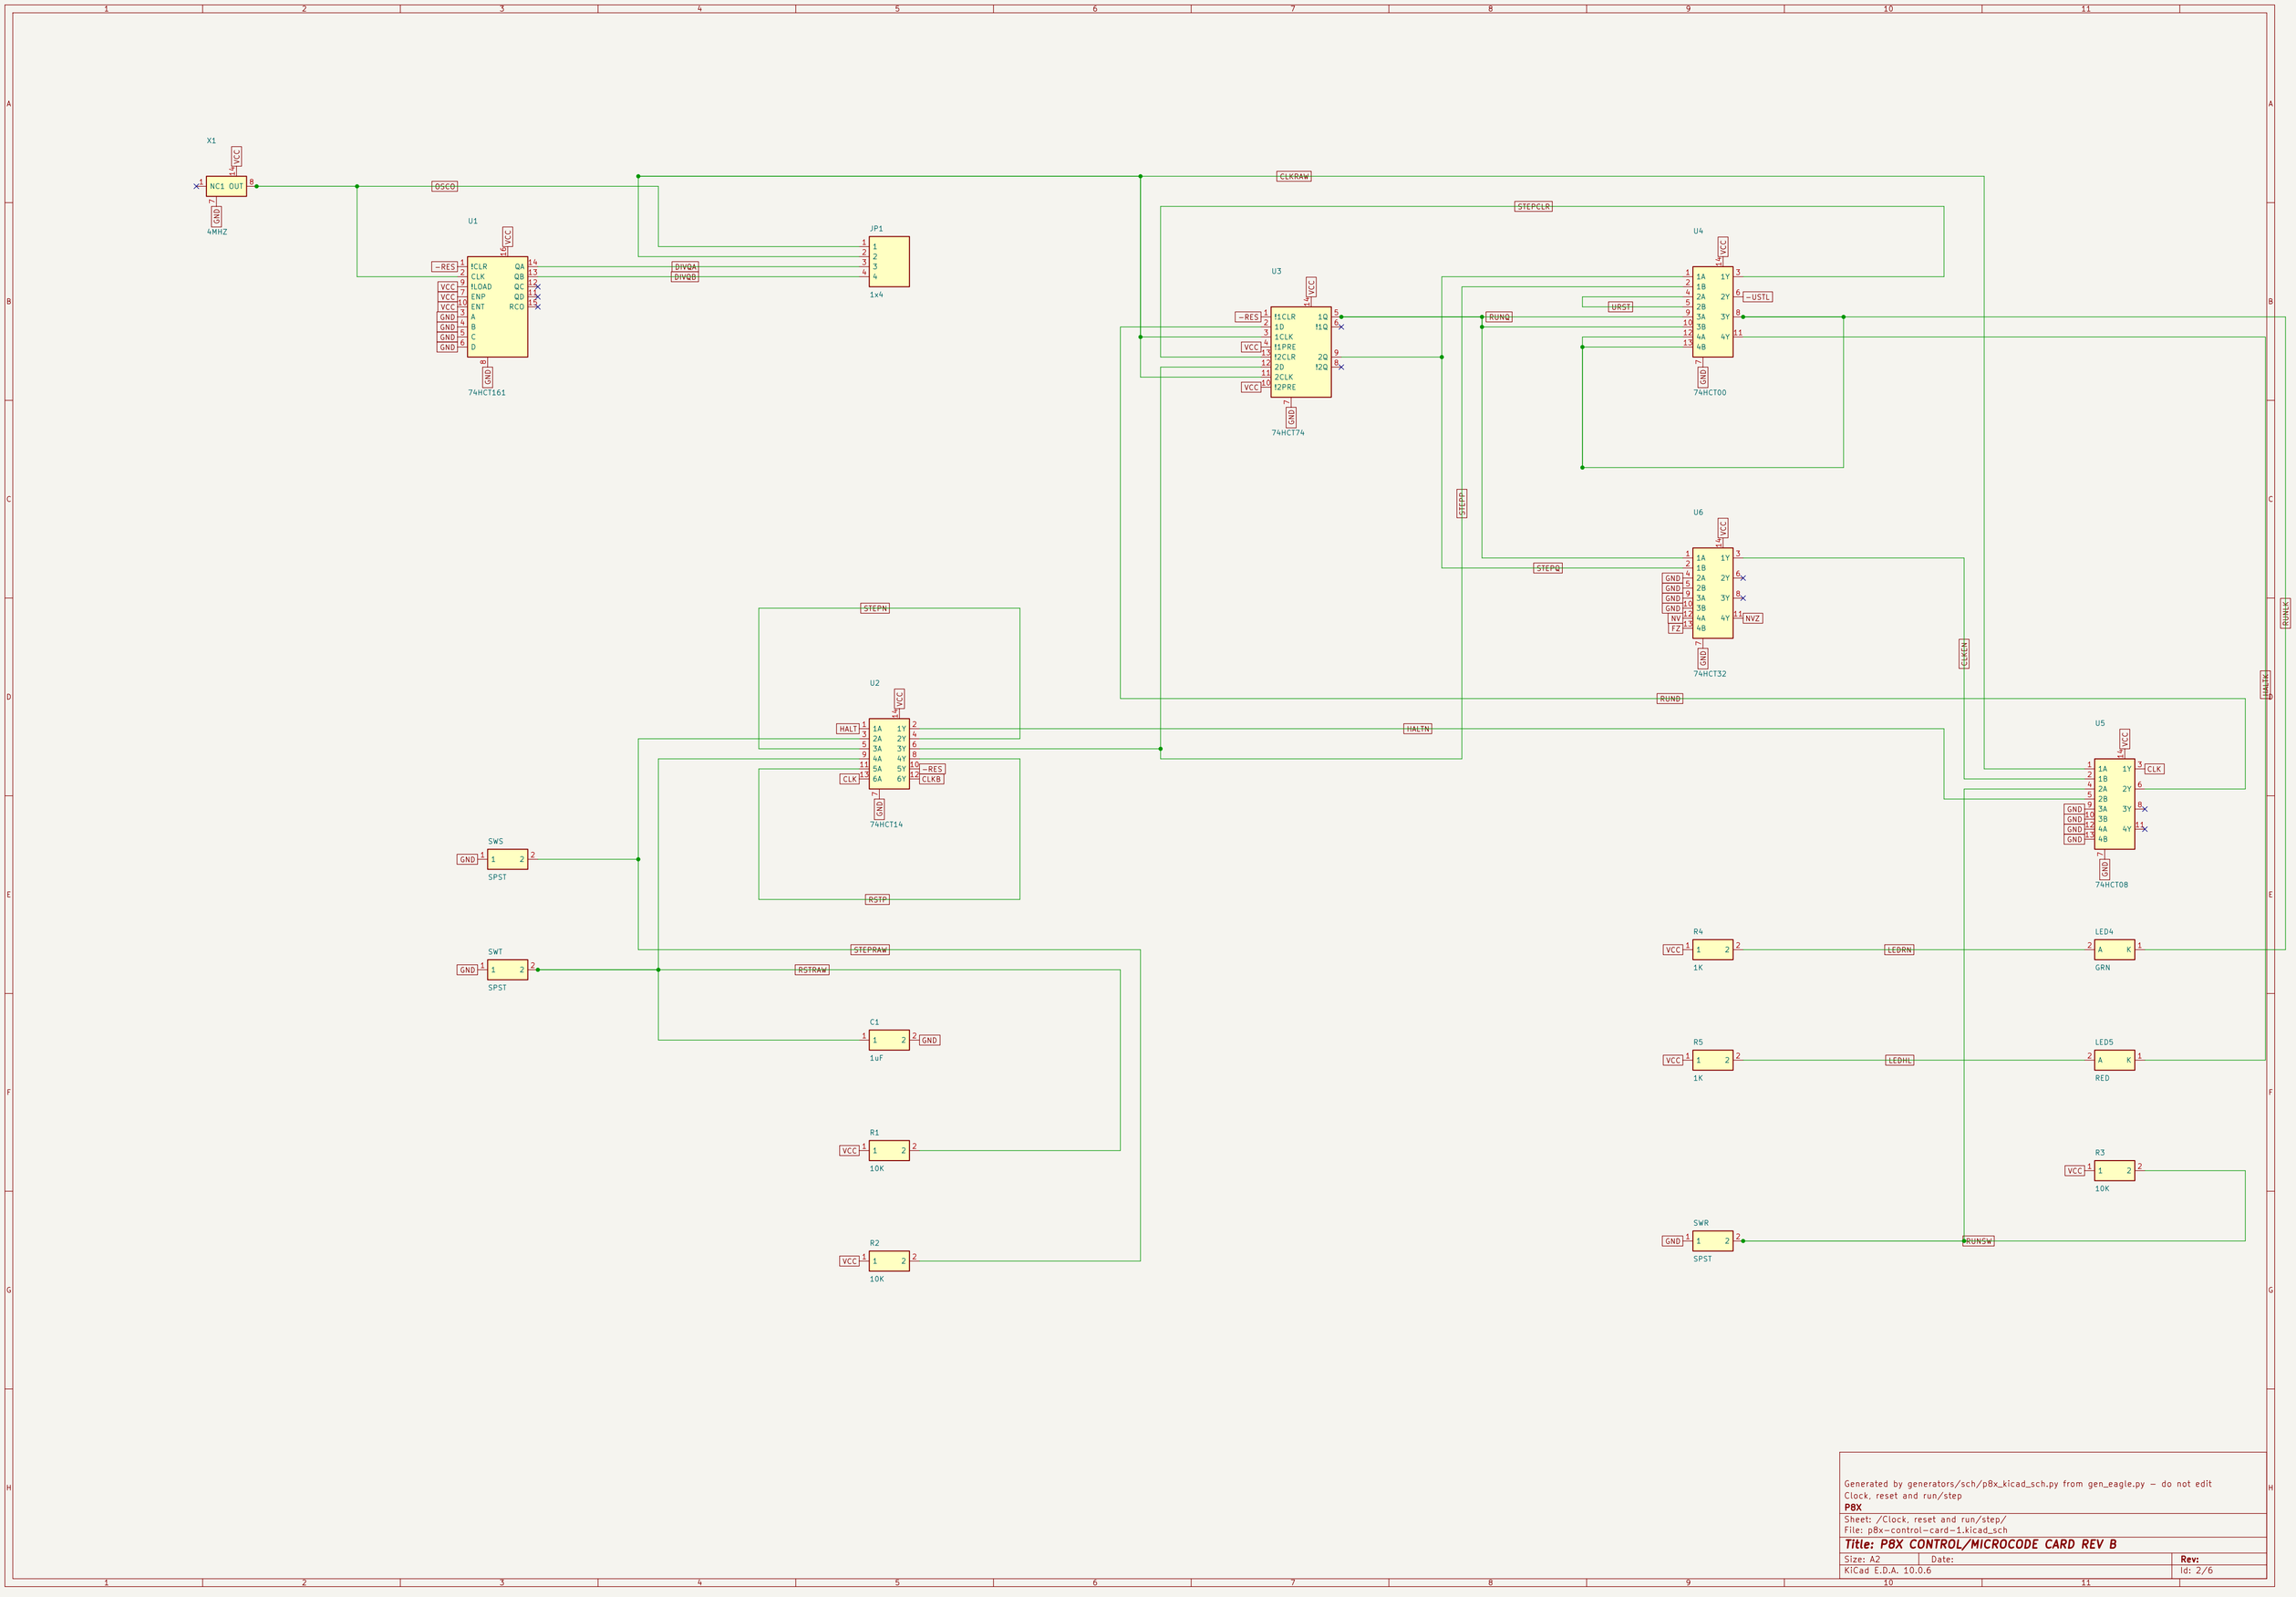
X1
VCC
NC1 OUT
GND
4MHZ
OSCO
U1
VCC
~RES
CLR
CLK
LOAD
ENP
ENT
A
B
C
D
QA
QB
QC
QD
RCO
GND
74HCT161
DIVQA
DIVQB
JP1
1
2
3
4
1x4
CLKRAW
STEPCLR
U3
~RES
!1CLR
1D
1CLK
!1PRE
!2CLR
2D
2CLK
!2PRE
1Q
!1Q
2Q
!2Q
74HCT74
RUNQ
U4
URST
1A
1B
2A
2B
3A
3B
4A
4B
1Y
2Y
3Y
4Y
~USTL
74HCT00
STEPN
STEPQ
U6
GND
NV
FZ
NVZ
74HCT32
CLKEN
RUNEN
HALTN
RUNHX
U2
HALT
CLK
~RES
CLKB
74HCT14
U5
CLK
74HCT08
STEPN
SWS
SPST
RSTP
STEPRAW
SWT
RSTRAW
C1
1uF
R1
10K
R2
10K
R4
1K
LEDRN
LED4
GRN
R5
1K
LEDHL
LED5
RED
R3
10K
SWR
SPST
RUNSW
Generated by generators/sch/p8x_kicad_sch.py from gen_eagle.py — do not edit
Clock, reset and run/step
P8X
Sheet: /Clock, reset and run/step/
File: p8x-control-card-1.kicad_sch
Title: P8X CONTROL/MICROCODE CARD REV B
Size: A2
Date:
Rev:
KiCad E.D.A. 10.0.6
Id: 2/6

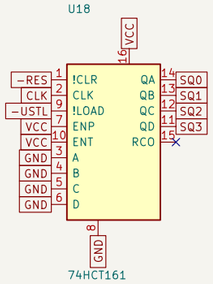

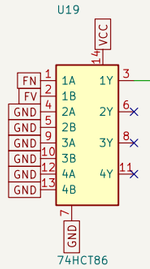

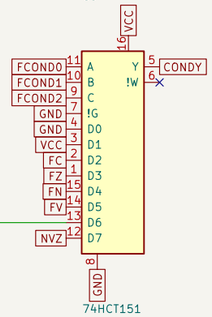

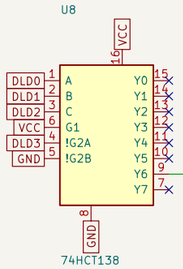


Generated by generators/sch/p8x_kicad_sch.py from gen_eagle.py — do not edit
Instruction register, step counter, condition mux


P8X


Sheet: /Instruction register, step counter, condition mux/
File: p8x−control−card−2.kicad_sch


Title: P8X CONTROL/MICROCODE CARD REV B

Size: A3	Date:	**Rev:**
KiCad E.D.A. 10.0.6		Id: 3/6

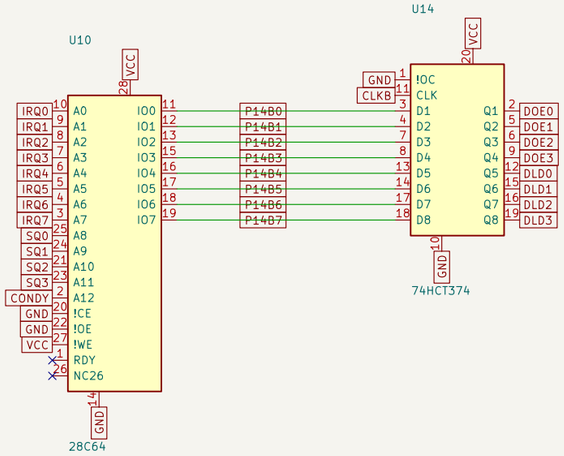

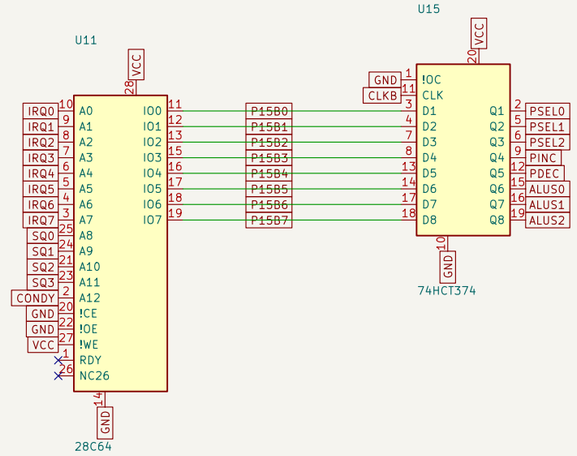

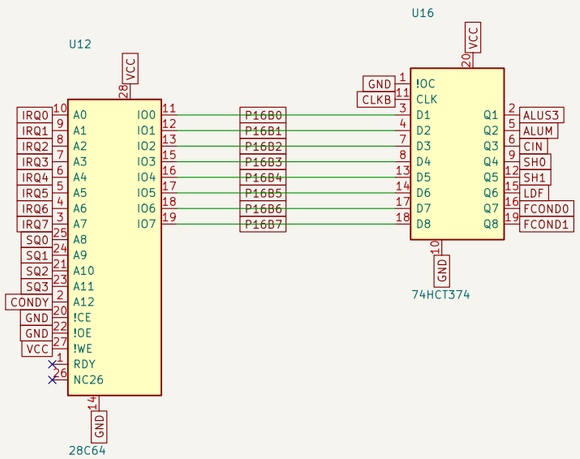

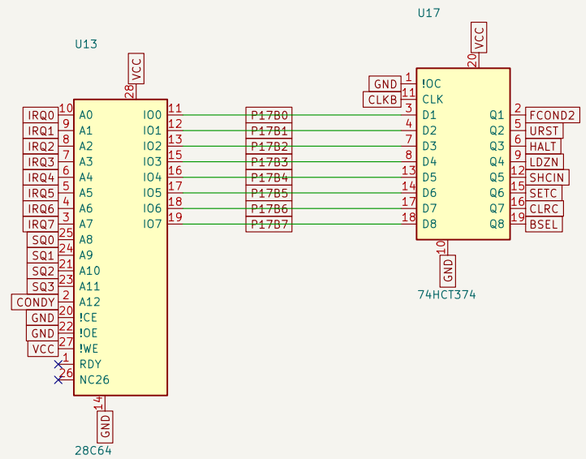


Generated by generators/sch/p8x_kicad_sch.py from gen_eagle.py — do not edit
Microcode ROMs and pipeline register


P8X

Sheet: /Microcode ROMs and pipeline register/
File: p8x-control-card-3.kicad_sch

Title: P8X CONTROL/MICROCODE CARD REV B

Size: A3	Date:	**Rev:**
KiCad E.D.A. 10.0.6		Id: 4/6

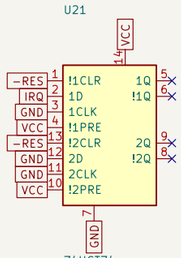

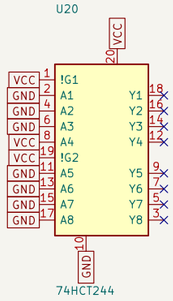


Generated by generators/sch/p8x_kicad_sch.py from gen_eagle.py — do not edit
Interrupt controller (DNP)

P8X

Sheet: /Interrupt controller (DNP)/
File: p8x-control-card-4.kicad_sch

Title: P8X CONTROL/MICROCODE CARD REV B

Size: A3	Date:	**Rev:**
KiCad E.D.A. 10.0.6		Id: 5/6

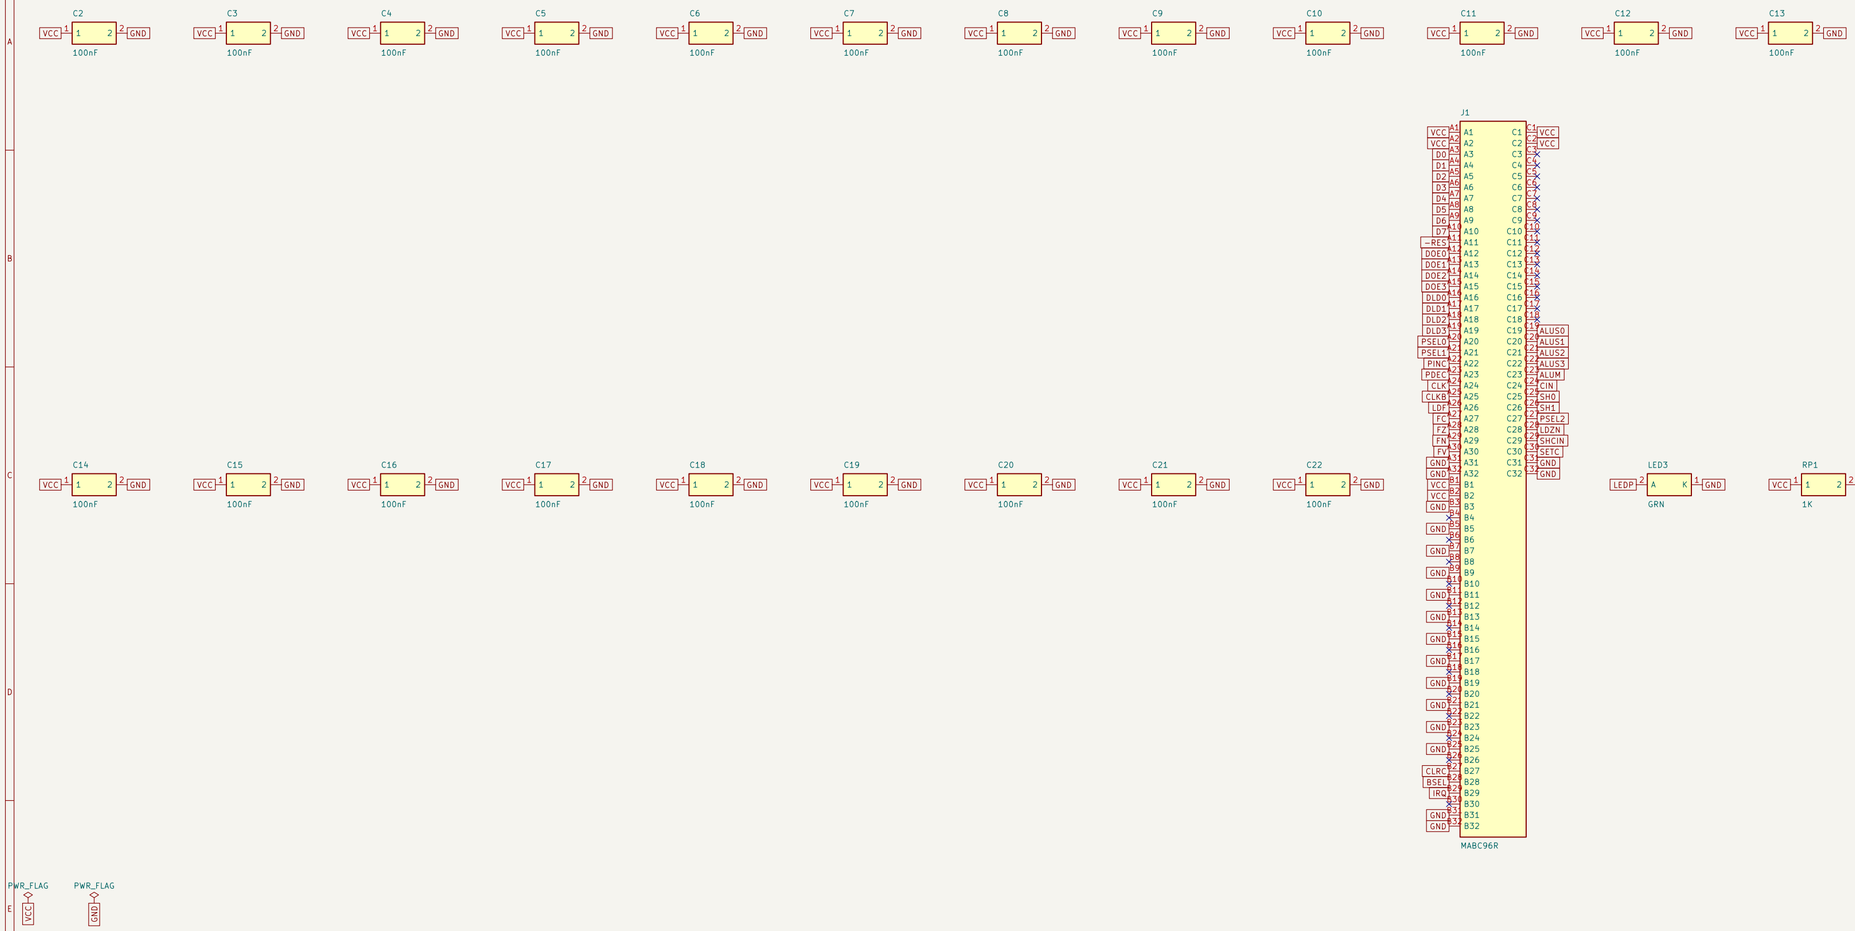

Generated by generators/sch/p8x_kicad_sch.py from gen_eagle.py — do not edit
Bus connector, decoupling

P8X

Sheet: /Bus connector, decoupling/
File: p8x-control-card-5.kicad_sch

Title: P8X CONTROL/MICROCODE CARD REV B

Size: A2	Date:	**Rev:**
KiCad E.D.A. 10.0.6		Id: 6/6