


285802131

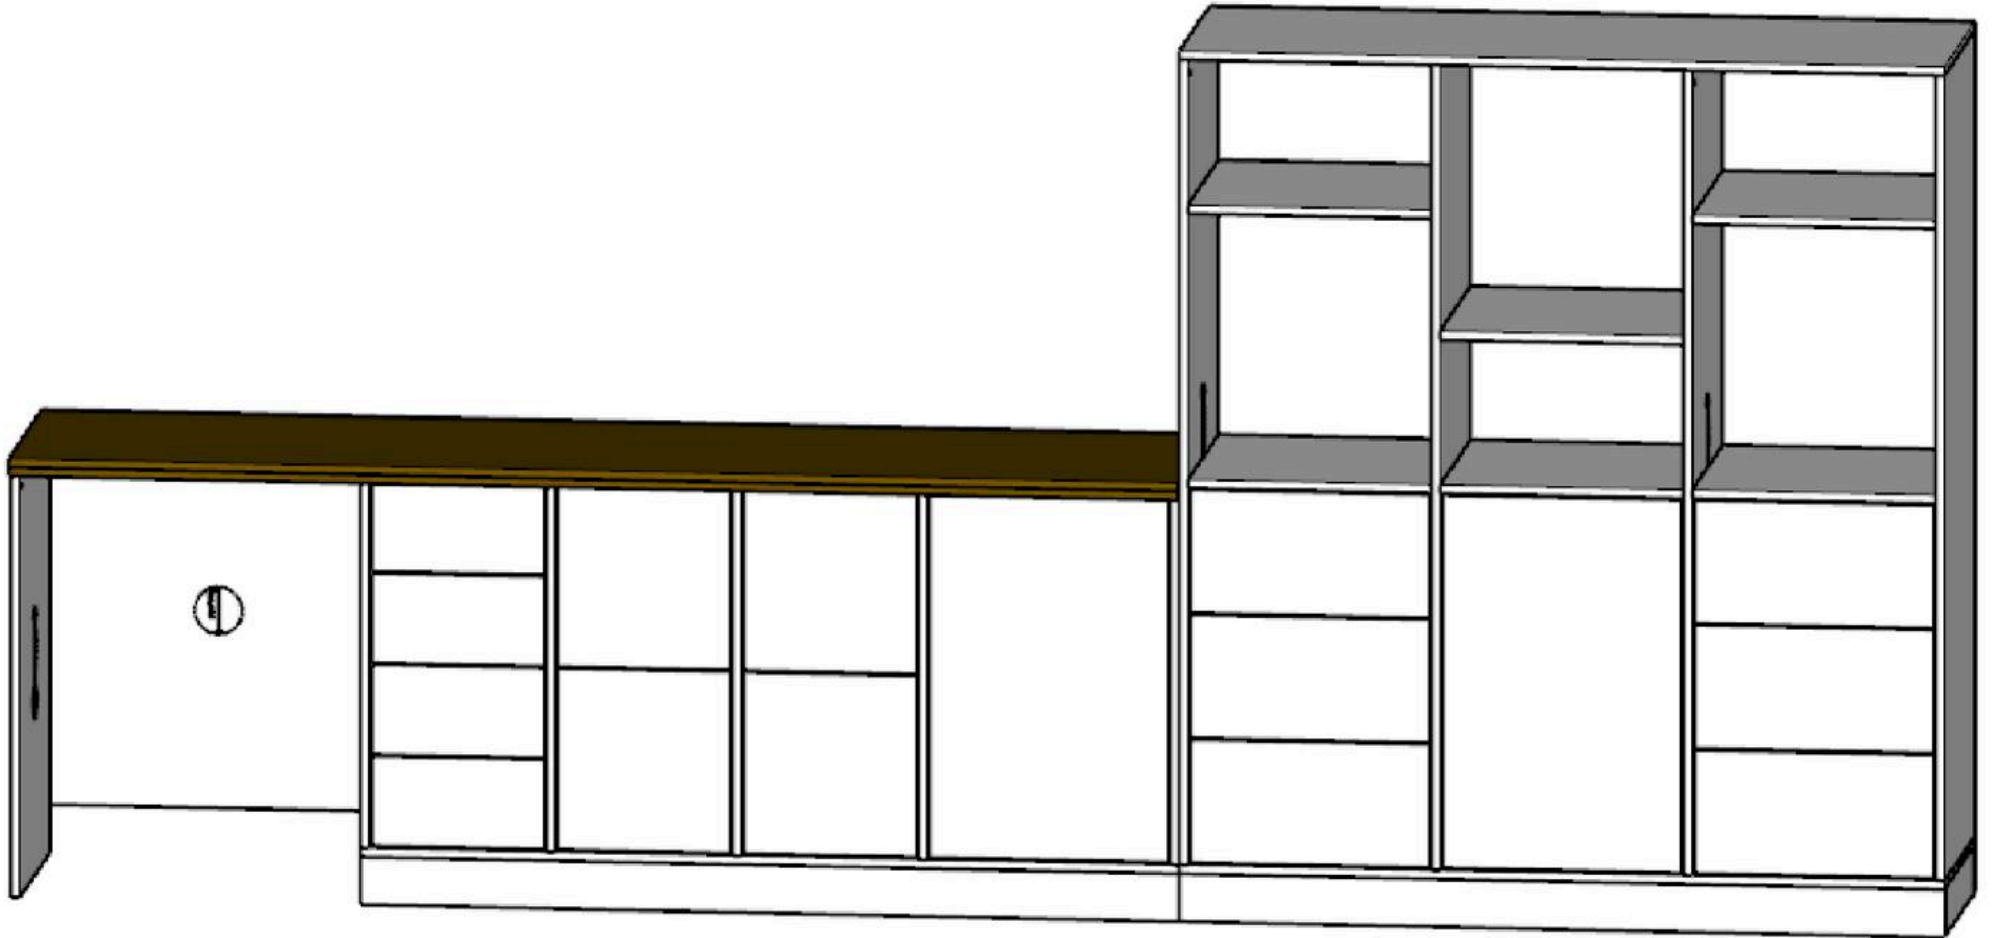


Accessories Used



Minifix Cam
Lock



Minifix Bolt

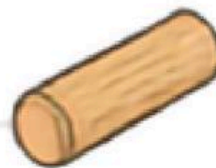

Wood Dowel



Decor Fixing Pin



Corner Bracket



Drawer Slide 40



Slide & Hinge
Screws



Hinge

Base Assembly

Parts

23



Base

24



Short Sides

26




Long Sides

Assembling the Sides with the Back Panel


2

After fitting the bolts, join them to the sides.

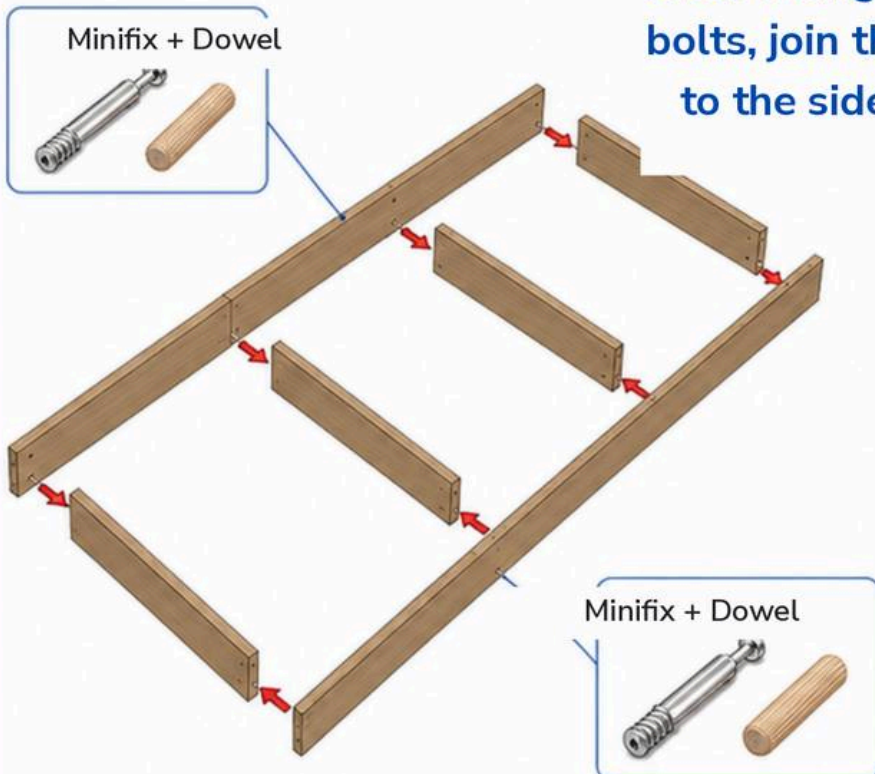

1

Insert the wood dowel and Minifix bolt into the designated holes on the long sides.

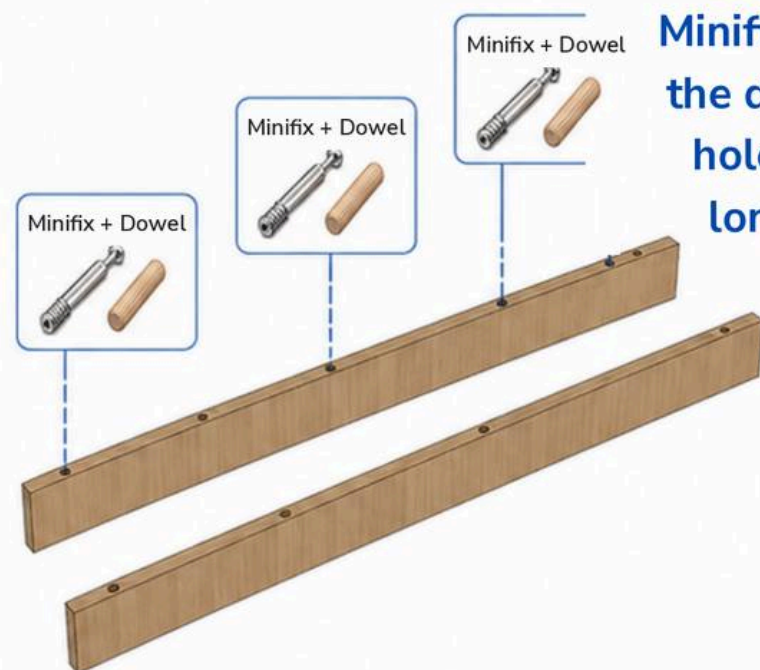


Important: make sure the two pieces face each other in the correct direction before tightening the Minifix fully.

Base Assembly (continued)


4

Place the base on top of the frame.

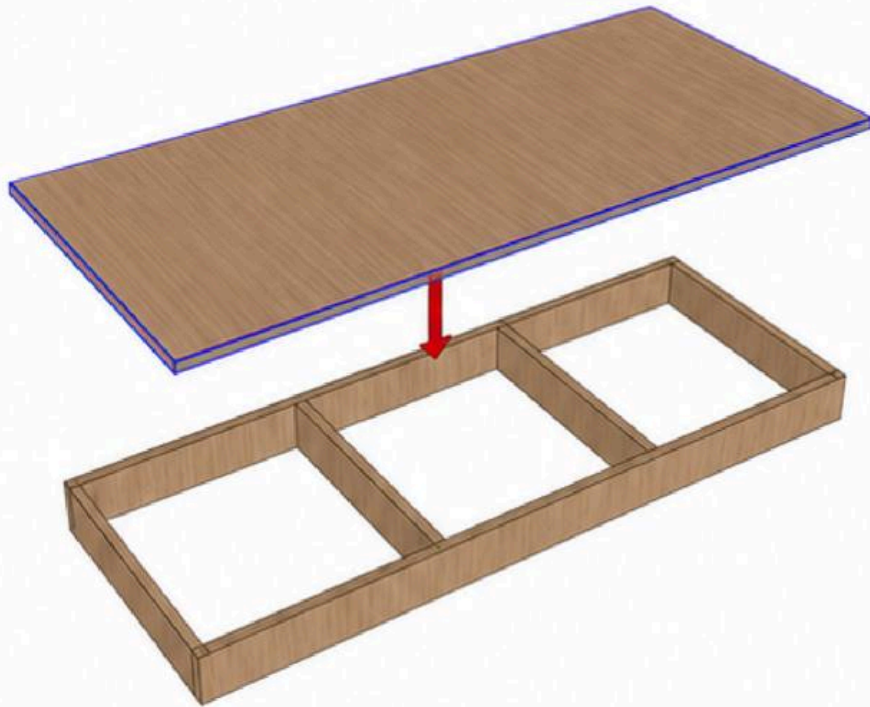

3

Place the Minifix cam in the hole, then turn it clockwise until it locks.

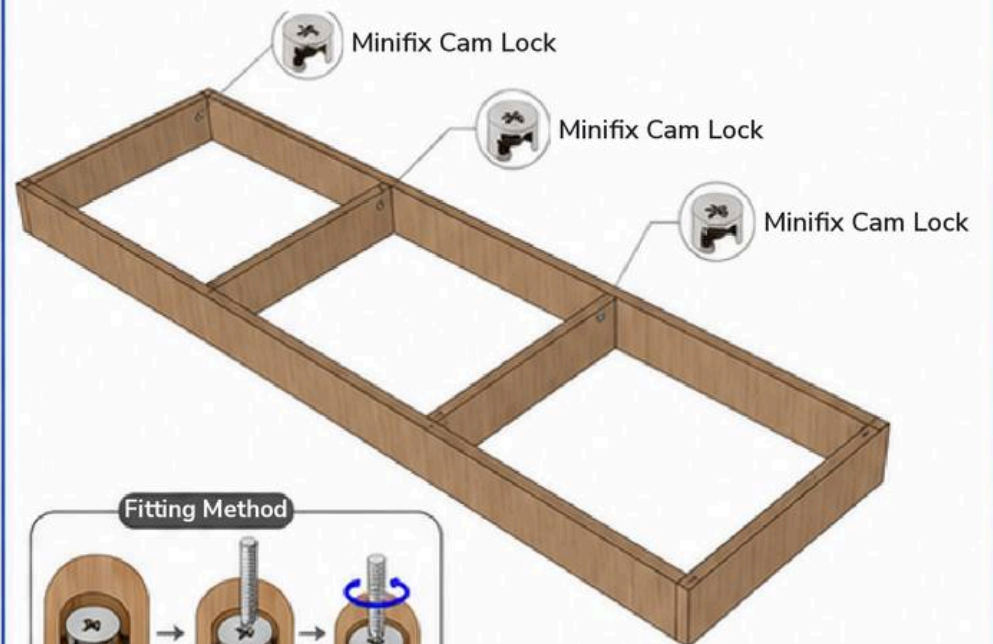


Fitting Method

Turn the Minifix cam clockwise until it locks.

5


Fix the corner brackets in the marked positions using the bracket screws and a drill. Make sure all screws are fully tightened.

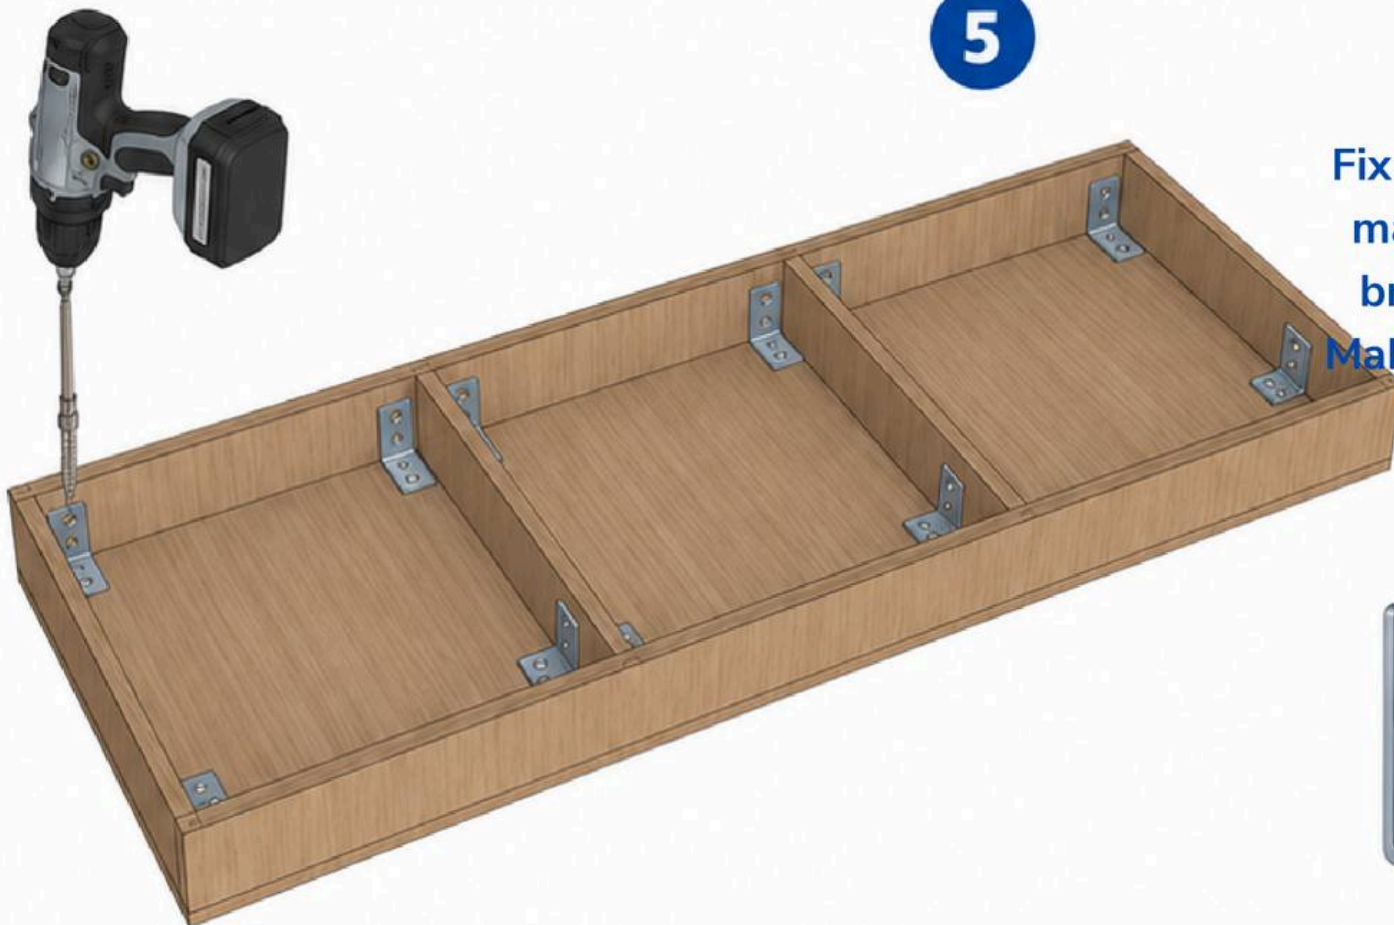

Drawer Assembly


Parts

23

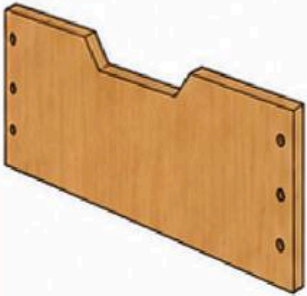


Front Face

24

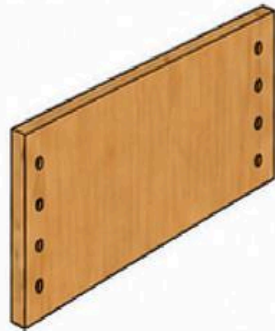

Right Side

26

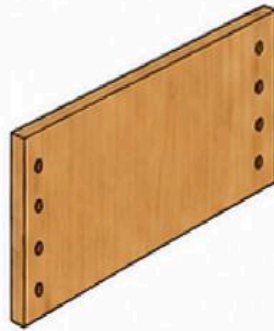

Left Side

25



Back Panel

27




Bottom Panel

Assembling the Sides with the Back Panel

2


Bring the pieces together, then tighten the Minifix.

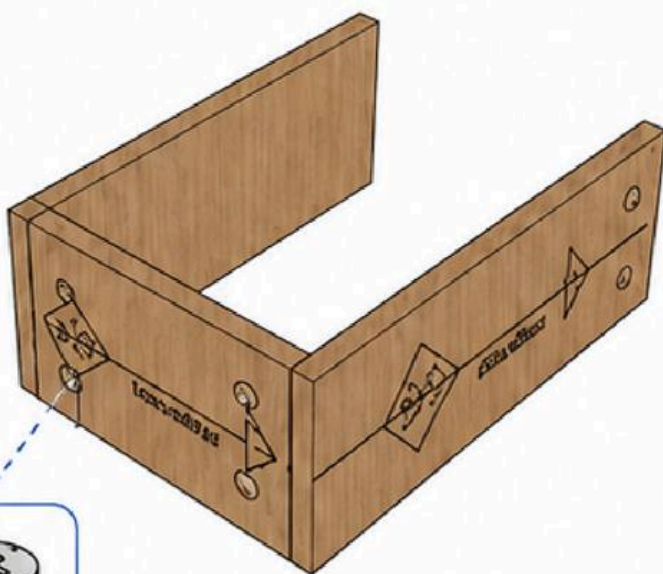

Minifix

1

Fix the back panel to the sides, then insert the wood dowel and Minifix bolt into the designated holes.

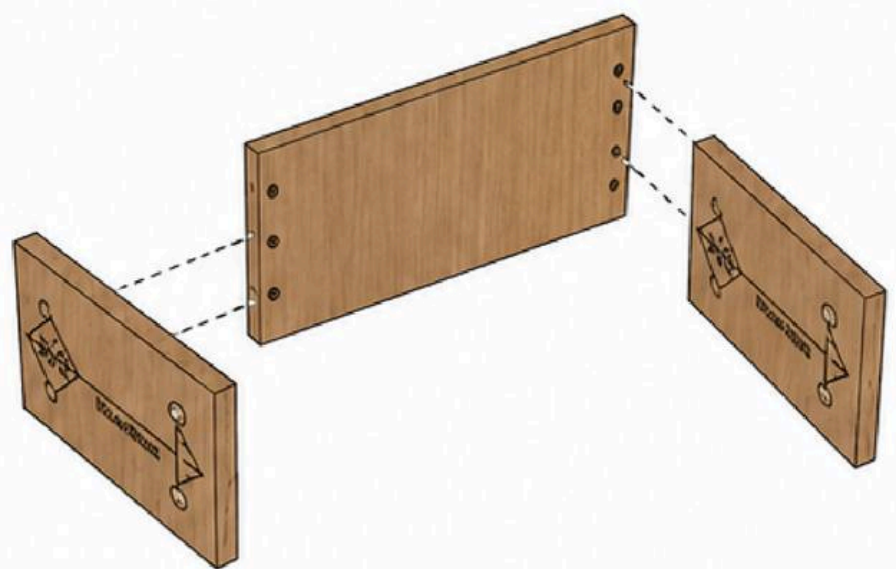

Minifix Bolt




Wood Dowel

Important: make sure the two pieces face each other in the correct direction before tightening the Minifix fully.

Fitting the Front Panel


4

Fit the front in place without final tightening, ready to slide the bottom panel into the groove.

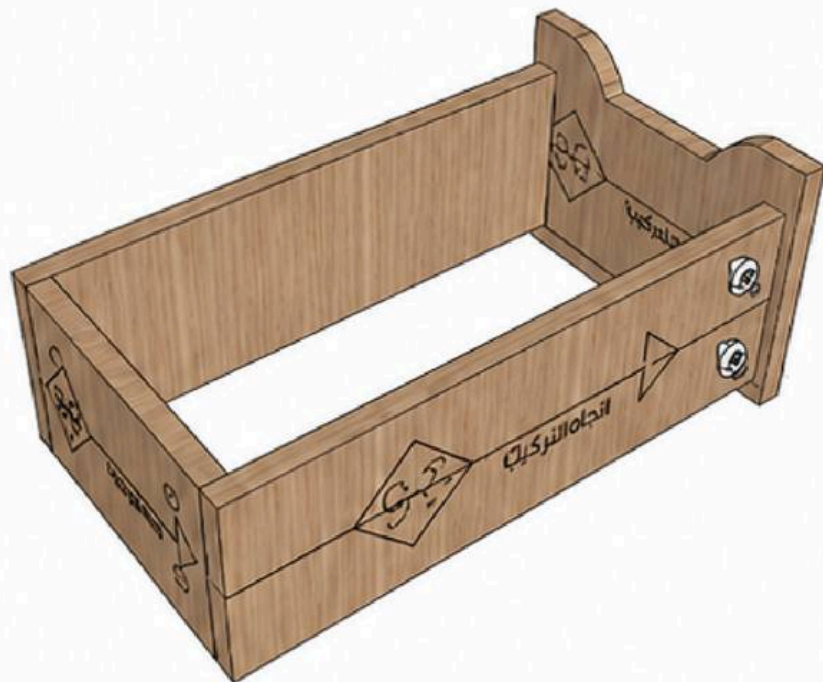

3


After assembling the sides with the front, fit the front panel.

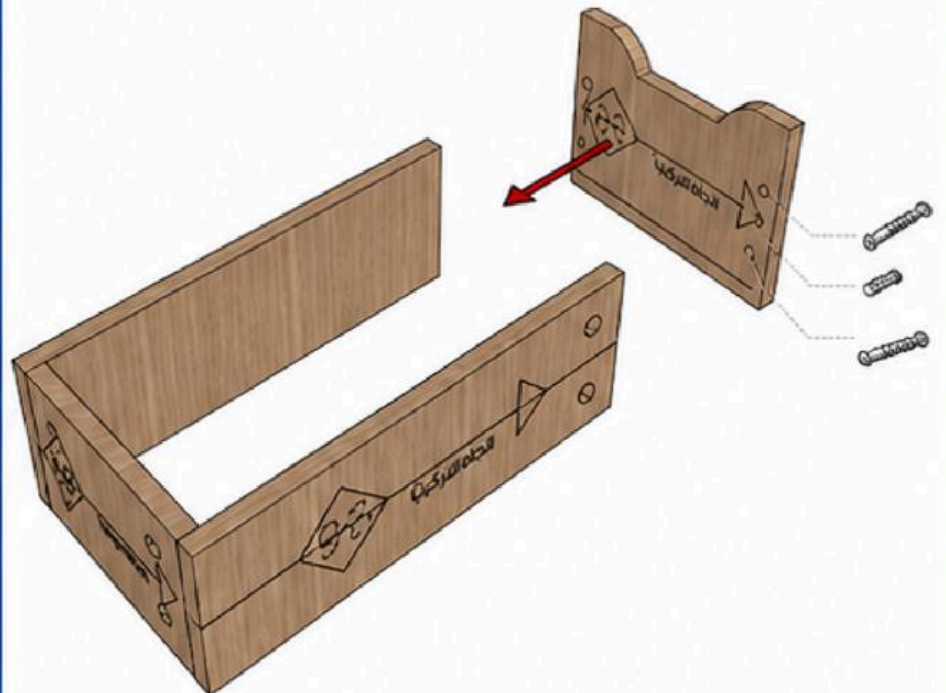

Fitting the Decor


6

Fix the remaining edges of the bottom panel from underneath using the base fixing screws.

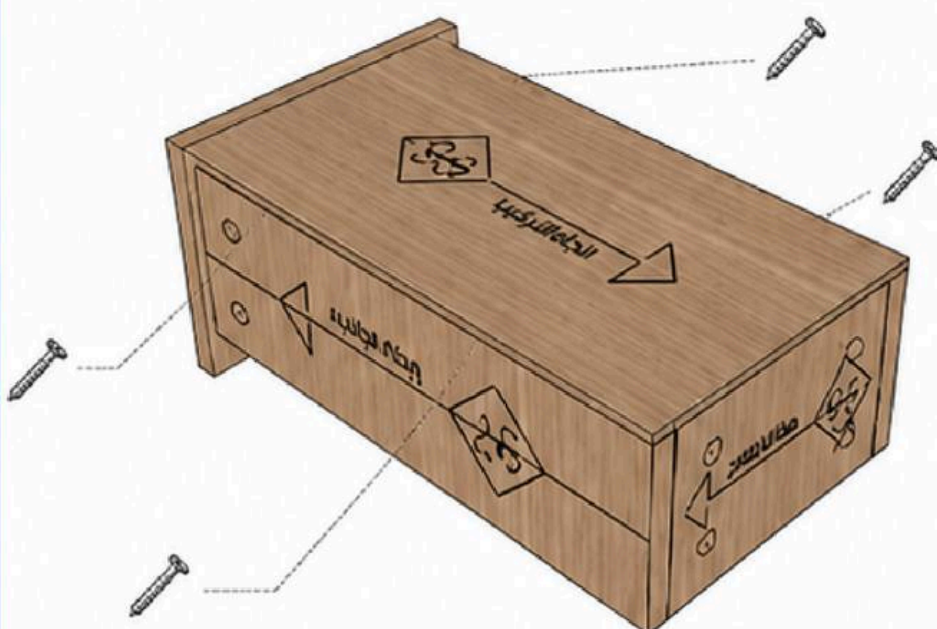

5

Slide the raised edge of the bottom panel into the groove in the front until it is fully seated.

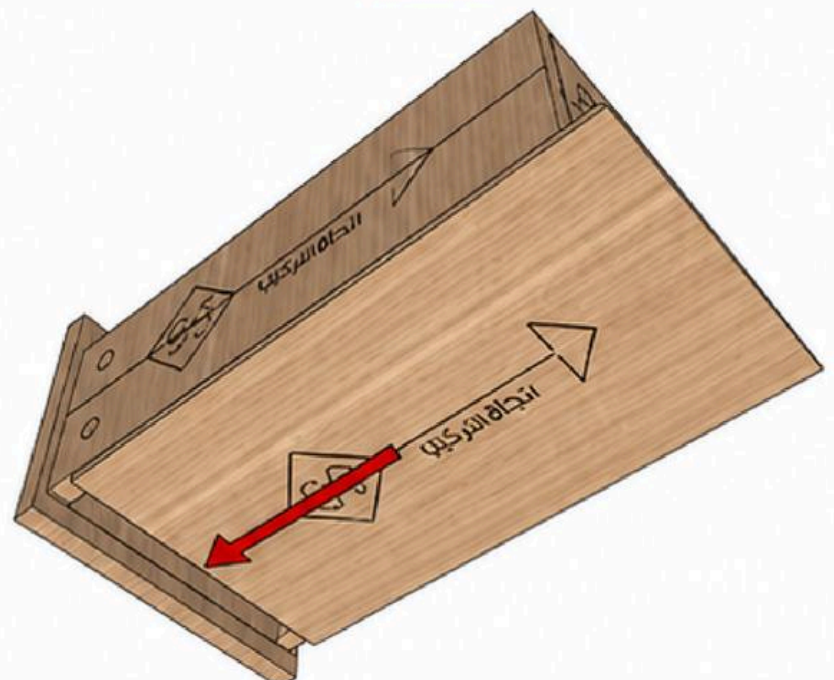

Separating the Slide


7



7

Pull the inner slide all the way out until the release lever appears.

8

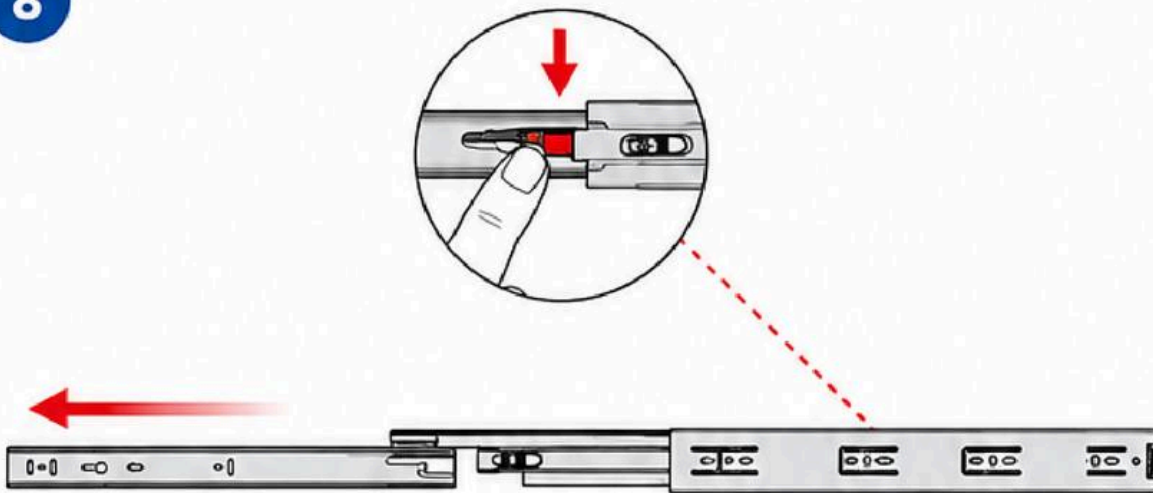


8

Press the release lever, then pull the inner rail out until it separates completely.

Fixing the Slide to the Drawer Side

9

Fit the slide on the centre line, flush with the front, then fix it with screws along the same line.

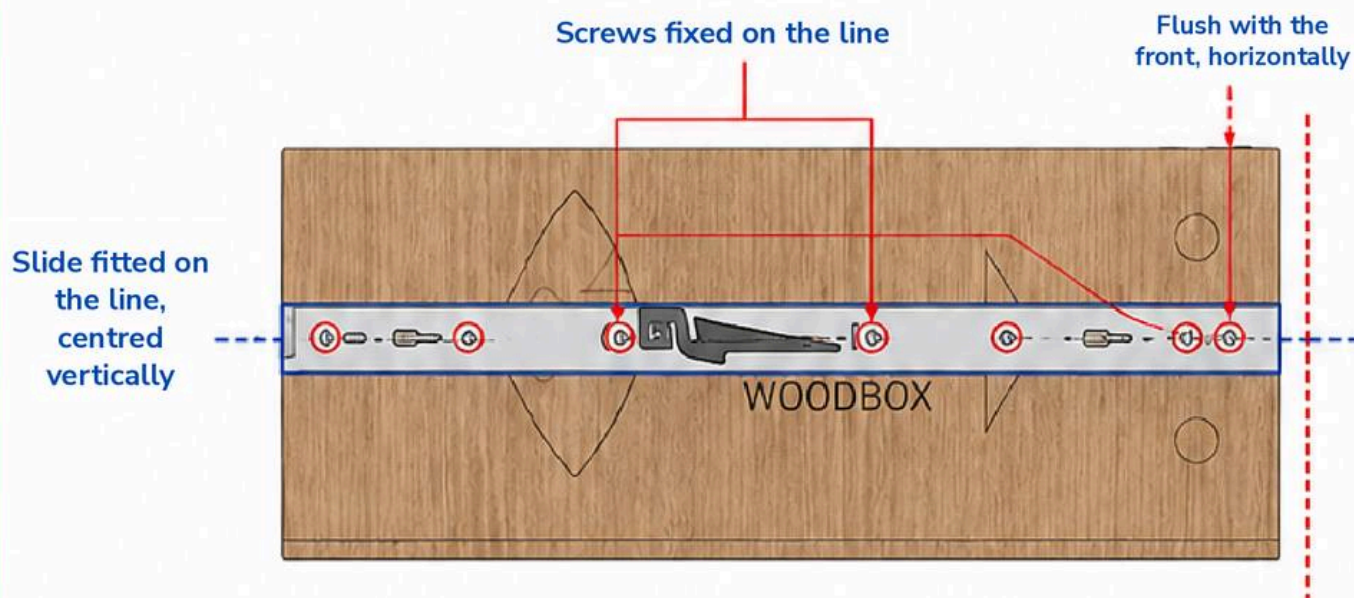


9


Fit the slide on the centre line, flush with the front, then fix it with screws along the same line.

Assembling the Side Panels and Decor


Parts

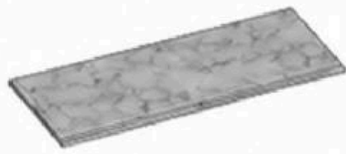

Top Panel

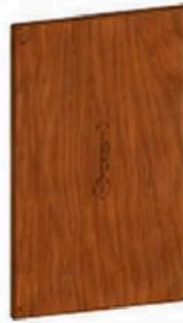

Side Panels

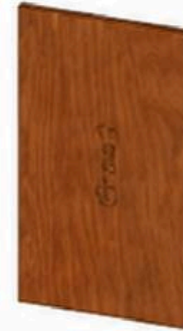

Decor Panels

Fixing the Side Panels


2

Fit the side panels onto the base, then the top. Make sure the back mark faces up and the panels follow the number order from right to left: 1-2-3-4.



Note

Put the back mark on this piece at the top edge, so that the mark always points upwards.

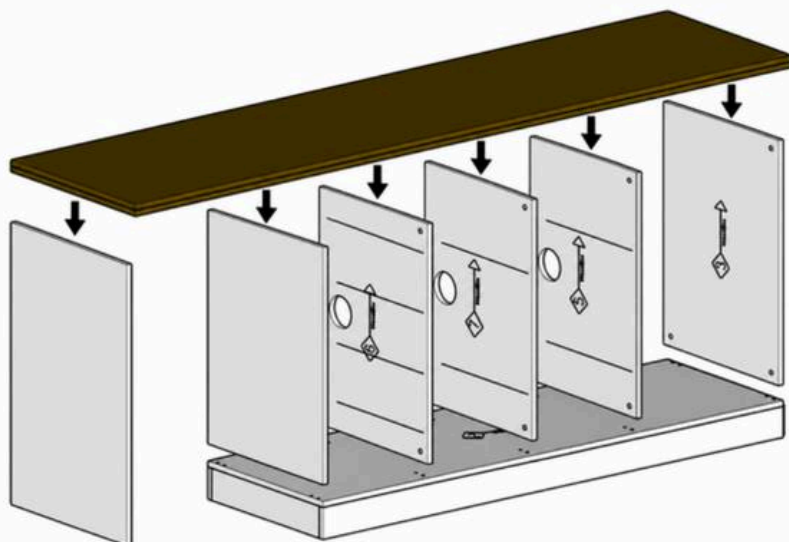


1

Insert the wood dowels and Minifix bolts into the designated holes in the base and the top panel.



3


Place the Minifix cam in the hole, then turn it clockwise until it locks on all the side panels.

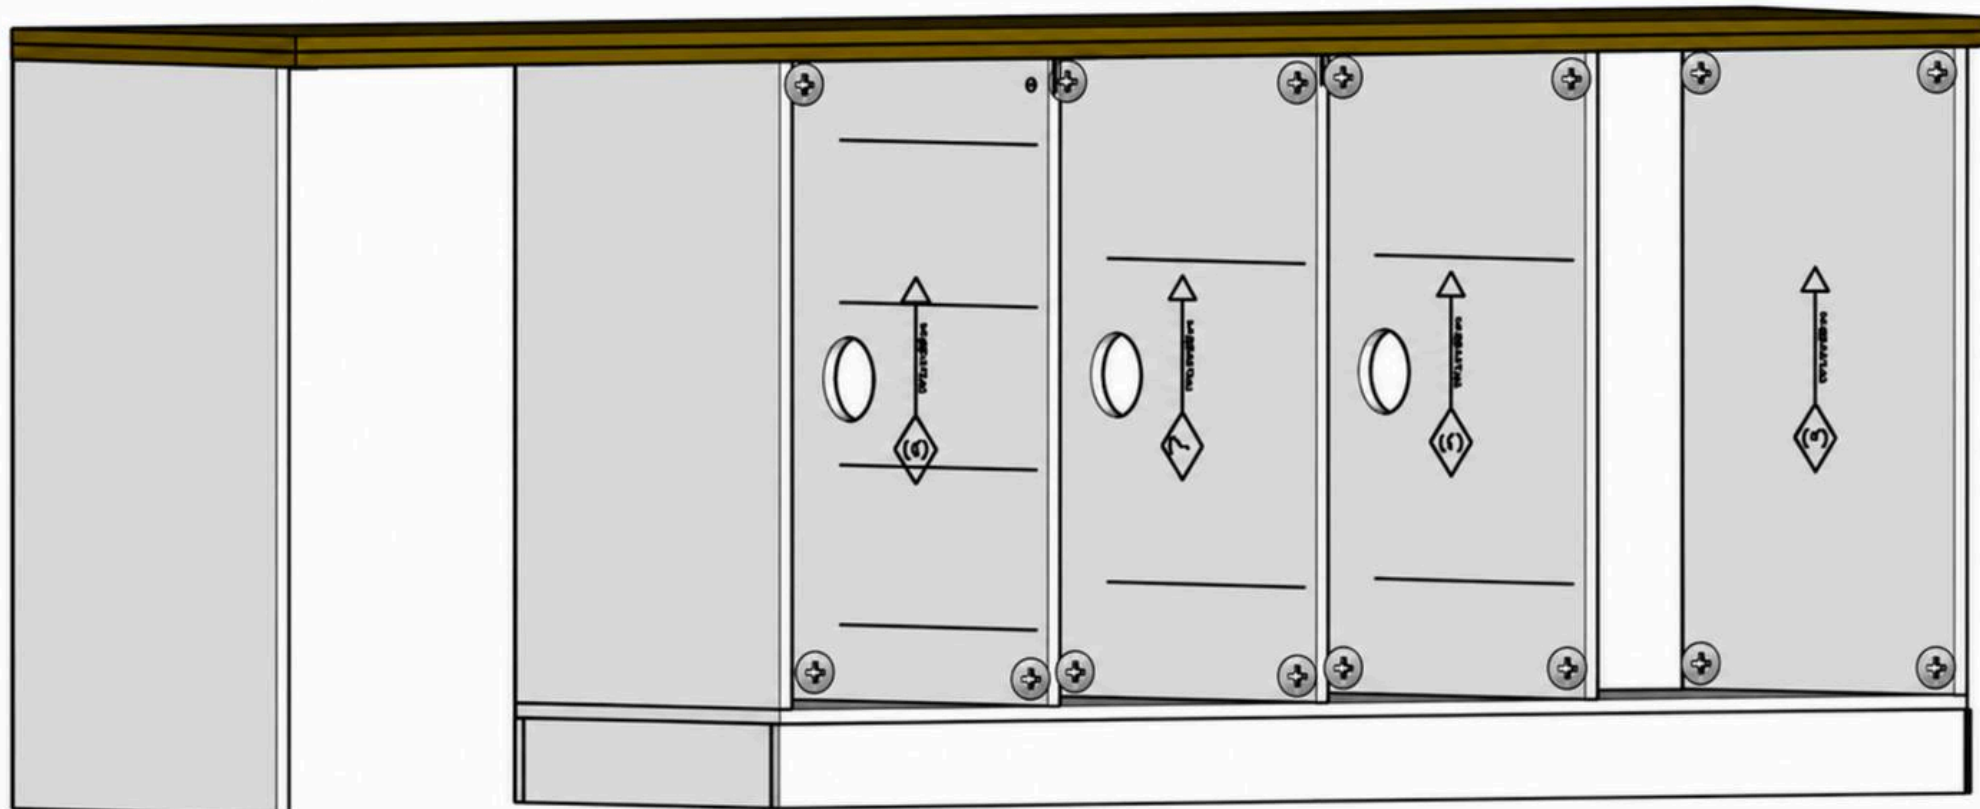

Fitting the Decor

Fixing the Decor from the Back


2

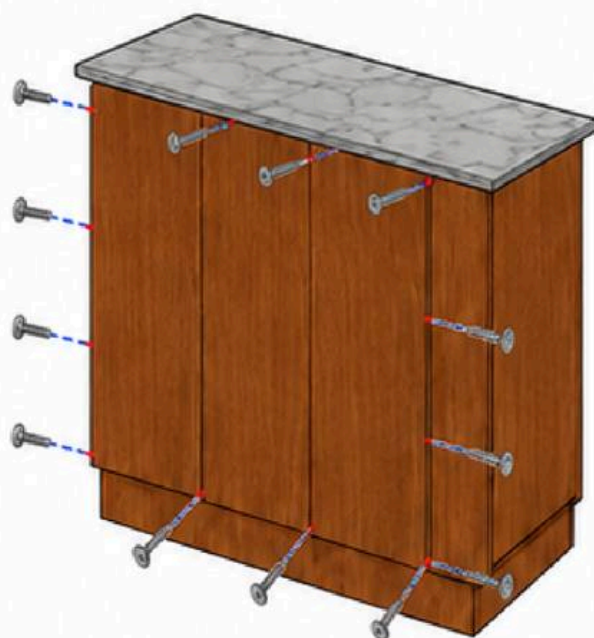

Fix the decor panel from the back using the decor fixing pins through its marked holes, as shown.

Inserting the Decor from the Back

1

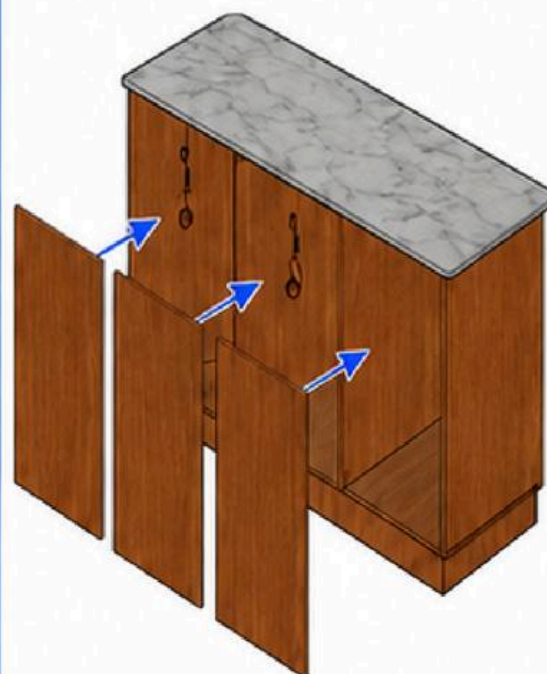


Insert the decor panel from the back into the designated openings until it is fully seated.

Fixing the Slide


1

Position the slide flush with the side, from the front.

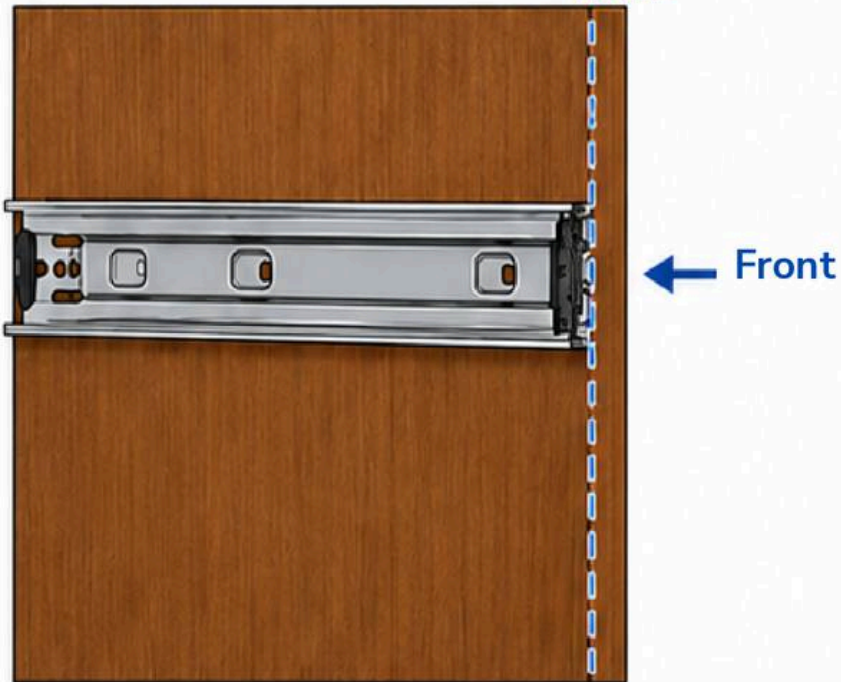

2

Fix the slide with screws using the drill.

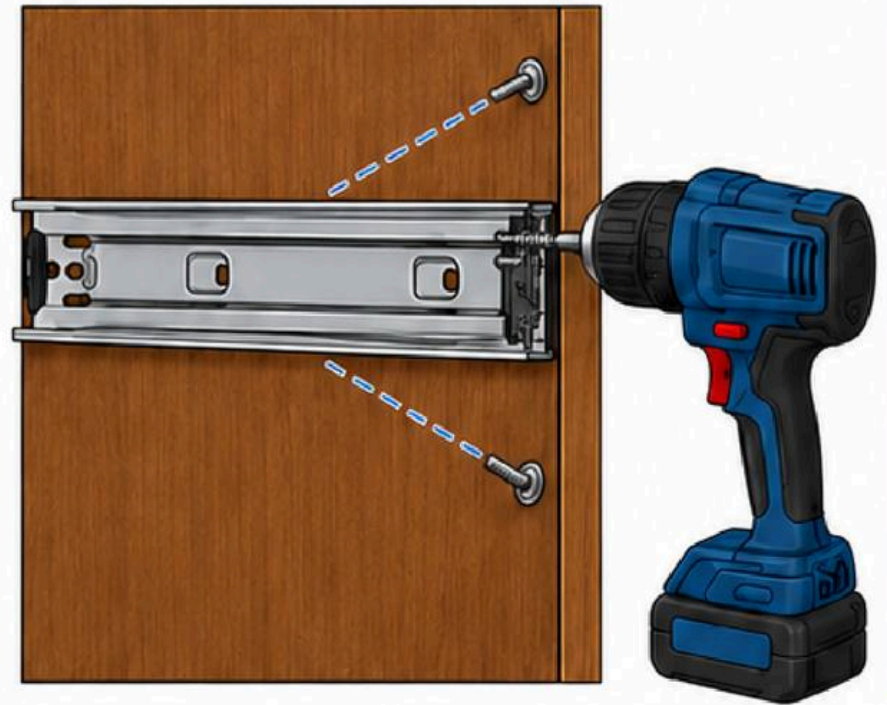

Fitting the Door

2

Fix the hinge to the cabinet side using the screws and the drill.



1

Fix the hinge to the door using the screws and the drill.




Cabinet Hinge Mounting Types

Choose the right hinge type for correct fitting and a consistent look



Inset

Side view (section)

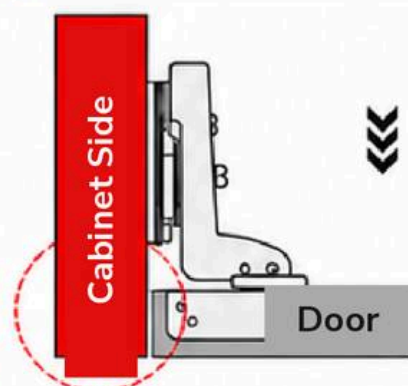

Real example



Explanation

The door sits inside the cabinet opening between the two sides, so the side is not visible from outside. It gives a flush, neat look and needs more precise adjustment during fitting.

Side Cabinet Assembly Guide


Parts



Base



Two Sides

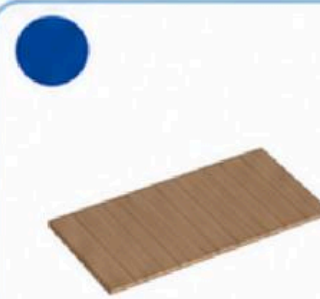

Top




Shelves

Frame Assembly

2

Slide the sides onto the base, then place the top on them as shown.

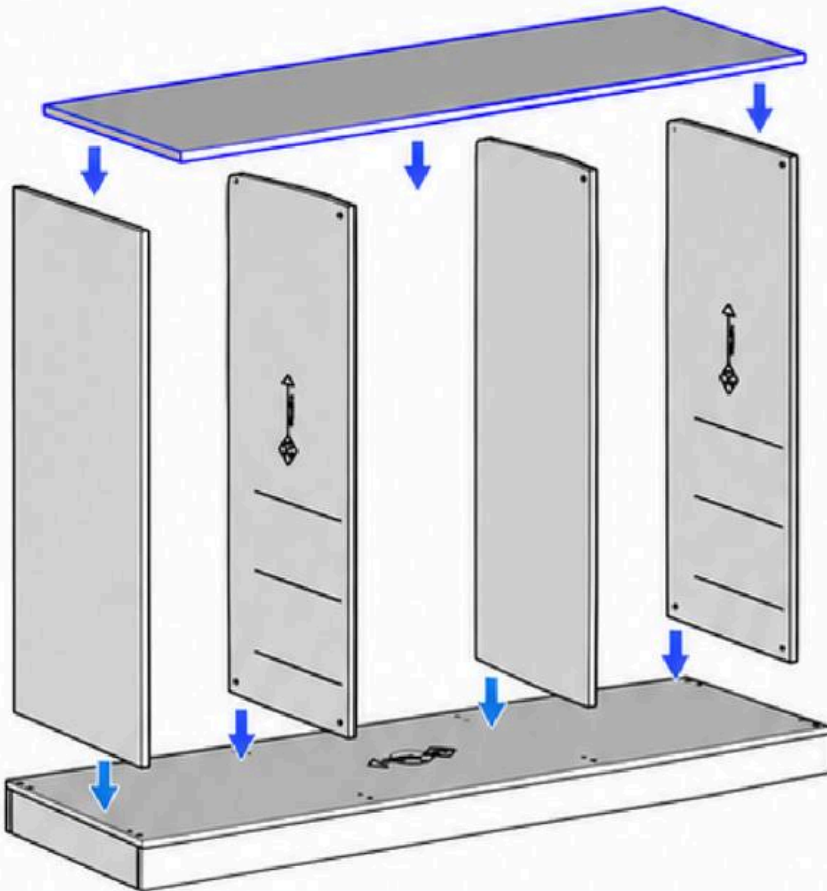


1

Fit the Minifix bolts into the top panel and the base.




Minifix Bolt

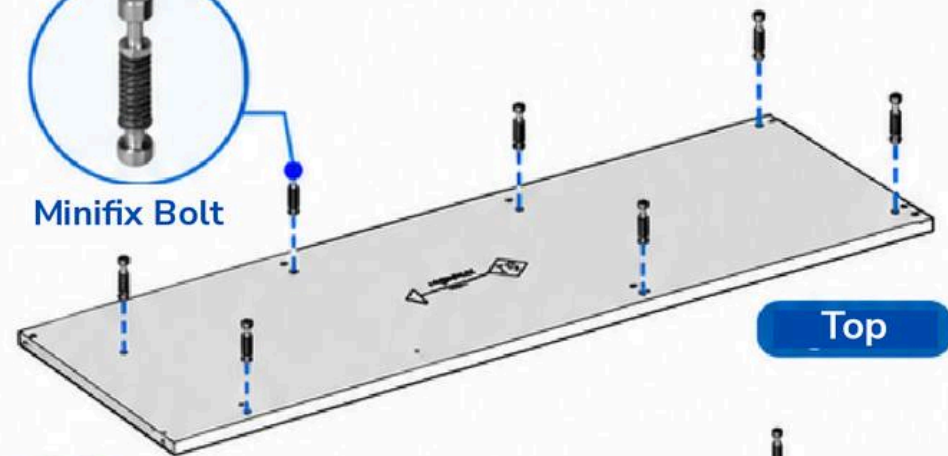

Top



Minifix Bolt

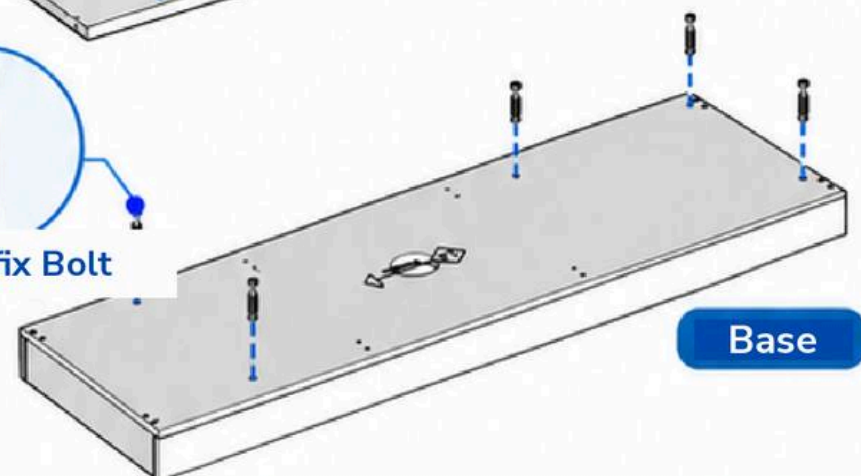


Base

3


Tighten the sides firmly with the Minifix cam locks at the marked positions.

Turn the cam clockwise until it locks.

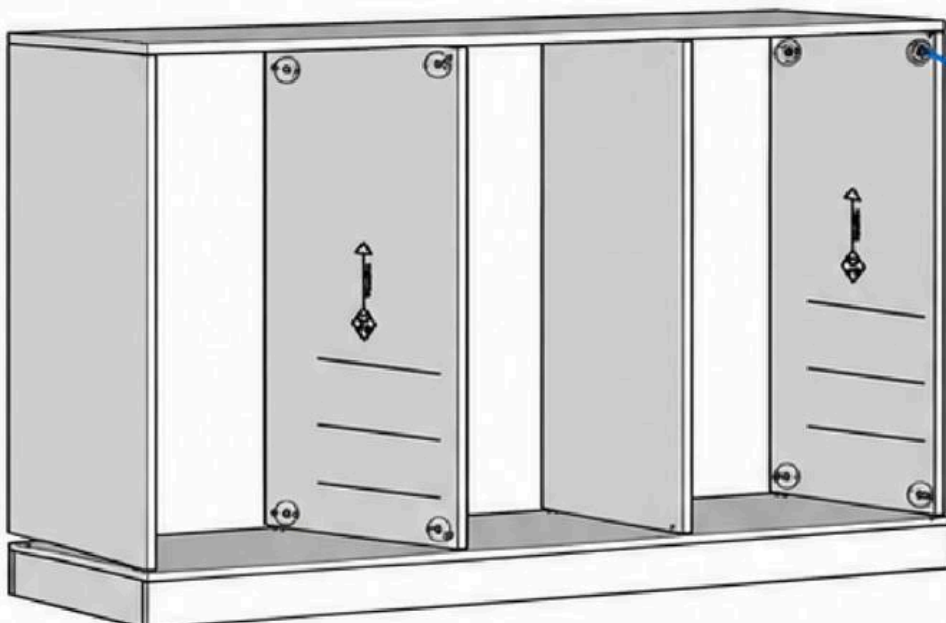

2

Fixing the Slide

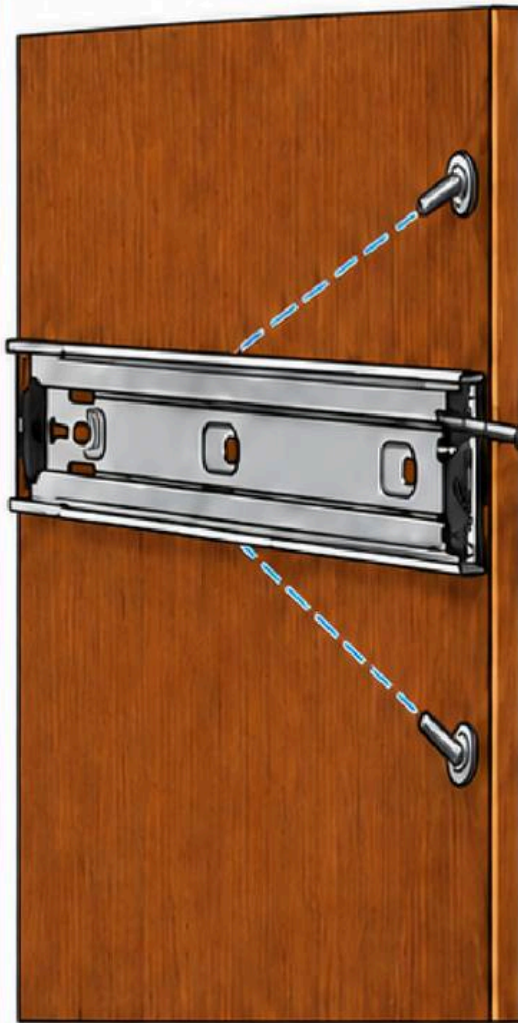


Position the slide flush with the side from the front, then fix it with screws using the drill.



1

Fitting the Back Decor

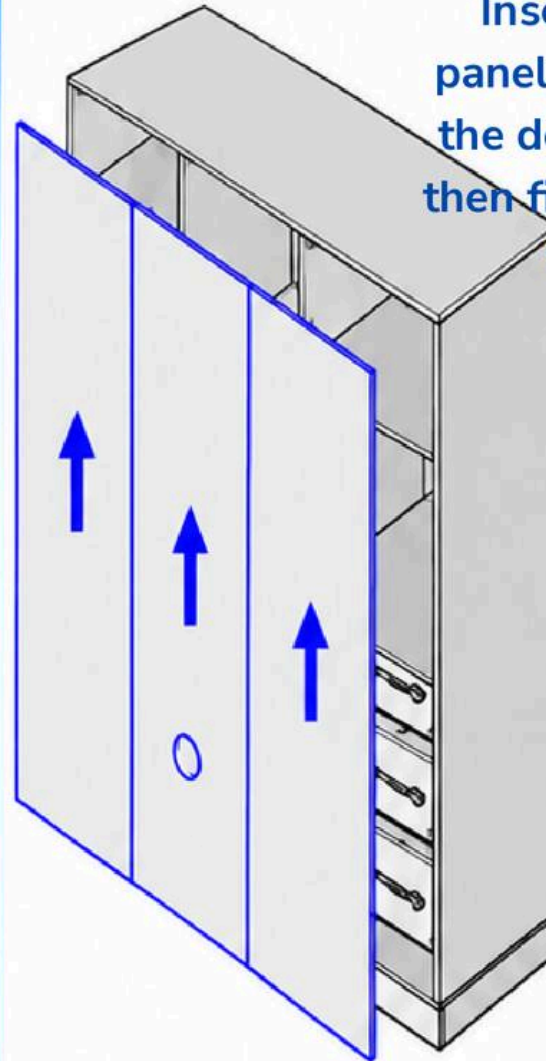


Insert the back decor panels from the back into the designated openings, then fix them in place with the decor pins.



Decor Pin

4

Fixing the Shelves with Brackets

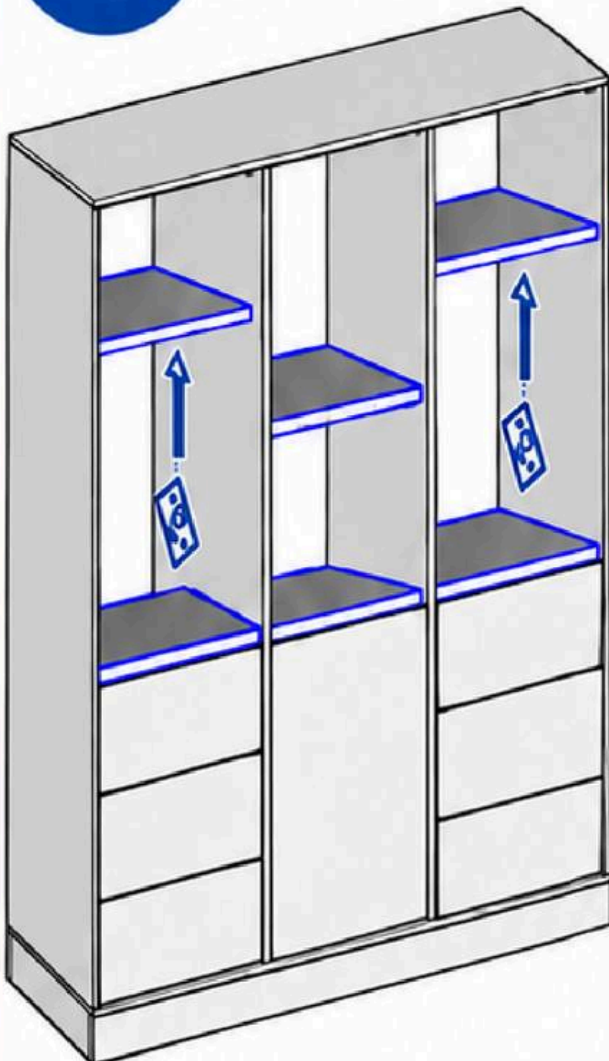


Fix the shelves marked in blue using the corner brackets at the designated positions.



Corner Bracket

3

Inserting the Drawers

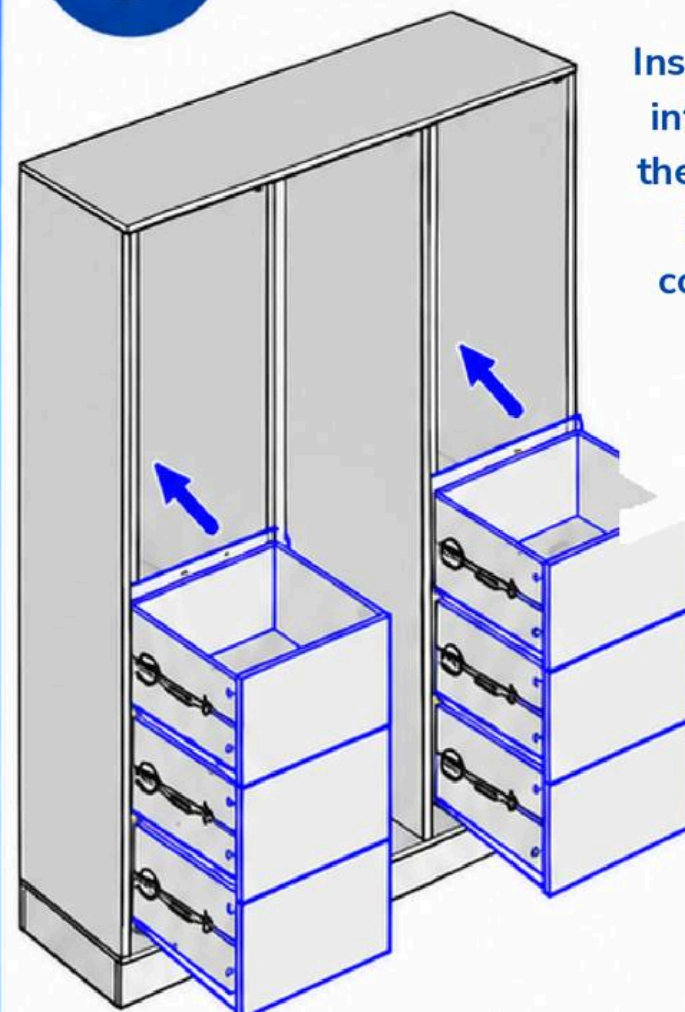

Insert the drawers into their places, then push them in until they sit correctly on the slides.