



The Heart

Respiratory Physiology




Peak Flow

Spirometer

Peak Flow

Airway Diameter is key!

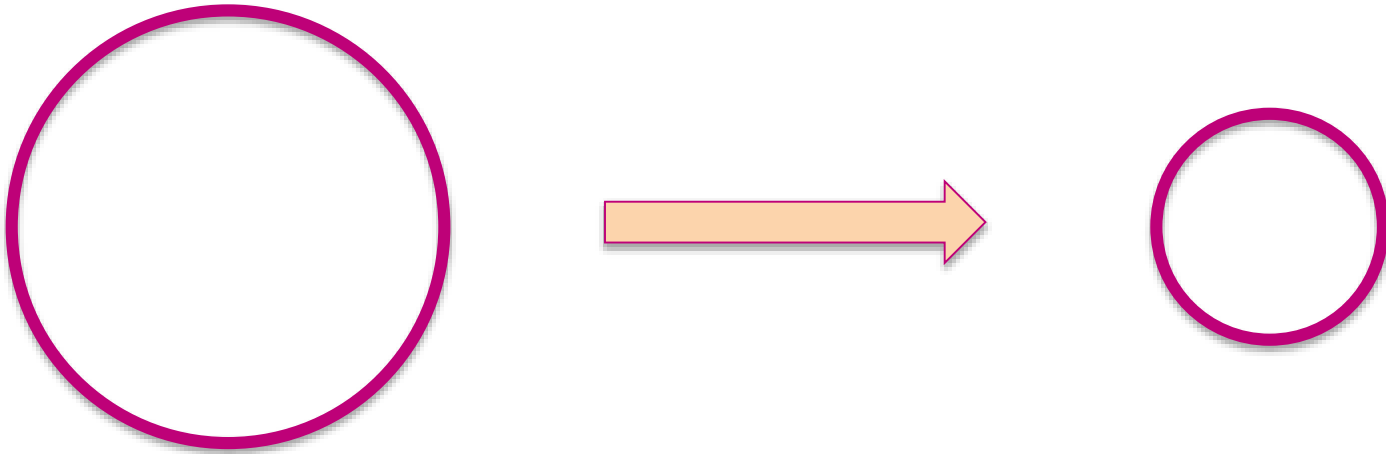

$\frac{1}{2}$ the diameter of a tube – it is 16x harder to get through it!

Spirometer

FEV 1 – Volume of air in 1 second

FEV 6 – Volume of air in 6 seconds (essentially – lung volume)

FEV1 / FEV 6 - % of lung volume exhaled in 1 second

RULES:

0.8 or 80%+ is a pass! YAY!!!

0.7 – 0.79 (70%-79%) is a bit... meh... TRY HARDER!!!

0.7 and under (<70%) – something not quite right