

Document Title	Specification of Memory Access					
Document Owner	AUTOSAR					
Document Responsibility	AUTOSAR					
Document Identification No	1017					

Document Status	published
Part of AUTOSAR Standard	Classic Platform
Part of Standard Release	R21-11

Document Change History				
Date	Release	Changed by	Description	
2021-11-25	R21-11	AUTOSAR Release	Initial release	
		Management		



Disclaimer

This work (specification and/or software implementation) and the material contained in it, as released by AUTOSAR, is for the purpose of information only. AUTOSAR and the companies that have contributed to it shall not be liable for any use of the work.

The material contained in this work is protected by copyright and other types of intellectual property rights. The commercial exploitation of the material contained in this work requires a license to such intellectual property rights.

This work may be utilized or reproduced without any modification, in any form or by any means, for informational purposes only. For any other purpose, no part of the work may be utilized or reproduced, in any form or by any means, without permission in writing from the publisher.

The work has been developed for automotive applications only. It has neither been developed, nor tested for non-automotive applications.

The word AUTOSAR and the AUTOSAR logo are registered trademarks.



Table of Contents

1	Introduction and Functional Overview	6
	1.1 Supported Use-Cases	7
2	Acronyms and Abbreviations	7
	2.1 Physical Segmentation	8
3	Related Documentation	9
	3.1 Input Documents & Related Standards and Norms	9
	3.2 Related Specification	9
4	Constraints and Assumptions	9
	7 11	9 10 10
5	Dependencies to Other Modules	10
6	Requirements Tracing	10
7	Functional Specification	15
	7.2 Key Aspects 7.3 Functional Elements 7.3.1 Memory Address Translation 7.3.1.1 Memory Mapping Constraints 7.3.2 Memory Access Coordination 7.3.3 Job Management 7.3.4 Job Processing 7.3.4.1 Job Status 7.3.4.2 Job Result 7.3.5 Hardware Specific Services 7.3.6 Burst Mode Support 7.3.7 Generic Locking Mechanism 7.3.8 Dynamic Memory Driver Handling 7.3.8.1 Dynamic Memory Driver Activation	15 15 16 16 16 17 17 18 19 19 20 20 21 21
	7.4 Module Handling	21 21 21 21
	7.5 General Design Rules	22 22 22 23
	1 I	23



		7.6.1	Development Errors	3
		7.6.2	Runtime Errors	3
		7.6.3	Transient Faults	3
		7.6.4	Production Errors	4
		7.6.5	Extended Production Errors	4
8	API	Specification	on 24	4
	8.1	Imported	Types	4
	8.2		initions	4
		8.2.1	MemAcc_AddressArealdType	4
		8.2.2	MemAcc_AddressType	5
		8.2.3	MemAcc_ConfigType	5
		8.2.4	MemAcc_DataType	5
		8.2.5	MemAcc_JobResultType	6
		8.2.6	MemAcc_JobStatusType	6
		8.2.7	MemAcc_JobType	7
		8.2.8	MemAcc_LengthType	7
		8.2.9	MemAcc_MemoryInfoType	7
		8.2.10	MemAcc_JobInfoType	8
		8.2.11	MemAcc_HwldType	9
		8.2.12	MemAcc_MemApiType	0
		8.2.13	MemAcc_MemAddressType	1
		8.2.14	MemAcc_MemConfigType	1
		8.2.15	MemAcc_MemDataType	2
		8.2.16	MemAcc_MemInstanceIdType	2
		8.2.17	MemAcc_MemJobResultType	2
		8.2.18	MemAcc_MemLengthType	3
		8.2.19	MemAcc_MemHwServiceIdType	3
		8.2.20	MemAcc_MemInitFuncType	4
		8.2.21	MemAcc_MemDeInitFuncType	4
		8.2.22	MemAcc_MemGetJobResultFuncType	4
		8.2.23	MemAcc_MemSuspendFuncType	5
		8.2.24	MemAcc_MemResumeFuncType	5
		8.2.25	MemAcc_MemPropagateErrorFuncType 36	6
		8.2.26	MemAcc_MemReadFuncType	6
		8.2.27	MemAcc_MemWriteFuncType	7
		8.2.28	MemAcc_MemEraseFuncType	8
		8.2.29	MemAcc_MemBlankCheckFuncType	8
		8.2.30	MemAcc_MemHwSpecificServiceFuncType	9
		8.2.31	MemAcc_MemMainFuncType	0
	8.3	Function	Definitions	0
		8.3.1	Synchronous Functions	0
		8.3.1	——————————————————————————————————————	0
		8.3.1	.2 MemAcc_DeInit 4	1
		8.3.1	.3 MemAcc_GetVersionInfo	2
		8.3.1	.4 MemAcc GetJobResult	2



		8.3.1.5	MemAcc_GetJobStatus											43
		8.3.1.6	MemAcc_GetMemoryInfo											44
		8.3.1.7	MemAcc_GetProcessedLength											45
		8.3.1.8	MemAcc_GetJobInfo											46
		8.3.1.9	MemAcc_ActivateMem											47
		8.3.1.10	MemAcc_DeactivateMem											48
		8.3.2 Async	hronous Functions											49
		8.3.2.1	MemAcc_Cancel											49
		8.3.2.2	MemAcc_Read											50
		8.3.2.3	MemAcc_Write											51
		8.3.2.4	MemAcc_Erase											52
		8.3.2.5	MemAcc_Compare											54
		8.3.2.6	MemAcc_BlankCheck											55
		8.3.2.7	MemAcc_HwSpecificService .											56
		8.3.2.8	MemAcc_RequestLock											58
		8.3.2.9	MemAcc_ReleaseLock											59
	8.4		ations											60
	8.5		ctions											60
			Acc_MainFunction											61
	8.6	· · · · · · · · · · · · · · · · · · ·	aces											61
			atory Interfaces											61
			nal Interfaces											63
		-	gurable Interfaces											63
			essAreaJobEndNotification>											63
			icationLockNotification>											64
	8.7	Service Interfac	es				 •	٠	•		•			64
9	Sequ	uence Diagrams												65
	9.1	Job Handling w	ith Result Polling											65
	9.2		ith Job End Notification											66
	9.3		alization by MemAcc											66
	9.4		alization by EcuM											67
	9.5		neduling by MemAcc											68
	9.6		neduling by SchM											69
	9.7		equence											70
10	Conf	iguration Specific												70
	10.1													70
	10.1		is Chapter											70 70
	10.2		Configuration Farameters Acc											70 71
			AccAddressAreaConfiguration											7 i 75
			AccSubAddressAreaConfiguration											73 78
	10.3		nation											70 84
	10.3	rubiisiieu iiiloli	παιίστι	٠	٠	•	 •	•	•	•	•	•	•	04



Known Limitations of the Current Document

This document is in draft mode.

1 Introduction and Functional Overview

This specification describes the functionality, API and the configuration for the AUTOSAR Basic Software module Memory Access (MemAcc).

The Memory Access module provides access to different memory technology devices by an address-based API.

The Memory Access module is always complemented by one or more Memory Driver (Mem). The Memory Access module is memory device technology agnostic and can be used with typical memory devices such as flash, EEPROM, RAM or phase change memory.

The Memory Access module and Memory Driver are located in the same layer of the AUTOSAR architecture as Fls and Eep Driver but split these modules into a hardware independent part (MemAcc) and a hardware dependent part (Mem).

Figure 1.1 shows an example architectural overview with different Memory Drivers and upper layers:

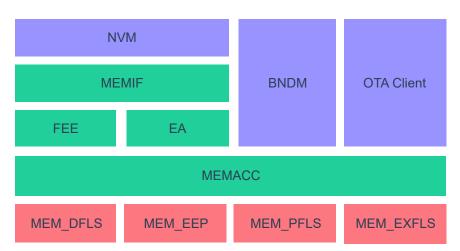


Figure 1.1: MemAcc Architecture Example



1.1 Supported Use-Cases

The combination of MemAcc module and Mem driver supports the following use cases:

- Block based non-volatile memory access for data storage using NvM and Fee or Ea
- OTA software update
- General address-based memory access, e.g. for BndM or flash bootloader usage

Combinations of these use cases are also supported.

Since MemAcc module and Mem driver also cover the Fls and Eep use cases for non-volatile data storage, Fls and Eep become obsolete for the future.

2 Acronyms and Abbreviations

The glossary below includes acronyms and abbreviations relevant to the MemAcc module that are not included in the [1, AUTOSAR glossary].

Abbreviation / Acronym	Description			
BndM	Bulk Non-Volatile Data Manager			
ECC	Error Correction Code			
FOTA	Firmware Over The Air - remote firmware update using wireless communication			
HSM	Hardware Security Module - dedicated security MCU core			
OTA	Over The Air - general term for wireless communication between			
	OEM backend and vehicle			
RWW	Read While Write - capability of a memory device to perform a			
	read operation in one memory bank while at the same time a			
	write/erase operation takes place in another bank			
SOTA	Software Over The Air - remote software update using wireless			
	communication			

Terms	Description			
Address Area	Contiguous memory area in the logical address space			
	Typically multiple physical memory sectors are combined to one			
	logical address area.			
Bank	Group of sector batches			
	In case a memory technology is segmented in sectors, a bank is			
	an instance of a sector batch group in which no read-while-write			
	operation is permitted. In case of a flash memory device, this			
	typically maps to an individual flash controller.			
Job Request	Memory access request by an upper layer module for an address			
	area.			
Memory Device	Group of banks			



Terms	Description
Page Burst	Aggregated access of memory pages for improved performance
	In case a memory device technology has a physical segmenta-
	tion, some memory devices provide an optimized access method
	to read or write multiple pages at a time. Page burst denotes the
	aggregation of memory pages used for the access optimization.
Read Page	Smallest readable unit of a memory device (in bytes)
	Some memory device technologies must be accessed consider-
	ing a physical segmentation. Hence a byte-wise access is not
	possible for all memory device technologies. This term defines
	the minimum size that needs to be read in one access.
Sector	Smallest erasable memory unit (in bytes)
	Some memory device technologies require an explicit physical
	erase operation before the memory can be written. A sector de-
	fines the minimum size of such an erase unit. Depending on the
	memory device, sectors can be either uniform- or variable-sized.
Sector Batch	Aggregation of sectors with uniform size
	Logical aggregation of contiguous sectors with the same size.
Sector Burst	Aggregation of sectors for improved erase performance
	In case a memory technology needs a physical erase opera-
	tion, some devices provide an erase performance optimization
	by erasing an aggregation of sectors in one step.
Sub Address Area	Contiguous memory area in the logical address space mapped
	to a sector batch of one memory device.
Write Page	Smallest writeable unit of a memory device (in bytes)
	Some memory device technologies must be accessed consider-
	ing a physical segmentation. Hence a byte-wise access is not
	possible for all memory device technologies. This term defines
	the minimum size that needs to be written in one access.

2.1 Physical Segmentation

Figure 2.1 gives an overview of the physical segmentation and the according technical terms:

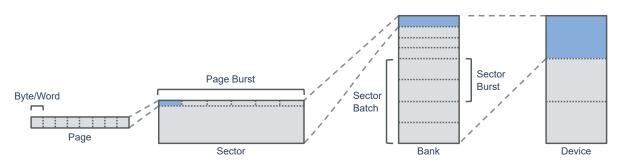


Figure 2.1: Overview of Physical Segmentation



3 Related Documentation

3.1 Input Documents & Related Standards and Norms

- [1] Glossary AUTOSAR_TR_Glossary
- [2] General Specification of Basic Software Modules AUTOSAR SWS BSWGeneral
- [3] Requirements on Memory Hardware Abstraction Layer AUTOSAR SRS MemoryHWAbstractionLayer
- [4] General Requirements on Basic Software Modules AUTOSAR_SRS_BSWGeneral
- [5] Requirements on AUTOSAR Features AUTOSAR RS Features

3.2 Related Specification

AUTOSAR provides a General Specification on Basic Software modules [2, SWS BSW General], which is also valid for MemAcc.

Thus, the specification SWS BSW General shall be considered as additional and required specification for MemAcc.

4 Constraints and Assumptions

To be able to control and coordinate the access of shared memory resources, all memory upper layers shall use the MemAcc module to access these shared memory resources. The only exception to this constraint are exclusive memory accesses at discrete points in time.

4.1 Limitations

4.1.1 General Limitations

The MemAcc module is targeted for address based memory access. File based access is not considered.

Block based memory devices like NAND flash devices which require an explicit bad block management are out of scope of this specification.



4.1.2 Memory Mapped Access

It's not possible to perform a memory-mapped access on a shared memory resource while at the same time, the AUTOSAR memory stack performs an access on a shared memory resource.

This restriction applies to memory devices like flash or EEPROM where the memory must be put into a special programming mode in which a concurrent read access is not possible. This restriction applies to internal and external shared memory devices and also affects hardware-based flash EEPROM emulations.

In case a memory-mapped access is needed, MemAcc coordination must be implemented at the application level. The application must ensure that no concurrent access is performed on the shared memory.

4.2 Applicability to Car Domains

The MemAcc module can be used in any domain application that needs MemAcc to either store data or perform a software update.

5 Dependencies to Other Modules

The MemAcc module has interfaces towards the Flash EEPROM Emulation (Fee), the EEPROM Abstraction (Ea), Bulk Nv Data Manager (BndM), Memory Drivers (Mem), the Default Error Tracer (DET) and, in case of a OTA software update client, also to Complex Device Drivers (CDD).

The MemAcc module includes header files of DET and MemMap.

6 Requirements Tracing

The following tables reference the requirements specified in [3], [4] and [5] and links to the fulfillment of these. Please note that if column "Satisfied by" is empty for a specific requirement this means that this requirement is not fulfilled by this document.

Requirement	Description	Satisfied by
[RS_BRF_01000]	AUTOSAR architecture shall	[SWS_MemAcc_00083]
	organize the BSW in a hardware	
	independent and a hardware	
	dependent layer	
[RS_BRF_01848]	AUTOSAR non-volatile memory	[SWS_MemAcc_00005]
	functionality shall provide	[SWS_MemAcc_00100]
	mechanisms to enhance	
	hardware reliability	
[SRS_BSW_00003]	All software modules shall	[SWS_MemAcc_10016]
	provide version and identification	
	information	



Requirement	Description	Satisfied by
[SRS_BSW_00004]	All Basic SW Modules shall	[SWS_MemAcc_00002]
	perform a pre-processor check	
	of the versions of all imported	
	include files	
[SRS_BSW_00167]	All AUTOSAR Basic Software	[SWS_MemAcc_00002]
	Modules shall provide	
	configuration rules and	
	constraints to enable plausibility	
	checks	
[SRS_BSW_00323]	All AUTOSAR Basic Software	[SWS_MemAcc_00002]
	Modules shall check passed API	[SWS_MemAcc_00027]
	parameters for validity	[SWS_MemAcc_00031]
		[SWS_MemAcc_00034]
		[SWS_MemAcc_00036]
		[SWS_MemAcc_00037]
		[SWS_MemAcc_00039]
		[SWS_MemAcc_00041]
		[SWS_MemAcc_00042]
		[SWS MemAcc 00044]
		[SWS MemAcc 00045]
		[SWS_MemAcc_00046]
		[SWS MemAcc 00047]
		[SWS_MemAcc_00049]
		[SWS_MemAcc_00050]
		[SWS_MemAcc_00051]
		[SWS_MemAcc_00052]
		[SWS_MemAcc_00054]
		[SWS_MemAcc_00055]
		[SWS MemAcc 00056]
		[SWS_MemAcc_00058]
		[SWS_MemAcc_00059]
		[SWS_MemAcc_00060]
		[SWS_MemAcc_00061]
		[SWS_MemAcc_00063]
		[SWS_MemAcc_00064]
		[SWS_MemAcc_00065]
		[SWS_MemAcc_00067]
		[SWS_MemAcc_00068]
		[SWS MemAcc 00070]
		[SWS_MemAcc_00071]
		[SWS_MemAcc_00072]
		[SWS_MemAcc_00073]
		[SWS_MemAcc_00077]
		[SWS_MemAcc_00093]
[SRS_BSW_00327]	Error values naming convention	[SWS_MemAcc_10038]
[SRS_BSW_00337]	Classification of development	[SWS_MemAcc_10038]
	errors	_
[SRS_BSW_00386]	The BSW shall specify the	[SWS_MemAcc_10038]
	configuration for detecting an	
	error	
	<u>l</u>	1



Requirement	Description	Satisfied by
[SRS_BSW_00406]	A static status variable denoting	[SWS_MemAcc_00030]
	if a BSW module is initialized	[SWS_MemAcc_00033]
	shall be initialized with value 0	[SWS_MemAcc_00035]
	before any APIs of the BSW	[SWS_MemAcc_00038]
	module is called	[SWS_MemAcc_00040]
		[SWS_MemAcc_00043]
		[SWS_MemAcc_00048]
		[SWS_MemAcc_00053]
		[SWS_MemAcc_00057]
		[SWS_MemAcc_00062]
		[SWS_MemAcc_00066]
		[SWS_MemAcc_00076]
		[SWS_MemAcc_00088]
		[SWS_MemAcc_00090]
		[SWS_MemAcc_00099]
		[SWS_MemAcc_00117]
[SRS_BSW_00414]	Init functions shall have a pointer	[SWS_MemAcc_10002]
	to a configuration structure as	[SWS_MemAcc_91012]
IODO DOW COALE	single parameter	[0]4/0 14 - 4 - 4 - 4 - 4 - 4 - 4 - 4 - 4 - 4
[SRS_BSW_00415]	Interfaces which are provided	[SWS_MemAcc_10035]
	exclusively for one module shall be separated into a dedicated	[SWS_MemAcc_10036]
	header file	
[SRS_MemHwAb	The FEE and EA modules shall	[SWS_MemAcc_00029]
14031]	provide a service that allows	[SWS_MemAcc_00123]
14001]	canceling an ongoing	[0440_Wetti/Acc_00120]
	asynchronous operation	
[SRS_MemHwAb	MemAcc module shall allow the	[SWS MemAcc 00014]
14034]	configuration of the priority for	[SWS MemAcc 00017]
•	different logical address areas	[SWS_MemAcc_00024]
[SRS_MemHwAb	MemAcc module shall support	[SWS MemAcc 10015]
14035]	variant mapping	
[SRS_MemHwAb	MemAcc module and Mem	[SWS_MemAcc_00025]
14037]	driver shall provide an interface	[SWS_MemAcc_10015]
	for initialization	[SWS_MemAcc_10041]
[SRS_MemHwAb	MemAcc module and Mem	[SWS_MemAcc_00028]
14038]	driver shall provide	[SWS_MemAcc_00076]
	asynchronous memory access	[SWS_MemAcc_00115]
	functions	[SWS_MemAcc_10018]
		[SWS_MemAcc_10023]
		[SWS_MemAcc_10024]
		[SWS_MemAcc_10025] [SWS_MemAcc_10026]
		[SWS_MemAcc_10026]
		[SWS_MemAcc_10027]
		[SWS_MemAcc_10030]
[SRS MemHwAb -	MemAcc module and Mem	[SWS_MemAcc_10030]
14039]	driver shall support optional	[SWS_MemAcc_10010]
.4000]	services	[SWS_MemAcc_10023]
	33.11003	[SWS_MemAcc_10024]
		[SWS MemAcc 10026]
		[SWS MemAcc 10027]
		[SWS MemAcc 10028]
		[SWS MemAcc 10030]
		[



Requirement	Description	Satisfied by
[SRS_MemHwAb	MemAcc module and Mem	[SWS_MemAcc_00020]
14040]	driver shall provide a	[SWS_MemAcc_00021]
_	synchronous status function	[SWS_MemAcc_00092]
		[SWS_MemAcc_00104]
		[SWS MemAcc 00105]
		[SWS_MemAcc_00106]
		[SWS MemAcc 00107]
		[SWS MemAcc 00108]
		[SWS MemAcc 00109]
		[SWS_MemAcc_00112]
		[SWS_MemAcc_00113]
		[SWS_MemAcc_00114]
		[SWS_MemAcc_00118]
		[SWS_MemAcc_00119]
		[SWS_MemAcc_00120]
		[SWS_MemAcc_10009]
		[SWS_MemAcc_10011]
		[SWS_MemAcc_10013]
		[SWS_MemAcc_10019]
		[SWS_MemAcc_10021]
		[SWS_MemAcc_10022]
		[SWS_MemAcc_10037]
		[SWS_MemAcc_10039]
		[SWS_MemAcc_10040]
		[SWS_MemAcc_91016]
[SRS_MemHwAb	MemAcc module shall provide a	[SWS_MemAcc_00015]
14041]	job notification mechanism for	[SWS_MemAcc_10029]
	the upper layer modules	
[SRS_MemHwAb	MemAcc module shall support	[SWS_MemAcc_00098]
14042]	multiple Mem drivers for different	[SWS_MemAcc_10010]
	types of memory	
[SRS_MemHwAb	Mem driver and shall support	[SWS_MemAcc_91011]
14043]	multiple instances of the same	
	memory device	
[SRS_MemHwAb	MemAcc module shall manage	[SWS_MemAcc_00006]
14044]	the memory job requests from	[SWS_MemAcc_00007]
	different upper layer modules	[SWS_MemAcc_00008]
		[SWS_MemAcc_00028]



Requirement	Description	Satisfied by
[SRS_MemHwAb	MemAcc module and Mem	[SWS_MemAcc_00085]
14045]	driver shall provide measures for	[SWS_MemAcc_00089]
	dynamic driver activation	[SWS_MemAcc_00121]
		[SWS_MemAcc_00122]
		[SWS_MemAcc_10014]
		[SWS_MemAcc_10033]
		[SWS_MemAcc_10034]
		[SWS_MemAcc_91000]
		[SWS_MemAcc_91001]
		[SWS_MemAcc_91002]
		[SWS_MemAcc_91003]
		[SWS_MemAcc_91004]
		[SWS_MemAcc_91005]
		[SWS_MemAcc_91006]
		[SWS_MemAcc_91007]
		[SWS_MemAcc_91008]
		[SWS_MemAcc_91009]
		[SWS_MemAcc_91010]
		[SWS_MemAcc_91018]
[SRS_MemHwAb	MemAcc module and Mem	[SWS_MemAcc_00081]
14046]	driver shall provide support for	[SWS_MemAcc_00082]
	64-Bit address range	[SWS_MemAcc_10001]
		[SWS_MemAcc_10007]
		[SWS_MemAcc_91013]
		[SWS_MemAcc_91014]
[SRS_MemHwAb	MemAcc module shall provide	[SWS_MemAcc_00025]
14047]	optional support for the	[SWS_MemAcc_00084]
	initialization and main function	[SWS_MemAcc_00111]
	triggering of memory drivers	[SWS_MemAcc_00121]
		[SWS_MemAcc_00122]
		[SWS_MemAcc_10017]
		[SWS_MemAcc_10033]
		[SWS_MemAcc_10034]
[SRS_MemHwAb	Mem driver shall operate on	[SWS_MemAcc_00003]
14048]	physical segmentation/physical	[SWS_MemAcc_00004]
	addresses	[SWS_MemAcc_00087]
		[SWS_MemAcc_00101]
IODO MarrellevAh	Mana division ala allusa a catanada na	[SWS_MemAcc_00102]
[SRS_MemHwAb	Mem driver shall use a standard	[SWS_MemAcc_00089]
14049]	binary format for dynamic driver	
ICDC Mamble Ab	activation	ISWS MomAcc 100041
[SRS_MemHwAb	Mem driver shall not buffer data	[SWS_MemAcc_10004]
14051]	Mom A on module abolt areside a	[SWS_MemAcc_91020]
[SRS_MemHwAb	MemAcc module shall provide a	[SWS_MemAcc_10012]
14054]	function to retrieve memory	[SWS_MemAcc_10020]
ICDC MombusAh	segmentation information	[SWS MomAco 00116]
[SRS_MemHwAb	MemAcc module shall provide a lock function to enable/disable	[SWS_MemAcc_00116]
14055]		[SWS_MemAcc_10030]
	the direct memory access from	[SWS_MemAcc_10031]
ICDC Mamble Ab	application	[SWS_MemAcc_10032]
[SRS_MemHwAb	MemAcc module and Mem	[SWS_MemAcc_10008]
14056]	driver shall provide a generic	[SWS_MemAcc_10028]
	function to access the hardware	
	specific functionalities	



Requirement	Description	Satisfied by
[SRS_MemHwAb	MemAcc module shall allow the	[SWS_MemAcc_00012]
14057]	configuration of the	[SWS_MemAcc_00018]
	non-contiguous physical	[SWS_MemAcc_00078]
	memory areas of different	[SWS_MemAcc_00079]
	memory devices to a logical	[SWS_MemAcc_00080]
	address area	[SWS_MemAcc_10000]

7 Functional Specification

This chapter defines the behavior of the MemAcc module.

The API of the module is defined in chapter 8, while the configuration is defined in 10.

7.1 Overview

The MemAcc module provides a memory device agnostic address-based memory access for different upper layers modules. It implements all high level functionality like job management, access coordination and allocation of Memory Driver access requests according to the physical segmentation as the Memory Drivers expect all memory accesses aligned to physical segments.

7.2 Key Aspects

- Access coordination of different upper layers like Fee, Ea and OTA software update client
- Memory technology device agnostic API supporting all kinds of memories including code memories
- Coordination of CPU cores like host- and HSM core
- Memory access job management
- Virtualization of memory areas to support mapping of non-contiguous areas as well as spanning areas across different memory devices
- Mapping of memory locations to memory devices
- Splitting of Memory Driver access requests according to physical segments like pages and sectors for flash memories



7.3 Functional Elements

7.3.1 Memory Address Translation

The MemAcc module abstracts the physical memory addressing scheme of the Mem driver to the upper layer by means of a logical address space.

Figure 7.1 provides an overview of the memory address translation/mapping scheme:

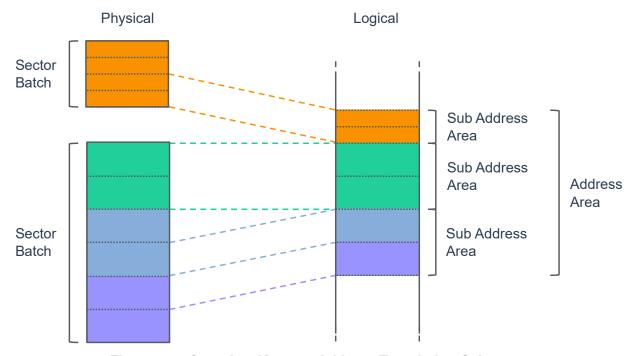


Figure 7.1: Overview Memory Address Translation Scheme

[SWS_MemAcc_00012]{DRAFT} 「All MemAcc services, i.e. erase, read and write, shall support access requests which cross memory device boundaries based on the logical/physical memory mapping.] (SRS MemHwAb 14057)

7.3.1.1 Memory Mapping Constraints

[SWS_MemAcc_00078]{DRAFT} \[\text{An address area shall only be assigned to one upper layer module.} \] \((SRS_MemHwAb_14057) \)

Note: Since only one memory job is allowed per address area, there's a 1:1 relation between address area and upper layer.

[SWS_MemAcc_00079]{DRAFT} [Within a sub-address area, only a uniform sector size is allowed.|(SRS_MemHwAb_14057)

Note: A sub-address area maps to a sector batch.



[SWS_MemAcc_00080]{DRAFT} \[\text{Start address and length of address areas shall be aligned to the physical sectors.} \[\text{(SRS_MemHwAb_14057)} \]

Note: Start address and length of memory accesses have to be aligned to the physical segmentation.

7.3.2 Memory Access Coordination

[SWS_MemAcc_00006]{DRAFT} [The MemAcc module shall coordinate conflicting memory accesses by multiple upper layers. | (SRS_MemHwAb_14044)

Note: Typically, code- and data flash share the same flash controller and therefore it's not possible to perform a write access at the same time. Since code- and data flash write access might happen at the same time for the software update use case, MemAcc needs to coordinate these accesses.

[SWS_MemAcc_00007]{DRAFT} | The MemAcc module shall only coordinate conflicting resource accesses. The access dependencies shall be configurable in the configuration tool. | (SRS_MemHwAb_14044)

Note: Only relevant resource conflicts shall be coordinated to prevent any performance impact.

[SWS_MemAcc_00008]{DRAFT} [The MemAcc module shall support multiple memory access requests from different upper layers for distinct memory areas at the same time. In case there is a hardware resource conflict, the memory stack shall still accept the access request and process it once the resource is free.] (SRS_MemHwAb_14044)

Note: The AUTOSAR BSW upper layers shall not have to deal with any retry mechanisms as this would affect every upper layer.

7.3.3 Job Management

In general, all MemAcc services that need a significant amount of time to process an operation are defined as asynchronous services. Therefore, MemAcc job requests get only queued by the asynchronous services like MemAcc_Read and the processing of the queued jobs happen in the MemAcc_MainFunction.

[SWS_MemAcc_00018]{DRAFT} [The MemAcc module shall allow only one job request per address area.|(SRS MemHwAb 14057)

Note: Simplification of job management since one address area can only have one upper layer and job request are typically requested sequentially from the upper layer.



[SWS_MemAcc_00014]{DRAFT} [Based on MemAccAddressAreaPriority, MemAcc shall prioritize memory access requests from AUTOSAR BSW upper layer modules.|(SRS MemHwAb 14034)

Note: Writing crash non-volatile data shall have priority over background software update tasks.

[SWS_MemAcc_00024]{DRAFT} [The prioritization of memory operations shall use the Mem_Suspend and Mem_Resume service if the memory hardware supports this functionality.

If the memory hardware does not support a suspend/resume functionality, the prioritization shall be implemented on a page/page burst, respectively sector/sector burst basis. | (SRS MemHwAb 14034)

7.3.4 Job Processing

[SWS_MemAcc_00015]{DRAFT} [If a job end notification function is configured by MemAccJobEndNotificationName, MemAcc shall notify the upper layer BSW module by calling the configured notification function.] (SRS_MemHwAb_14041)

Note: In case no notification function is configured, the upper layer BSW module has to poll the MemAcc job status.

[SWS_MemAcc_00017]{DRAFT} [If the MemAcc module is not able to process a job request, e.g. due to a pending request on the same address area or due to an invalid parameter, the job request shall be rejected by an E_NOT_OK return code.] (SRS_-MemHwAb_14034)

7.3.4.1 **Job Status**

The MemAcc module provides the current job processing status information via the MemAcc_GetJobStatus service.

[SWS_MemAcc_00113]{DRAFT} [After initialization via the MemAcc_Init service, the job precessing status shall be set to MEMACC_JOB_IDLE.](SRS_MemHwAb_-14040)

[SWS_MemAcc_00104]{DRAFT} [In case the job processing was completed or no job is currently pending, the job processing status shall be set to <code>MEMACC_JOB_IDLE.</code>] (SRS_MemHwAb_14040)

[SWS_MemAcc_00020]{DRAFT} [Once a job request was accepted, the job processing status shall be set to MEMACC_JOB_PENDING.](SRS_MemHwAb_14040)



7.3.4.2 **Job Result**

The results of the last MemAcc job is provided by the MemAcc_GetJobResult service. It can be used by upper layer modules to retrieve detailed information for fine-tuned fault handling.

[SWS_MemAcc_00112]{DRAFT} [After initialization via the MemAcc_Init service, the job result shall be set to MEMACC_MEM_OK. | (SRS_MemHwAb_14040)

[SWS_MemAcc_00105]{DRAFT} In case the job processing was completed successfully, the job result shall be set to MEMACC_MEM_OK.|(SRS_MemHwAb_14040)

[SWS_MemAcc_00106]{DRAFT} [In case the job processing was completed but the results of the last MemAcc job didn't meet the expected result, e.g. a blank check operation was applied on a non-blank memory area, the job result shall be set to MEMACC_MEM_INCONSISTENT.|(SRS_MemHwAb_14040)

[SWS_MemAcc_00107]{DRAFT} [In case the last memory operation was completed but the ECC circuit corrected an ECC error, the job result shall be set to MEMACC_MEM_ECC_CORRECTED.|(SRS_MemHwAb_14040)

[SWS_MemAcc_00108]{DRAFT} In case the last memory operation didn't complete due to an uncorrectable ECC error, the job result shall be set to MEMACC_MEM_ECC_UNCORRECTED.](SRS_MemHwAb_14040)

[SWS_MemAcc_00021]{DRAFT} [In case the last memory operation was canceled, the job result shall be set to MEMACC_MEM_CANCELED.|(SRS_MemHwAb_14040)

[SWS_MemAcc_00109]{DRAFT} [In case the memory operation was not successfully completed for any other reason, the job result shall be set to $MEMACC_MEM_FAILED.$ | (SRS MemHwAb 14040)

7.3.5 Hardware Specific Services

To support memory device specific services, the MemAcc module provides a generic API to call hardware specific Mem driver services - see MemAcc_HwSpecificService.

Each Mem driver can have multiple hardware specific services which are selected by the hwServiceId parameter.

Note: By providing a generic API for hardware specific services, the MemAcc module can be kept hardware independent.



7.3.6 Burst Mode Support

Some Mem drivers can provide burst capabilities, i.e. instead of writing/erasing one smallest possible unit, several of these units are written/erased at once to increase performance. Depending on the hardware capabilities, a Mem driver might offer three kinds of burst modes:

- Erase multiple sectors
- Read multiple pages
- Write multiple pages

[SWS_MemAcc_00087]{DRAFT} [If enabled by MemAccUseEraseBurst, MemAcc shall align and split the Mem driver erase requests according to the erase burst size of the Mem driver. | (SRS_MemHwAb_14048)

[SWS_MemAcc_00101]{DRAFT} [If enabled by MemAccUseReadBurst, MemAcc shall align and split the Mem driver read requests according to the read burst size of the Mem driver. | (SRS_MemHwAb_14048)

[SWS_MemAcc_00102]{DRAFT} [If enabled by MemAccUseWriteBurst, MemAcc shall align and split the Mem driver write requests according to the write burst size of the Mem driver. | (SRS_MemHwAb_14048)

Note: Enabling burst mode also increases the latency when a job shall be processed with a higher priority. Therefore, system integrators have to consider the maximum latency when configuring the burst modes.

7.3.7 Generic Locking Mechanism

To support upper layers like the BndM, the MemAcc module provides a generic lock API which can be used to restrict the memory access by a certain Mem driver, e.g., if an upper layer wants to do a direct memory mapped access.

Figure 9.7 shows an example lock/unlock sequence.

Note: The application or upper layer module has to maintain the lock state and release the lock once the direct memory access was completed. For the sake of simplicity, nested locks are not supported.

7.3.8 Dynamic Memory Driver Handling

For some safety-relevant use cases, it is not desirable for the Mem driver to be permanently available in an executable form, e.g. to prevent accidental overwriting of memory areas. For these use cases, the Mem driver is compiled as a separate binary



which contains a function pointer table to expose the Mem driver service functions to the MemAcc module and the MemAcc module calls the Mem driver service functions indirectly using the Mem driver function pointer table.

7.3.8.1 Dynamic Memory Driver Activation

7.3.8.2 Service Invocation

[SWS_MemAcc_00085]{DRAFT} [If enabled by MemAccUseMemFuncPtrTable, MemAcc shall call the Mem driver service functions via the Mem driver function pointer table. Otherwise the MemAcc shall directly call the Mem driver service functions.] (SRS_MemHwAb_14045)

7.4 Module Handling

7.4.1 Initialization

The MemAcc module is initialized via MemAcc_Init. Except for MemAcc_GetVersionInfo and MemAcc_Init, the API functions of the MemAcc module may only be called after the module has been properly initialized.

Depending on the MemAccMemInvocation attribute, MemAcc can also initialize the Mem driver's individual initialization functions.

Figure 9.3 shows the Mem driver initialization via MemAcc while figure 9.4 shows the Mem driver initialization via EcuM.

7.4.2 Scheduling

Since most of the MemAcc module services are asynchronous services, the MemAcc_-MainFunction needs to be cyclically triggered.

Depending on the MemAccMemInvocation attribute, MemAcc can call all Mem main functions within MemAcc_MainFunction.

Note: In case Mem drivers shall be dynamically activated, the scheduling of the Mem driver main functions cannot be done via the SchM. Therefore, the MemAcc module has to take care of the main function triggering depending on the individual Mem driver state.

Figure 9.5 shows the Mem main function triggering via MemAcc while figure 9.6 shows the Mem main function triggering via SchM.



7.5 General Design Rules

[SWS_MemAcc_00083]{DRAFT} [The MemAcc module implementation shall be hardware independent.|(RS_BRF_01000)

Note: The MemAcc module will be used with different kinds of Mem drivers, e.g., for internal and external memory devices. Thus, MemAcc has to be completely hardware independent.

[SWS_MemAcc_00098]{DRAFT} [The MemAcc module implementation shall support multiple Mem drivers.] (SRS_MemHwAb_14042)

[SWS_MemAcc_00002]{DRAFT} [The MemAcc module shall check static configuration parameters statically (at the latest during compile time) for correctness.] (SRS_BSW_00323, SRS_BSW_00167, SRS_BSW_00004)

7.5.1 Retry Mechanism

[SWS_MemAcc_00005]{DRAFT} [If MemAccNumberOfEraseRetries is set to a value > 0, MemAcc shall retry the Mem driver erase operation according to the configured value. | (RS_BRF_01848)

[SWS_MemAcc_00100]{DRAFT} [If MemAccNumberOfWriteRetries is set to a value > 0, MemAcc shall retry the Mem driver write operation according to the configured value. | (RS BRF 01848)

Note: Upper layers shall not have to deal with transient memory write/erase issues.

7.5.2 Address Alignment

[SWS_MemAcc_00003]{DRAFT} [The MemAcc module shall split memory access requests for the Mem driver layer according to page/page burst, respectively sector/sector burst sizes.] (SRS_MemHwAb_14048)

Note: Mem driver expects request aligned to the physical segmentation.

[SWS_MemAcc_00004]{DRAFT} In case the start address or the length of a memory request is not aligned to the physical segmentation of the respective memory device, MemAcc shall reject such job requests with E_NOT_OK.](SRS_MemHwAb_-14048)

Note: Memory requests must be aligned to the physical memory segmentation.



7.5.3 64-Bit Support

[SWS_MemAcc_00081]{DRAFT} [The MemAcc module shall support address areas larger than 4GBytes, thus MemAcc_AddressType and MemAcc_LengthType shall be defined as a 64-Bit types in case the address area configuration of one address area exceeds 4GBytes. | (SRS_MemHwAb_14046)

[SWS_MemAcc_00082]{DRAFT} [If all address areas don't exceed 4GBytes, MemAcc_AddressType and MemAcc_LengthType shall be defined as a 32-Bit types.|(SRS_MemHwAb_14046)

Note: Avoid unnecessary overhead due to 64-Bit types.

7.6 Error Classification

7.6.1 Development Errors

[SWS MemAcc 10038]

Type of error	Related error code	Error value
API service called without module initialization	MEMACC_E_UNINIT	0x01
API service called with NULL pointer argument	MEMACC_E_PARAM_POINTER	0x02
API service called with wrong address area ID	MEMACC_E_PARAM_ADDRESS_AREA_ID	0x03
API service called with address and length not belonging to the passed address area ID	MEMACC_E_PARAM_ADDRESS_LENGTH	0x04
API service called with a hardware ID not belonging to the passed address area ID	MEMACC_E_PARAM_HW_ID	0x05
API service called for an address area ID with a pending job request	MEMACC_E_BUSY	0x06
Dynamic MEM driver activation failed due to inconsistent MEM driver binary	MEMACC_E_MEM_INIT_FAILED	0x07

(SRS_BSW_00337, SRS_BSW_00386, SRS_BSW_00327)

7.6.2 Runtime Errors

There are no runtime errors.

7.6.3 Transient Faults

There are no transient faults.



7.6.4 Production Errors

There are no production errors.

7.6.5 Extended Production Errors

There are no extended production errors.

8 API Specification

8.1 Imported Types

In this chapter all types included from the following files are listed.

[SWS_MemAcc_10037] [

Module	Header File	Imported Type	
Mem	Mem.h	Mem_AddressType (draft)	
	Mem.h	Mem_ConfigType (draft)	
	Mem.h	Mem_DataType (draft)	
	Mem.h	Mem_HwServiceIdType (draft)	
	Mem.h	Mem_InstanceIdType (draft)	
	Mem.h Mem_JobResultType (draft)		
	Mem.h	Mem_LengthType (draft)	
Std	Std_Types.h	Std_ReturnType	
	Std_Types.h	Std_VersionInfoType	

|(SRS_MemHwAb_14040)

8.2 Type Definitions

8.2.1 MemAcc_AddressArealdType

$\textbf{[SWS_MemAcc_10000]} \{ \texttt{DRAFT} \} \; \lceil \;$

Name	MemAcc_AddressAreaIdType (draft)	
Kind	Туре	
Derived from	uint16	
Description	Unique address area ID type.	
	Tags: atp.Status=draft	





Available via	MemAcc.h
---------------	----------

(SRS_MemHwAb_14057)

8.2.2 MemAcc_AddressType

[SWS_MemAcc_10001]{DRAFT}

Name	MemAcc_AddressType (draft)			
Kind	Туре			
Derived from	Basetype Variation			
	uint32 –			
	uint64 –			
Description	Logical memory address type.			
	Tags: atp.Status=draft			
Available via	MemAcc.h			

|(SRS_MemHwAb_14046)

8.2.3 MemAcc_ConfigType

[SWS_MemAcc_10002]{DRAFT}

Name	MemAcc_ConfigType (draft)	
Kind	Structure	
Description	Postbuild configuration structure type.	
	Tags: atp.Status=draft	
Available via	MemAcc.h	

(SRS_BSW_00414)

8.2.4 MemAcc_DataType

[SWS_MemAcc_10004]{DRAFT}

Name	MemAcc_DataType (draft)
Kind	Туре
Derived from	uint8





Description	General data type.
	Tags: atp.Status=draft
Available via	MemAcc.h

\(\((SRS_MemHwAb_14051 \)

8.2.5 MemAcc_JobResultType

[SWS_MemAcc_10039]{DRAFT}

Name	MemAcc_JobResultType (draft)		
Kind	Enumeration		
Range	MEMACC_MEM_OK	0x00	The last MemAcc job was finished successfully
	MEMACC_MEM_FAILED	0x01	The last MemAcc job resulted in an unspecific failure and the job was not completed
	MEMACC_MEM_ INCONSISTENT	0x02	The results of the last MemAcc job didn't meet the expected result, e.g. a blank check operation was applied on a non-blank memory area
	MEMACC_MEM_ CANCELED	0x03	The last MemAcc job was canceled
	MEMACC_MEM_ECC_ UNCORRECTED	0x04	The last memory operation returned an uncorrectable ECC error
	MEMACC_MEM_ECC_ CORRECTED	0x05	The last memory operation returned a correctable ECC error
Description	Asynchronous job result type).	•
	Tags: atp.Status=draft		
Available via	MemAcc.h		

∫(SRS_MemHwAb_14040)

8.2.6 MemAcc_JobStatusType

[SWS_MemAcc_10009]{DRAFT}

Name	MemAcc_JobStatusType (draft)		
Kind	Enumeration		
Range	MEMACC_JOB_IDLE	0x00	Job processing was completed or no job currently pending
	MEMACC_JOB_PENDING	0x01	A job is currently being processed
Description	Asynchronous job status type.		
	Tags: atp.Status=draft		
Available via	MemAcc.h		

|(SRS_MemHwAb_14040)



8.2.7 MemAcc_JobType

[SWS_MemAcc_10011]{DRAFT}

Name	MemAcc_JobType (draft)		
Kind	Enumeration		
Range	MEMACC_NO_JOB	0x00	No job currently pending
	MEMACC_WRITE_JOB	0x01	Write job pending
	MEMACC_READ_JOB	0x02	Read job pending
	MEMACC_COMPARE_JOB	0x03	Compare job pending
	MEMACC_ERASE_JOB	0x04	Erase job pending
	MEMACC_ MEMHWSPECIFIC_JOB	0x05	Hardware specific job pending
	MEMACC_BLANKCHECK_ JOB	0x06	Blank check job pending
	MEMACC_ REQUESTLOCK_JOB	0x07	Request lock job pending
Description	Type for asynchronous jobs.		
	Tags: atp.Status=draft		
Available via	MemAcc.h		

|(SRS_MemHwAb_14040)

8.2.8 MemAcc_LengthType

[SWS_MemAcc_10007]{DRAFT}

Name	MemAcc_LengthType (draft)	
Kind	Туре	
Derived from	Basetype	Variation
	uint32	_
	uint64	_
Description	Job length type.	
	Tags: atp.Status=draft	
Available via	MemAcc.h	

\(\((SRS_MemHwAb_14046) \)

8.2.9 MemAcc_MemoryInfoType

 $\textbf{[SWS_MemAcc_10012]} \{ \mathsf{DRAFT} \} \; \lceil \;$



Name	MemAcc_MemoryInfoType (draft)		
Kind	Structure		
	LogicalStartAddress		
Elements	Туре	MemAcc_AddressType	
	Comment	Logical start address of sub address area	
	PhysicalStartAddress		
	Туре	MemAcc_AddressType	
	Comment	Physical start address of sub address area	
	MaxOffset		
	Туре	MemAcc_LengthType	
	Comment	Size of sub address area in bytes -1	
	EraseSectorSize		
	Туре	uint32	
	Comment	Size of a sector in bytes	
	EraseSectorBurstSize		
	Туре	uint32	
	Comment	Size of a sector burst in bytes. Equals SectorSize in case burst is disabled	
	ReadPageSize		
	Туре	uint32	
	Comment	Read size of a page in bytes	
	WritePageSize		
	Туре	uint32	
	Comment	Write size of a page in bytes	
	ReadPageBurstSize		
	Туре	uint32	
	Comment	Size of a read page burst in bytes. Equals ReadPageSize in case burst is disabled	
	WritePageBurstSize		
	Туре	uint32	
	Comment	Size of a page burst in bytes. Equals WritePageSize in case burst is disabled	
	Hwld		
	Туре	uint32	
	Comment	Referenced memory driver hardware identifier	
Description	This structure contains in MemAcc_GetMemoryInfo	information of Mem device characteristics. It can be accessed via the o() service.	
	Tags: atp.Status=draft		
Available via	MemAcc.h		

∫(SRS_MemHwAb_14054)

8.2.10 MemAcc_JobInfoType

 $\textbf{[SWS_MemAcc_10013]} \{ \texttt{DRAFT} \} \; \lceil \;$



Name	MemAcc_JobInfoTy	MemAcc_JobInfoType (draft)		
Kind	Structure	Structure		
	LogicalAddress	LogicalAddress		
Elements	Туре	uint32		
	Comment	Address of currently active address area request		
	Length			
	Туре	uint32		
	Comment	Length of the currently active address area request		
	Hwld			
	Туре	MemAcc_HwldType		
	Comment	Referenced memory driver hardware identifier		
	MemInstanceId			
	Туре	uint32		
	Comment	Instance ID of the current memory request		
	MemAddress	MemAddress		
	Туре	uint32		
	Comment	Physical address of the current memory driver request		
	MemLength			
	Туре	uint32		
	Comment	Length of memory driver request		
	CurrentJob			
	Туре	MemAcc_JobType		
	Comment	Currently active MemAcc job		
	MemResult			
	Туре	MemAcc_JobResultType		
	Comment	Current or last Mem driver result		
	LogicalAddress			
	Туре	uint64		
	Comment	Address of currently active address area request		
Description	This structure conta	This structure contains information the current processing state of the MemAcc module.		
	Tags: atp.Status=d	raft		
Available via	MemAcc.h			

\(\((SRS_MemHwAb_14040 \)

8.2.11 MemAcc_HwldType

[SWS_MemAcc_10010]{DRAFT}

Name	MemAcc_HwldType (draft)		
Kind	Enumeration		
Range	0 - 4294967295	_	The name of each enum parameter is constructed from the Mem module name and the Mem instance name





Description	Type for the unique numeric identifiers of all Mem hardware instances used for hardware specific requests.
	Tags: atp.Status=draft
Available via	MemAcc.h

∫(SRS_MemHwAb_14042)

8.2.12 MemAcc_MemApiType

$\textbf{[SWS_MemAcc_10014]} \{ \texttt{DRAFT} \} \; \lceil \;$

Name	MemAcc_MemApi	Type (draft)		
Kind	Structure	Structure		
	Uniqueld			
Elements	Туре	uint64		
	Comment	Unique ID		
	Flags	'		
	Туре	uint64		
	Comment	Header flags		
	Header			
	Туре	uint64		
	Comment	Address of Mem driver header structure		
	Delimiter			
	Туре	uint64		
	Comment	Address of Mem driver delimiter field		
	InitFunc			
	Туре	MemAcc_MemInitFuncType*		
	Comment	Mem_Init function pointer		
	MainFunc			
	Туре	MemAcc_MemMainFuncType*		
	Comment	Mem_Main function pointer		
	GetJobResultFunc	GetJobResultFunc		
	Туре	MemAcc_MemGetJobResultFuncType*		
	Comment	Mem_GetJobResult function pointer		
	ReadFunc			
	Туре	MemAcc_MemReadFuncType*		
	Comment	Mem_Read function pointer		
	WriteFunc	WriteFunc		
	Туре	MemAcc_MemWriteFuncType*		
	Comment	Mem_Write function pointer		
	EraseFunc			
	Туре	MemAcc_MemEraseFuncType*		
	Comment	Mem_Erase function pointer		





	PropagateErrorFunc			
	Туре	MemAcc_MemPropagateErrorFuncType*		
	Comment	Mem_PropagateError function pointer		
	BlankCheckFunc	BlankCheckFunc		
	Туре	MemAcc_MemBlankCheckFuncType*		
	Comment	Mem_BlankCheck function pointer		
	SuspendFunc			
	Туре	MemAcc_MemSuspendFuncType*		
	Comment	Mem_Suspend function pointer		
	ResumeFunc			
	Type MemAcc_MemResumeFuncType*			
	Comment	Mem_Resume function pointer		
	HwSpecificServiceFunc	HwSpecificServiceFunc		
	Туре	MemAcc_MemHwSpecificServiceFuncType*		
	Comment	Hardware specific service function pointer		
Description	This structure contains elements for accessing the Mem driver service functions and consistency information.			
	Tags: atp.Status=draft			
Available via	MemAcc.h			

(SRS_MemHwAb_14045)

8.2.13 MemAcc_MemAddressType

[SWS_MemAcc_91013]{DRAFT}

Name	MemAcc_MemAddressType (draft)	
Kind	Туре	
Derived from	MemAcc_AddressType	
Description	Physical memory device address type	
	Tags: atp.Status=draft	
Available via	MemAcc.h	

\(\((SRS_MemHwAb_14046 \)

8.2.14 MemAcc_MemConfigType

[SWS_MemAcc_91012]{DRAFT}

Name	MemAcc_MemConfigType (draft)
Kind	Туре





Derived from	void	
Description	Memory driver configuration structure type	
	Tags: atp.Status=draft	
Available via	MemAcc.h	

(SRS_BSW_00414)

8.2.15 MemAcc_MemDataType

[SWS_MemAcc_91020]{DRAFT}

Name	MemAcc_MemDataType (draft)	
Kind	Туре	
Derived from	uint8	
Description	General data type	
	Tags: atp.Status=draft	
Available via	MemAcc.h	

(SRS_MemHwAb_14051)

8.2.16 MemAcc_MemInstanceIdType

[SWS_MemAcc_91011]{DRAFT}

Name	MemAcc_MemInstanceIdType (draft)	
Kind	Туре	
Derived from	uint32	
Description	Memory driver instance ID type	
	Tags: atp.Status=draft	
Available via	MemAcc.h	

(SRS_MemHwAb_14043)

8.2.17 MemAcc_MemJobResultType

[SWS_MemAcc_91016]{DRAFT}

Name	MemAcc_MemJobResultType (draft)	
Kind	Enumeration	





Range	MEM_JOB_OK	0x00	The last job has been finished successfully
	MEM_JOB_PENDING	0x01	A job is currently being processed
	MEM_JOB_FAILED	0x02	Job failed for some unspecific reason
	MEM_INCONSISTENT	0x03	The checked page is not blank
	MEM_ECC_ UNCORRECTED	0x04	Uncorrectable ECC errors occurred during memory access
	MEM_ECC_CORRECTED	0x05	Correctable ECC errors occurred during memory access
Description	Asynchronous job result type		
	Tags: atp.Status=draft		
Available via	MemAcc.h		

\(\((SRS_MemHwAb_14040 \)

8.2.18 MemAcc_MemLengthType

[SWS_MemAcc_91014]{DRAFT}

Name	MemAcc_MemLengthType (draft)	
Kind	Туре	
Derived from	uint32	
Description	Physical memory device length type	
	Tags: atp.Status=draft	
Available via	MemAcc.h	

(SRS_MemHwAb_14046)

8.2.19 MemAcc_MemHwServiceIdType

[SWS_MemAcc_10008]{DRAFT}

Name	MemAcc_MemHwServiceIdType (draft)	
Kind	Туре	
Derived from	uint32	
Description	Index type for Mem driver hardware specific service table.	
	Tags: atp.Status=draft	
Available via	MemAcc.h	

\(\((SRS_MemHwAb_14056 \)



8.2.20 MemAcc_MemInitFuncType

[SWS_MemAcc_91000]{DRAFT}

Name	MemAcc_MemInitFuncType (draft)		
Kind	Function Pointer		
Syntax	<pre>void (*MemAcc_MemInitFuncType) (MemAcc_MemConfigType* configPtr)</pre>		
Parameters (in)	configPtr	configPtr Pointer to the Mem driver configuration data structure.	
Parameters (inout)	None		
Parameters (out)	None		
Return value	None		
Description	Function pointer for the Mem_Init service for the invocation of the Mem driver API via function pointer interface.		
	Tags: atp.Status=draft		
Available via	MemAcc.h		

(SRS_MemHwAb_14045)

8.2.21 MemAcc_MemDeInitFuncType

[SWS_MemAcc_91018]{DRAFT}

Name	MemAcc_MemDeInitFuncType (draft)		
Kind	Function Pointer		
Syntax	<pre>void (*MemAcc_MemDeInitFuncType) (void)</pre>		
Parameters (in)	None		
Parameters (inout)	None		
Parameters (out)	None		
Return value	None		
Description	Function pointer for the Mem_Delnit service for the invocation of the Mem driver API via function pointer interface.		
	Tags: atp.Status=draft		
Available via	MemAcc.h		

(SRS_MemHwAb_14045)

8.2.22 MemAcc_MemGetJobResultFuncType

[SWS_MemAcc_91002]{DRAFT}



Name	MemAcc_MemGetJobResultFuncType (draft)		
Kind	Function Pointer		
Syntax	<pre>MemAcc_MemJobResultType (*MemAcc_MemGetJobResultFuncType) (MemAcc_MemInstanceIdType instanceId)</pre>		
Parameters (in)	instanceId	instanceId ID of the related memory driver instance.	
Parameters (inout)	None		
Parameters (out)	None		
Return value	MemAcc_MemJobResult Most recent job result. Type		
Description	Function pointer for the Mem_JobResultType service for the invocation of the Mem driver API via function pointer interface.		
	Tags: atp.Status=draft		
Available via	MemAcc.h		

\(\((SRS_MemHwAb_14045 \)

8.2.23 MemAcc_MemSuspendFuncType

[SWS_MemAcc_91008]{DRAFT}

Name	MemAcc_MemSuspendFuncType (draft)		
Kind	Function Pointer		
Syntax	<pre>void (*MemAcc_MemSuspendFuncType) (MemAcc_MemInstanceIdType instanceId)</pre>		
Parameters (in)	instanceld	instanceId ID of the related memory driver instance.	
Parameters (inout)	None		
Parameters (out)	None		
Return value	None		
Description	Function pointer for the Mem_Suspend service for the invocation of the Mem driver API via function pointer interface.		
	Tags: atp.Status=draft		
Available via	MemAcc.h		

(SRS_MemHwAb_14045)

8.2.24 MemAcc_MemResumeFuncType

[SWS_MemAcc_91009]{DRAFT}

Name	MemAcc_MemResumeFuncType (draft)	
Kind	Function Pointer	





Syntax	<pre>void (*MemAcc_MemResumeFuncType) (MemAcc_MemInstanceIdType instanceId)</pre>	
Parameters (in)	instanceId	ID of the related memory driver instance.
Parameters (inout)	None	
Parameters (out)	None	
Return value	None	
Description	Function pointer for the Mem_Resume service for the invocation of the Mem driver API via function pointer interface.	
	Tags: atp.Status=draft	
Available via	MemAcc.h	

(SRS_MemHwAb_14045)

8.2.25 MemAcc_MemPropagateErrorFuncType

[SWS_MemAcc_91006]{DRAFT}

Name	MemAcc_MemPropagateErrorFuncType (draft)	
Kind	Function Pointer	
Syntax	<pre>void (*MemAcc_MemPropagateErrorFuncType) (MemAcc_MemInstanceIdType instanceId)</pre>	
Parameters (in)	instanceld	ID of the related memory driver instance.
Parameters (inout)	None	
Parameters (out)	None	
Return value	None	
Description	Function pointer for the Mem_PropagateError service for the invocation of the Mem driver API via function pointer interface. Tags: atp.Status=draft	
Available via	MemAcc.h	

\(\((SRS_MemHwAb_14045 \)

8.2.26 MemAcc_MemReadFuncType

$\textbf{[SWS_MemAcc_91003]} \{ \texttt{DRAFT} \} \; \lceil \;$

Name	MemAcc_MemReadFuncType (draft)	
Kind	Function Pointer	





Syntax	Std_ReturnType (*MemAcc_MemReadFuncType) (MemAcc_MemInstanceIdType instanceId, MemAcc_MemAddressType sourceAddress, MemAcc_MemLengthType length, MemAcc_MemDataType* destinationDataPtr)	
Parameters (in)	instanceId ID of the related memory driver instance.	
	sourceAddress Physical address to read data from.	
	length Read length in bytes.	
Parameters (inout)	None	
Parameters (out)	destinationDataPtr Destination memory pointer to store the read data.	
Return value	Std_ReturnType	E_OK: The requested job has been accepted by the module. E_NOT_OK: The requested job has not been accepted by the module. module. E_MEM_SERVICE_NOT_AVAIL: The service function is not implemented.
Description	Function pointer for the Mem_Read service for the invocation of the Mem driver API via function pointer interface.	
	Tags: atp.Status=draft	
Available via	MemAcc.h	

\(\((SRS_MemHwAb_14045 \)

8.2.27 MemAcc_MemWriteFuncType

$\textbf{[SWS_MemAcc_91004]} \{ \texttt{DRAFT} \} \; \lceil \;$

Name	MemAcc_MemWriteFuncType (draft)	
Kind	Function Pointer	
Syntax	<pre>void (*MemAcc_MemWriteFuncType) (Std_ReturnType return, MemAcc_MemInstanceIdType instanceId, MemAcc_MemAddressType targetAddress, const MemAcc_MemDataType* sourceDataPtr, MemAcc_MemLengthType length)</pre>	
Parameters (in)	return E_OK: The requested job has been accepted by the module. NOT_OK: The requested job has not been accepted by the module. E_MEM_SERVICE_NOT_AVAIL: The service function not implemented.	
	instanceId ID of the related memory driver instance.	
	targetAddress Physical write address (aligned to page size).	
	sourceDataPtr Source data pointer (aligned to page size).	
	length	Write length in bytes (aligned to page size).
Parameters (inout)	None	
Parameters (out)	None	
Return value	None	





Description	Function pointer for the Mem_Write service for the invocation of the Mem driver API via function pointer interface.	
	Tags: atp.Status=draft	
Available via	MemAcc.h	

(SRS_MemHwAb_14045)

8.2.28 MemAcc_MemEraseFuncType

[SWS_MemAcc_91005]{DRAFT}

Name	MemAcc_MemEraseFuncType (draft)		
Kind	Function Pointer	Function Pointer	
Syntax	<pre>void (*MemAcc_MemEraseFuncType) (Std_ReturnType return, MemAcc_MemInstanceIdType instanceId, MemAcc_MemAddressType targetAddress, MemAcc_MemLengthType length)</pre>		
Parameters (in)	return	E_OK: The requested job has been accepted by the module. E_NOT_OK: The requested job has not been accepted by the module. E_MEM_SERVICE_NOT_AVAIL: The service function is not implemented.	
	instanceId	instanceId ID of the related memory driver instance. targetAddress Physical erase address (aligned to sector size).	
	targetAddress		
	length	Erase length in bytes (aligned to sector size).	
Parameters (inout)	None	None	
Parameters (out)	None	None	
Return value	None		
Description	Function pointer for the Mem_Erase service for the invocation of the Mem driver API via function pointer interface.		
	Tags: atp.Status=draft		
Available via	MemAcc.h		

\(\((SRS_MemHwAb_14045 \)

8.2.29 MemAcc_MemBlankCheckFuncType

[SWS_MemAcc_91007]{DRAFT}

Name	MemAcc_MemBlankCheckFuncType (draft)
Kind	Function Pointer





Syntax	<pre>void (*MemAcc_MemBlankCheckFuncType) (Std_ReturnType return, MemAcc_MemInstanceIdType instanceId, MemAcc_MemAddressType targetAddress, MemAcc_MemLengthType length)</pre>	
Parameters (in)	return E_OK: The requested job has been accepted by the module. E_ NOT_OK: The requested job has not been accepted by the module. E_MEM_SERVICE_NOT_AVAIL: The service function is not implemented.	
	instanceId ID of the related memory driver instance. targetAddress Physical blank check address. length Blank check length.	
Parameters (inout)	None	
Parameters (out)	None	
Return value	None	
Description	Function pointer for the Mem_BlankCheck service for the invocation of the Mem driver API via function pointer interface.	
	Tags: atp.Status=draft	
Available via	MemAcc.h	

\(\((SRS_MemHwAb_14045 \)

8.2.30 MemAcc_MemHwSpecificServiceFuncType

[SWS_MemAcc_91010]{DRAFT}

Name	MemAcc_MemHwSpecificServiceFuncType (draft)	
Kind	Function Pointer	
Syntax	<pre>void (*MemAcc_MemHwSpecificServiceFuncType) (Std_ReturnType return, MemAcc_MemInstanceIdType instanceId, MemAcc_MemHwServiceIdType hwServiceId, MemAcc_MemDataType* dataPtr, MemAcc_MemLengthType* lengthPtr)</pre>	
Parameters (in)	return	E_OK: The requested job has been accepted by the module. E_NOT_OK: The requested job has not been accepted by the module. E_MEM_SERVICE_NOT_AVAIL: The service function is not implemented.
	instanceId ID of the related memory driver instance. hwServiceId Hardware specific service request identifier for dispatching the request.	
	lengthPtr	Size pointer of the passed data.
Parameters (inout)	dataPtr	Request specific data pointer.
Parameters (out)	None	
Return value	None	





Description	Function pointer for the Mem_HwSpecificService function for the invocation of the Mem driver API via function pointer interface.	
	Tags: atp.Status=draft	
Available via	MemAcc.h	

(SRS_MemHwAb_14045)

8.2.31 MemAcc_MemMainFuncType

[SWS_MemAcc_91001]{DRAFT}

Name	MemAcc_MemMainFuncType (draft)
Kind	Function Pointer
Syntax	<pre>void (*MemAcc_MemMainFuncType) (void)</pre>
Parameters (in)	None
Parameters (inout)	None
Parameters (out)	None
Return value	None
Description	Function pointer for the Mem_MainFunction service for the invocation of the Mem driver API via function pointer interface.
	Tags: atp.Status=draft
Available via	MemAcc.h

\(\((SRS_MemHwAb_14045 \)

8.3 Function Definitions

8.3.1 Synchronous Functions

8.3.1.1 MemAcc_Init

$\textbf{[SWS_MemAcc_10015]} \{ \mathsf{DRAFT} \} \; \lceil \;$

Service Name	MemAcc_Init (draft)
Syntax	<pre>void MemAcc_Init (const MemAcc_ConfigType* configPtr)</pre>
Service ID [hex]	0x01
Sync/Async	Synchronous
Reentrancy	Non Reentrant





	١.
/	\
\sim	_

Parameters (in)	configPtr	Pointer to selected configuration structure.
Parameters (inout)	None	
Parameters (out)	None	
Return value	None	
Description	Initialization function - initializes all variables and sets the module state to initialized.	
	Tags: atp.Status=draft	
Available via	MemAcc.h	

(SRS_MemHwAb_14035, SRS_MemHwAb_14037)

[SWS_MemAcc_00025]{DRAFT} [The service MemAcc_Init shall initialize the MemAcc module internal states. If MemAccMemInvocation is set to INDI-RECT_DYNAMIC or INDIRECT_STATIC, MemAcc_Init shall also initialize all available Mem drivers by calling the Mem driver's individual initialization functions.] (SRS_-MemHwAb 14037, SRS MemHwAb 14047)

8.3.1.2 MemAcc Delnit

[SWS MemAcc 10041]{DRAFT}

Service Name	MemAcc_DeInit (draft)
Syntax	<pre>void MemAcc_DeInit (void)</pre>
Service ID [hex]	0x01
Sync/Async	Synchronous
Reentrancy	Non Reentrant
Parameters (in)	None
Parameters (inout)	None
Parameters (out)	None
Return value	None
Description	Deinitialize module. If there are still access jobs pending, they are immediately terminated and the module state is set to unitialized. Therefore, MemAcc must be re-initialized before it will accept any new job requests after this service is processed.
	Tags: atp.Status=draft
Available via	MemAcc.h

(SRS MemHwAb 14037)

[SWS_MemAcc_00111]{DRAFT} [The service MemAcc_DeInit shall de-initialize the MemAcc module internal states. If MemAccMemInvocation is set to INDIRECT_DYNAMIC or INDIRECT_STATIC, MemAcc_Init shall also de-initialize all available Mem drivers by calling the Mem driver's individual de-initialization functions.] (SRS_MemHwAb_14047)



8.3.1.3 MemAcc_GetVersionInfo

[SWS_MemAcc_10016]{DRAFT}

Service Name	MemAcc_GetVersionInfo (d	raft)
Syntax	<pre>void MemAcc_GetVersionInfo (Std_VersionInfoType* versionInfoPtr)</pre>	
Service ID [hex]	0x02	
Sync/Async	Synchronous	
Reentrancy	Reentrant	
Parameters (in)	None	
Parameters (inout)	None	
Parameters (out)	versionInfoPtr	Pointer to where to store the version information of this module.
Return value	None	
Description	Service to return the version information of the MemAcc module.	
	Tags: atp.Status=draft	
Available via	MemAcc.h	

(SRS_BSW_00003)

[SWS_MemAcc_00027]{DRAFT} [If development error detection is enabled by MemAccDevErrorDetect, the service MemAcc_GetVersionInfo shall raise the development error MEMACC_E_PARAM_POINTER if the argument is a NULL pointer.] (SRS_BSW_00323)

8.3.1.4 MemAcc GetJobResult

[SWS_MemAcc_10019]{DRAFT}

Service Name	MemAcc_GetJobResult (draft)		
Syntax	MemAcc_JobResultType MemAcc_GetJobResult (MemAcc_AddressAreaIdType addressAreaId)		
Service ID [hex]	0x05		
Sync/Async	Synchronous	Synchronous	
Reentrancy	Reentrant		
Parameters (in)	addressAreald	Numeric identifier of address area.	
Parameters (inout)	None		
Parameters (out)	None		
Return value	MemAcc_JobResultType	Most recent job result of the referenced address area.	
Description	Returns the consolidated job result of the address area referenced by addressAreald.		
	Tags: atp.Status=draft		
Available via	MemAcc.h		



|(SRS_MemHwAb_14040)

[SWS_MemAcc_00092]{DRAFT} [The service MemAcc_GetJobResult shall return the consolidated result of the last MemAcc job. | (SRS_MemHwAb_14040)

Note: If a MemAcc job is still pending, the API returns the result of the last MemAcc job.

[SWS_MemAcc_00033]{DRAFT} [If development error detection is enabled by MemAccDevErrorDetect, the service MemAcc_GetJobResult shall check that the MemAcc module has been initialized. If this check fails, MemAcc_GetJobResult shall raise the development error MEMACC_E_UNINIT.|(SRS_BSW_00406)

[SWS_MemAcc_00034]{DRAFT} [If development error detection is enabled by MemAccDevErrorDetect, the service MemAcc_GetJobResult shall check that the provided addressAreaId is consistent with the configuration. If this check fails, MemAcc_GetJobResult shall raise the development error MEMACC_E_PARAM_ADDRESS_AREA_ID.|(SRS_BSW_00323)

8.3.1.5 MemAcc GetJobStatus

[SWS_MemAcc_10040]{DRAFT}

Service Name	MemAcc_GetJobStatus (draft)	
Syntax	MemAcc_JobStatusType MemAcc_GetJobStatus (MemAcc_AddressAreaIdType addressAreaId)	
Service ID [hex]	0x05	
Sync/Async	Synchronous	
Reentrancy	Reentrant	
Parameters (in)	addressAreald	Numeric identifier of address area.
Parameters (inout)	None	
Parameters (out)	None	
Return value	MemAcc_JobStatusType	Most recent job result of the referenced address area.
Description	Returns the status of the MemAcc job referenced by addressAreald.	
	Tags: atp.Status=draft	
Available via	MemAcc.h	

(SRS_MemHwAb_14040)

[SWS_MemAcc_00118]{DRAFT} [The service MemAcc_GetJobStatus shall return MEMACC_JOB_IDLE for the referenced addressAreaId if MemAcc is not processing a job request. | (SRS MemHwAb 14040)



[SWS_MemAcc_00119]{DRAFT} [The service MemAcc_GetJobStatus shall return MEMACC_JOB_PENDING for the referenced addressAreaId if MemAcc is currently processing a job request. | (SRS MemHwAb 14040)

[SWS_MemAcc_00117]{DRAFT} [If development error detection is enabled by MemAccDevErrorDetect, the service MemAcc_GetJobStatus shall check that the MemAcc module has been initialized. If this check fails, MemAcc_GetJobStatus shall raise the development error MEMACC_E_UNINIT.|(SRS_BSW_00406)

8.3.1.6 MemAcc_GetMemoryInfo

[SWS_MemAcc_10020]{DRAFT}

Service Name	MemAcc_GetMemoryInfo (d	draft)
Syntax	Std_ReturnType MemAcc_GetMemoryInfo (MemAcc_AddressAreaIdType addressAreaId, MemAcc_AddressType address, MemAcc_MemoryInfoType* memoryInfoPtr)	
Service ID [hex]	0x06	
Sync/Async	Synchronous	
Reentrancy	Reentrant	
Parameters (in)	addressAreald Numeric identifier of address area.	
	address	Address in logical address space from which corresponding memory device information shall be retrieved.
Parameters (inout)	None	
Parameters (out)	memoryInfoPtr	Destination memory pointer to store the memory device information.
Return value	Std_ReturnType	E_OK: The requested addressAreald and address are valid. E_NOT_OK: The requested addressAreald and address are invalid.
Description	This service function retrieves the physical memory device information of a specific address area. It can be used by an upper layer to get all necessary information to align the start address and trim the length for erase/write jobs.	
	Tags: atp.Status=draft	
Available via	MemAcc.h	

(SRS_MemHwAb_14054)

[SWS_MemAcc_00035]{DRAFT} [If development error detection is enabled by MemAccDevErrorDetect, the service MemAcc_GetMemoryInfo shall check that the MemAcc module has been initialized. If this check fails, MemAcc_GetMemoryInfo shall raise the development error MEMACC_E_UNINIT.|(SRS_BSW_00406)

[SWS_MemAcc_00036]{DRAFT} [If development error detection is enabled by MemAccDevErrorDetect, the service MemAcc_GetMemoryInfo shall check that the provided addressAreald is consistent with the configuration. If



this check fails, MemAcc_GetMemoryInfo shall raise the development error MEMACC_E_PARAM_ADDRESS_AREA_ID.|(SRS_BSW_00323)

[SWS_MemAcc_00037]{DRAFT} [If development error detection is enabled by MemAccDevErrorDetect, the service MemAcc_GetMemoryInfo shall raise the development error MEMACC_E_PARAM_POINTER if the memoryInfoPtr argument is a NULL pointer.] (SRS_BSW_00323)

8.3.1.7 MemAcc_GetProcessedLength

[SWS_MemAcc_10021]{DRAFT}

Service Name	MemAcc_GetProcessedLength (draft)	
Syntax	MemAcc_LengthType MemAcc_GetProcessedLength (MemAcc_AddressAreaIdType addressAreaId)	
Service ID [hex]	0x07	
Sync/Async	Synchronous	
Reentrancy	Reentrant	
Parameters (in)	addressAreald	Numeric identifier of address area.
Parameters (inout)	None	
Parameters (out)	None	
Return value	MemAcc_LengthType	Processed length of current job (in bytes).
Description	Returns the accumulated number of bytes that have already been processed in the current job.	
	Tags: atp.Status=draft	
Available via	MemAcc.h	

(SRS MemHwAb 14040)

[SWS_MemAcc_00120]{DRAFT} [The service MemAcc_GetProcessedLength shall return the processed length of the current MemAcc job referenced by addressAreaId. If the job finished successfully, MemAcc_GetProcessedLength shall return the requested job length of the finished job until a new MemAcc job request is received for the referenced addressAreaId. | (SRS_MemHwAb_14040)

[SWS_MemAcc_00038]{DRAFT} [If development error detection is enabled by MemAccDevErrorDetect, the service MemAcc_GetProcessedLength shall check that the MemAcc module has been initialized. If this check fails, MemAcc_GetProcessedLength shall raise the development error MEMACC_E_UNINIT.] (SRS_BSW_00406)

[SWS_MemAcc_00039]{DRAFT} [If development error detection is enabled by MemAccDevErrorDetect, the service MemAcc_GetProcessedLength shall check



that the provided addressAreaId is consistent with the configuration. If this check fails, MemAcc_GetProcessedLength shall raise the development error MEMACC_E_PARAM_ADDRESS_AREA_ID. | (SRS BSW 00323)

8.3.1.8 MemAcc_GetJobInfo

[SWS_MemAcc_10022]{DRAFT}

Service Name	MemAcc_GetJobInfo (draft		
Syntax	<pre>void MemAcc_GetJobInfo (MemAcc_AddressAreaIdType addressAreaId, MemAcc_JobInfoType* jobInfoPtr)</pre>		
Service ID [hex]	0x08		
Sync/Async	Synchronous		
Reentrancy	Reentrant	Reentrant	
Parameters (in)	addressAreald	Numeric identifier of address area.	
Parameters (inout)	None	None	
Parameters (out)	jobInfoPtr	Structure pointer to return the detailed processing information of the current job.	
Return value	None		
Description	Returns detailed information of the current memory job like memory device ID, job type, job processing state or job result, address area as well as address and length. Tags: atp.Status=draft		
Available via	MemAcc.h		

(SRS MemHwAb 14040)

[SWS_MemAcc_00040]{DRAFT} [If development error detection is enabled by MemAccDevErrorDetect, the service MemAcc_GetJobInfo shall check that the MemAcc module has been initialized. If this check fails, MemAcc_GetJobInfo shall raise the development error MEMACC_E_UNINIT.|(SRS_BSW_00406)

[SWS_MemAcc_00041]{DRAFT} [If development error detection is enabled by MemAccDevErrorDetect, the service MemAcc_GetJobInfo shall check that the provided addressAreaId is consistent with the configuration. If this check fails, MemAcc_GetJobInfo shall raise the development error MEMACC_E_PARAM_ADDRESS_AREA_ID.](SRS_BSW_00323)

[SWS_MemAcc_00042]{DRAFT} [If development error detection is enabled by MemAccDevErrorDetect, the service MemAcc_GetJobInfo shall raise the development error MEMACC_E_PARAM_POINTER if the memoryInfoPtr argument is a NULL pointer.|(SRS_BSW_00323)



8.3.1.9 MemAcc_ActivateMem

[SWS_MemAcc_10033]{DRAFT}

Service Name	MemAcc_ActivateMem (dra	ft)	
Syntax	Std_ReturnType MemAcc_ActivateMem (MemAcc_AddressType headerAddress, MemAcc_HwIdType hwId)		
Service ID [hex]	0x14		
Sync/Async	Synchronous	Synchronous	
Reentrancy	Reentrant		
Parameters (in)	headerAddress	headerAddress Physical start address of Mem driver header structure.	
	hwld	Unique numeric memory driver identifier.	
Parameters (inout)	None		
Parameters (out)	None	None	
Return value	Std_ReturnType	E_OK: Mem driver activation successful. E_NOT_OK: Mem driver activation failed.	
Description	Dynamic activation and initialization of a Mem driver referenced by hwld and headerAddress.		
	Tags: atp.Status=draft		
Available via	MemAcc.h		

(SRS MemHwAb 14045, SRS MemHwAb 14047)

[SWS_MemAcc_00121]{DRAFT} [If MemAccMemInvocation is set to INDI-RECT_DYNAMIC, the service MemAcc_ActivateMem shall initialize the Mem driver referenced by hwId and headerAddress and update the internal driver activation state.|(SRS_MemHwAb_14045, SRS_MemHwAb_14047)

[SWS_MemAcc_00088]{DRAFT} [If development error detection is enabled by MemAccDevErrorDetect, the service MemAcc_ActivateMem shall check that the MemAcc module has been initialized. If this check fails, MemAcc_ActivateMem shall raise the development error MEMACC_E_UNINIT.|(SRS_BSW_00406)

[SWS_MemAcc_00089]{DRAFT} [If development error detection is enabled by MemAccDevErrorDetect, the service MemAcc_ActivateMem shall ensure the validity of the Mem driver binary by checks in the following sequence:

- 1. Comparing the header address field with the start address of the Mem driver binary (if the Mem driver was not compiled as a relocatable binary)
- 2. Unique ID validity
- 3. Availability and consistency of the delimiter field

If any of these checks fails MemAcc_ActivateMem shall raise the development error MEMACC_E_MEM_INIT_FAILED. \((SRS_MemHwAb_14045, SRS_MemHwAb_14049) \)



8.3.1.10 MemAcc DeactivateMem

[SWS_MemAcc_10034]{DRAFT}

Service Name	MemAcc_DeactivateMem (d	draft)	
Syntax	Std_ReturnType MemAcc_DeactivateMem (MemAcc_HwIdType hwId, MemAcc_AddressType headerAddress)		
Service ID [hex]	0x15		
Sync/Async	Synchronous	Synchronous	
Reentrancy	Reentrant	Reentrant	
Parameters (in)	hwld	hwld Unique numeric memory driver identifier.	
	headerAddress Physical start address of Mem driver header structure.		
Parameters (inout)	None		
Parameters (out)	None	None	
Return value	Std_ReturnType	E_OK: Mem driver deactivation successful. E_NOT_OK: Mem driver deactivation failed.	
Description	Dynamic deactivation of a Mem driver referenced by hwld and headerAddress.		
	Tags: atp.Status=draft		
Available via	MemAcc.h		

(SRS MemHwAb 14045, SRS MemHwAb 14047)

[SWS_MemAcc_00122] {DRAFT} [If MemAccMemInvocation is set to INDIRECT_DYNAMIC, the service MemAcc_DeactivateMem shall de-initialize the Mem driver referenced by hwId and headerAddress and update the internal driver activation state.] $(SRS_MemHwAb_14045, SRS_MemHwAb_14047)$

[SWS_MemAcc_00090]{DRAFT} [If development error detection is enabled by MemAccDevErrorDetect, the service MemAcc_DeactivateMem shall check that the MemAcc module has been initialized. If this check fails, MemAcc_DeactivateMem shall raise the development error MEMACC_E_UNINIT.|(SRS_BSW_00406)

[SWS_MemAcc_00123]{DRAFT} [In case a MemAcc job is still pending, the service $MemAcc_DeactivateMem$ shall return E_NOT_OK without any further action.] (SRS_-MemHwAb_14031)

Note: After calling the MemAcc_DeactivateMem service, the integration code shall also clear the memory area where the corresponding Mem driver is stored to prevent accidental execution of a Mem driver.



8.3.2 Asynchronous Functions

8.3.2.1 MemAcc Cancel

[SWS_MemAcc_10018]{DRAFT}

Service Name	MemAcc_Cancel (draft)	
Syntax	<pre>void MemAcc_Cancel (MemAcc_AddressAreaIdType addressAreaId)</pre>	
Service ID [hex]	0x04	
Sync/Async	Asynchronous	
Reentrancy	Reentrant	
Parameters (in)	addressAreald	Numeric identifier of address area.
Parameters (inout)	None	
Parameters (out)	None	
Return value	None	
Description	Triggers a cancel operation of the pending job for the address area referenced by the address Areald. Cancelling affects only jobs in pending state. For any other states, the request will be ignored.	
	Tags: atp.Status=draft	
Available via	MemAcc.h	

(SRS MemHwAb 14038, SRS MemHwAb 14039)

[SWS_MemAcc_00028]{DRAFT} [When the MemAcc_Cancel service is called by an upper layer, the MemAcc module shall wait for the completion of a pending Mem job and stop further processing of the current MemAcc job.] (SRS_MemHwAb_14038, SRS_MemHwAb_14044)

Note: Not all memory devices support a cancel operation in hardware. To keep the behavior consistent, the cancel operation is only applied on the physical segmentation.

[SWS_MemAcc_00029]{DRAFT} In case no MemAcc job is pending, the MemAcc_-Cancel service shall just return without any further action, i.e., the result of the last MemAcc job shall not be affected. $|(SRS_MemHwAb_14031)|$

[SWS_MemAcc_00030]{DRAFT} [If development error detection is enabled by MemAccDevErrorDetect, the service MemAcc_Cancel shall check that the MemAcc module has been initialized. If this check fails, MemAcc_Cancel shall raise the development error MEMACC_E_UNINIT.|(SRS_BSW_00406)

[SWS_MemAcc_00031]{DRAFT} [If development error detection is enabled by MemAccDevErrorDetect, the service MemAcc_Cancel shall check that the provided



addressAreaId is consistent with the configuration. If this check fails, MemAcc_-Cancel shall raise the development error MEMACC_E_PARAM_ADDRESS_AREA_ID.] (SRS BSW 00323)

8.3.2.2 MemAcc_Read

[SWS_MemAcc_10023]{DRAFT}

Service Name	MemAcc_Read (draft)	
Syntax	Std_ReturnType MemAcc_Read (MemAcc_AddressAreaIdType addressAreaId, MemAcc_AddressType sourceAddress, MemAcc_DataType* destinationDataPtr, MemAcc_LengthType length)	
Service ID [hex]	0x09	
Sync/Async	Asynchronous	
Reentrancy	Reentrant	
Parameters (in)	addressAreald	Numeric identifier of address area.
	sourceAddress	Read address in logical address space.
	length	Read length in bytes (aligned to read page size)
Parameters (inout)	None	
Parameters (out)	destinationDataPtr	Destination memory pointer to store the read data.
Return value	Std_ReturnType	E_OK: The requested job has been accepted by the module. E_NOT_OK: The requested job has not been accepted by the module. module. E_MEM_SERVICE_NOT_AVAIL: The underlying Mem driver service function is not available.
Description	Triggers a read job to copy data from the source address into the referenced destination data buffer. The result of this service can be retrieved using the MemAcc_GetJobResult API. If the read operation was successful, the result of the job is MEMACC_MEM_OK. If the read operation failed, the result of the job is either MEMACC_MEM_FAILED in case of a general error or MEMACC_MEM_ECC_CORRECTED/MEMACC_MEM_ECC_UNCORRECTED in case of a correctable/uncorrectable ECC error.	
	Tags: atp.Status=draft	
Available via	MemAcc.h	

| (SRS_MemHwAb_14038, SRS_MemHwAb_14039)

[SWS_MemAcc_00043]{DRAFT} [If development error detection is enabled by MemAccDevErrorDetect, the service MemAcc_Read shall check that the MemAcc module has been initialized. If this check fails, MemAcc_Read shall raise the development error MEMACC_E_UNINIT.|(SRS_BSW_00406)

[SWS_MemAcc_00044]{DRAFT} [If development error detection is enabled by MemAccDevErrorDetect, the service MemAcc_Read shall check that the provided addressAreaId is consistent with the configuration. If this check fails, MemAcc_-Read shall raise the development error MEMACC_E_PARAM_ADDRESS_AREA_ID.]



(SRS BSW 00323)

[SWS_MemAcc_00045]{DRAFT} [If development error detection is enabled by MemAccDevErrorDetect, the service MemAcc_Read shall raise the development error MEMACC_E_PARAM_POINTER if the destinationDataPtr argument is a NULL pointer.|(SRS_BSW_00323)

[SWS_MemAcc_00046]{DRAFT} [If development error detection is enabled by MemAccDevErrorDetect, the service MemAcc_Read shall raise the development error MEMACC_E_PARAM_ADDRESS_LENGTH if the address range defined by sourceAddress and length is invalid, i.e. not aligned to MemReadPageSize.] (SRS BSW 00323)

[SWS_MemAcc_00047]{DRAFT} [If development error detection is enabled by MemAccDevErrorDetect, the service MemAcc_Read shall raise the development error MEMACC_E_BUSY if a previous MemAcc job for the same addressAreaId is still being processed.|(SRS_BSW_00323)

8.3.2.3 MemAcc_Write

[SWS_MemAcc_10024]{DRAFT}

Service Name	MemAcc_Write (draft)		
Syntax	Std_ReturnType MemAcc_Write (MemAcc_AddressAreaIdType addressAreaId, MemAcc_AddressType targetAddress, const MemAcc_DataType* sourceDataPtr, MemAcc_LengthType length)		
Service ID [hex]	0x0a		
Sync/Async	Asynchronous	Asynchronous	
Reentrancy	Reentrant	Reentrant	
Parameters (in)	addressAreald	Numeric identifier of address area.	
	targetAddress Write address in logical address space. sourceDataPtr Source data pointer (aligned to MemAccBufferAlignmentValue). length Write length in bytes (aligned to page size).		
Parameters (inout)	None		
Parameters (out)	None		
Return value	Std_ReturnType	E_OK: The requested job has been accepted by the module. E_NOT_OK: The requested job has not been accepted by the module. E_MEM_SERVICE_NOT_AVAIL: The underlying Mem driver service function is not available.	





Description	Triggers a write job to store the passed data to the provided address area with given address and length. The result of this service can be retrieved using the MemAcc_GetJobResult API. If the write operation was successful, the job result is MEMACC_MEM_OK. If there was an issue writing the data, the result is MEMACC_MEM_FAILED. Tags: atp.Status=draft	
Available via	MemAcc.h	

(SRS MemHwAb 14038, SRS MemHwAb 14039)

[SWS_MemAcc_00048]{DRAFT} [If development error detection is enabled by MemAccDevErrorDetect, the service MemAcc_Write shall check that the MemAcc module has been initialized. If this check fails, MemAcc_Write shall raise the development error MEMACC_E_UNINIT.](SRS_BSW_00406)

[SWS_MemAcc_00049]{DRAFT} [If development error detection is enabled by MemAccDevErrorDetect, the service MemAcc_Write shall check that the provided addressAreaId is consistent with the configuration. If this check fails, MemAcc_-Write shall raise the development error MEMACC_E_PARAM_ADDRESS_AREA_ID.] (SRS_BSW_00323)

[SWS_MemAcc_00050]{DRAFT} [If development error detection is enabled by MemAccDevErrorDetect, the service MemAcc_Write shall raise the development error MEMACC_E_PARAM_POINTER if the sourceDataPtr argument is a NULL pointer.](SRS_BSW_00323)

[SWS_MemAcc_00051]{DRAFT} [If development error detection is enabled by MemAccDevErrorDetect, the service MemAcc_Write shall raise the development error MEMACC_E_PARAM_ADDRESS_LENGTH if the address range defined by targetAddress and length is invalid, i.e. not aligned to MemWritePageSize.] (SRS_BSW_00323)

[SWS_MemAcc_00052]{DRAFT} [If development error detection is enabled by MemAccDevErrorDetect, the service MemAcc_Write shall raise the development error MEMACC_E_BUSY if a previous MemAcc job for the same addressAreaId is still being processed.] (SRS_BSW_00323)

8.3.2.4 MemAcc_Erase

[SWS_MemAcc_10025]{DRAFT}



Service Name	MemAcc_Erase (draft)			
Syntax	Std_ReturnType MemAcc_Erase (MemAcc_AddressAreaIdType addressAreaId, MemAcc_AddressType targetAddress, MemAcc_LengthType length)			
Service ID [hex]	0x0b			
Sync/Async	Asynchronous			
Reentrancy	Reentrant			
Parameters (in)	addressAreald	Numeric identifier of address area.		
	targetAddress	Erase address in logical address space (aligned to sector size).		
	length Erase length in bytes (aligned to sector size).			
Parameters (inout)	None			
Parameters (out)	None			
Return value	Std_ReturnType E_OK: The requested job has been accepted by the module. E_NOT_OK: The requested job has not been accepted by the module. E_MEM_SERVICE_NOT_AVAIL: The underlying Mem driver service function is not available.			
Description	Triggers an erase job of the given area.			
	Triggers an erase job of the given area defined by targetAddress and length. The result of this service can be retrieved using the Mem_GetJobResult API. If the erase operation was successful, the result of the job is MEM_JOB_OK. If the erase operation failed, e.g. due to a hardware issue, the result of the job is MEM_JOB_FAILED.			
	Tags: atp.Status=draft			
Available via	MemAcc.h			

(SRS MemHwAb 14038, SRS MemHwAb 14039)

[SWS_MemAcc_00053]{DRAFT} [If development error detection is enabled by MemAccDevErrorDetect, the service MemAcc_Erase shall check that the MemAcc module has been initialized. If this check fails, MemAcc_Erase shall raise the development error MEMACC_E_UNINIT.|(SRS_BSW_00406)

[SWS_MemAcc_00054]{DRAFT} [If development error detection is enabled by MemAccDevErrorDetect, the service MemAcc_Erase shall check that the provided addressAreaId is consistent with the configuration. If this check fails, MemAcc_Erase shall raise the development error MEMACC_E_PARAM_ADDRESS_AREA_ID.] (SRS_BSW_00323)

[SWS_MemAcc_00055]{DRAFT} [If development error detection is enabled by MemAccDevErrorDetect, the service MemAcc_Erase shall raise the development error MEMACC_E_PARAM_ADDRESS_LENGTH if the address range defined by targetAddress and length is invalid, i.e. not aligned to MemEraseSectorSize.] (SRS BSW 00323)



[SWS_MemAcc_00056]{DRAFT} [If development error detection is enabled by MemAccDevErrorDetect, the service MemAcc_Erase shall raise the development error MEMACC_E_BUSY if a previous MemAcc job for the same addressAreaId is still being processed. | (SRS_BSW_00323)

8.3.2.5 MemAcc_Compare

[SWS_MemAcc_10026]{DRAFT}

Service Name	MemAcc_Compare (draft)		
Syntax	Std_ReturnType MemAcc_Compare (MemAcc_AddressAreaIdType addressAreaId, MemAcc_AddressType sourceAddress, const MemAcc_DataType* dataPtr, MemAcc_LengthType length)		
Service ID [hex]	0x0c		
Sync/Async	Asynchronous		
Reentrancy	Reentrant		
Parameters (in)	addressAreald	Numeric identifier of address area.	
	sourceAddress	Compare address in logical address space.	
	dataPtr Pointer to user data which shall be compared to data in me		
	length	Compare length in bytes.	
Parameters (inout)	None		
Parameters (out)	None		
Return value	Std_ReturnType	E_OK: The requested job has been accepted by the module. E_NOT_OK: The requested job has not been accepted by the module. E_MEM_SERVICE_NOT_AVAIL: The underlying Mem driver service function is not available.	
Description	Triggers a job to compare the passed data to the memory content of the provided address area. The job terminates, if all bytes matched or a difference was detected. The result of this service can be retrieved using the MemAcc_GetJobResult() API. If the compare operation determined a mismatch, the result code is MEMACC_MEM_INCONSISTENT.		
Available via	Tags: atp.Status=draft MemAcc.h		
Available via	Memacc.n		

\((SRS_MemHwAb_14038, SRS_MemHwAb_14039)\)

[SWS_MemAcc_00057]{DRAFT} [If development error detection is enabled by MemAccDevErrorDetect, the service MemAcc_Compare shall check that the MemAcc module has been initialized. If this check fails, MemAcc_Compare shall raise the development error MEMACC_E_UNINIT.|(SRS_BSW_00406)

[SWS_MemAcc_00058]{DRAFT} [If development error detection is enabled by MemAccDevErrorDetect, the service MemAcc_Compare shall check that the provided addressAreaId is consistent with the configuration. If this check fails, MemAcc_Compare shall raise the development error



MEMACC_E_PARAM_ADDRESS_AREA_ID. | (SRS BSW 00323)

[SWS_MemAcc_00059]{DRAFT} [If development error detection is enabled by MemAccDevErrorDetect, the service MemAcc_Compare shall raise the development error MEMACC_E_PARAM_POINTER if the dataPtr argument is a NULL pointer.] (SRS_BSW_00323)

[SWS_MemAcc_00060]{DRAFT} [If development error detection is enabled by MemAccDevErrorDetect, the service MemAcc_Compare shall raise the development error MEMACC_E_PARAM_ADDRESS_LENGTH if the address range defined by sourceAddress and length is invalid, i.e. not aligned to MemReadPageSize.] (SRS BSW 00323)

[SWS_MemAcc_00061]{DRAFT} [If development error detection is enabled by MemAccDevErrorDetect, the service MemAcc_Compare shall raise the development error MEMACC_E_BUSY if a previous MemAcc job for the same addressAreaId is still being processed. | (SRS_BSW_00323)

[SWS_MemAcc_00114]{DRAFT} [If the compare operation determined a mismatch, the result code returned by the MemAcc_GetJobResult service shall be set to MEMACC_MEM_INCONSISTENT, otherwise MemAcc_GetJobResult shall return MEMACC_MEM_OK.|(SRS_MemHwAb_14040)

8.3.2.6 MemAcc_BlankCheck

[SWS_MemAcc_10027]{DRAFT}

Service Name	MemAcc_BlankCheck (draft)		
Syntax	Std_ReturnType MemAcc_BlankCheck (MemAcc_AddressAreaIdType addressAreaId, MemAcc_AddressType targetAddress, MemAcc_LengthType length)		
Service ID [hex]	0x0d		
Sync/Async	Asynchronous		
Reentrancy	Reentrant		
Parameters (in)	addressAreald Numeric identifier of address area.		
	targetAddress Blank check address in logical address space.		
	length Blank check length in bytes.		
Parameters (inout)	None		
Parameters (out)	None		





Return value	Std_ReturnType	E_OK: The requested job has been accepted by the module. E_NOT_OK: The requested job has been rejected by the module. E_MEM_SERVICE_NOT_AVAIL: The underlying Mem driver service function is not available and no job was started.
Description	Checks if the passed address space is blank, i.e. erased and writeable. The result of this service can be retrieved using the MemAcc_GetJobResult API. If the address area defined by targetAddress and length is blank, the result is MEMACC_MEM_OK, otherwise the result is MEMACC_MEM_INCONSISTENT.	
	Tags: atp.Status=draft	
Available via	MemAcc.h	

(SRS MemHwAb 14038, SRS MemHwAb 14039)

[SWS_MemAcc_00062]{DRAFT} [If development error detection is enabled by MemAccDevErrorDetect, the service MemAcc_BlankCheck shall check that the MemAcc module has been initialized. If this check fails, MemAcc_BlankCheck shall raise the development error MEMACC_E_UNINIT.] (SRS_BSW_00406)

[SWS_MemAcc_00063]{DRAFT} [If development error detection is enabled by MemAccDevErrorDetect, the service MemAcc_BlankCheck shall check that the provided addressAreaId is consistent with the configuration. If this check fails, MemAcc_BlankCheck shall raise the development error MEMACC_E_PARAM_ADDRESS_AREA_ID.|(SRS_BSW_00323)

[SWS_MemAcc_00064]{DRAFT} [If development error detection is enabled by MemAccDevErrorDetect, the service MemAcc_BlankCheck shall raise the development error MEMACC_E_PARAM_ADDRESS_LENGTH if the address range defined by sourceAddress and length is invalid, i.e. not aligned to MemReadPageSize.] (SRS_BSW_00323)

[SWS_MemAcc_00065]{DRAFT} [If development error detection is enabled by MemAccDevErrorDetect, the service MemAcc_BlankCheck shall raise the development error MEMACC_E_BUSY if a previous MemAcc job for the same addressareald is still being processed.|(SRS_BSW_00323)

8.3.2.7 MemAcc HwSpecificService

[SWS_MemAcc_10028]{DRAFT}

Service Name	MemAcc_HwSpecificService (draft)	
		



Syntax	Std_ReturnType MemAcc_HwSpecificService (MemAcc_AddressAreaIdType addressAreaId, MemAcc_HwIdType hwId, MemAcc_MemHwServiceIdType hwServiceId, MemAcc_DataType* dataPtr, MemAcc_LengthType* lengthPtr)		
Service ID [hex]	0xe		
Sync/Async	Asynchronous		
Reentrancy	Reentrant		
Parameters (in)	addressAreald	Numeric identifier of address area.	
	hwld	Unique numeric memory driver identifier.	
	hwServiceId Array index pointing to the hardware specific service pointer.		
Parameters (inout)	dataPtr	Data pointer pointing to the job buffer. Value can be NULL_PTR, if not needed. If dataPtr is used by the hardware specific service, the pointer must be valid until the job completed.	
	lengthPtr	Size pointer of the data passed by dataPtr. Can be NULL_PTR if dataPtr is also NULL_PTR.	
Parameters (out)	None		
Return value	Std_ReturnType	E_OK: The requested job has been accepted by the module. E_NOT_OK: The requested job has not been accepted by the module. module. E_MEM_SERVICE_NOT_AVAIL: The underlying Mem driver service function is not available.	
Description	Triggers a hardware specific job request referenced by hwServiceld. Service specific data can be passed/retrieved by dataPtr.		
	The result of this service can be retrieved using the MemAcc_GetJobResult API. If the hardware specific operation was successful, the result of the job is MEMACC_MEM_OK. If the hardware specific operation failed, the result of the job is MEMACC_MEM_FAILED.		
	Tags: atp.Status=draft	Tags: atp.Status=draft	
Available via	MemAcc.h		

(SRS_MemHwAb_14038, SRS_MemHwAb_14039, SRS_MemHwAb_14056)

[SWS_MemAcc_00066]{DRAFT} [If development error detection is enabled by MemAccDevErrorDetect, the service MemAcc_HwSpecificService shall check that the MemAcc module has been initialized. If this check fails, MemAcc_-HwSpecificService shall raise the development error MEMACC_E_UNINIT.] (SRS_BSW_00406)

[SWS_MemAcc_00067]{DRAFT} [If development error detection is enabled by MemAccDevErrorDetect, the service MemAcc_HwSpecificService shall check that the provided addressAreaId is consistent with the configuration. If this check fails, MemAcc_HwSpecificService shall raise the development error MEMACC_E_PARAM_ADDRESS_AREA_ID.|(SRS_BSW_00323)

[SWS_MemAcc_00068]{DRAFT} [If development error detection is enabled by MemAccDevErrorDetect, the service MemAcc_HwSpecificService shall raise



the development error MEMACC_E_PARAM_HW_ID if the Mem driver hardware identification given by hwld is invalid or not assigned to the passed addressAreald. (SRS_BSW_00323)

[SWS_MemAcc_00070]{DRAFT} [If development error detection is enabled by MemAccDevErrorDetect, the service MemAcc_HwSpecificService shall raise the development error MEMACC_E_BUSY if a previous MemAcc job for the same addressAreaId is still being processed.](SRS_BSW_00323)

8.3.2.8 MemAcc_RequestLock

[SWS_MemAcc_10030]{DRAFT}

Service Name	MemAcc_RequestLock (dra	MemAcc_RequestLock (draft)		
Syntax	Std_ReturnType MemAcc_RequestLock (MemAcc_AddressAreaIdType addressAreaId, MemAcc_AddressType address, MemAcc_AddressType length, void* lockNotificationFctPtr)			
Service ID [hex]	0x11			
Sync/Async	Asynchronous	Asynchronous		
Reentrancy	Reentrant			
Parameters (in)	addressAreald	Numeric identifier of address area.		
	address	Logical start address of the address area to identify the Mem driver to be locked.		
	length	Length of the address area to identify the Mem driver to be locked.		
	lockNotificationFctPtr Pointer to address area lock notification callback function.			
Parameters (inout)	None			
Parameters (out)	None			
Return value	Std_ReturnType	E_OK: The requested job has been accepted by the module. E_NOT_OK: The requested job has been rejected by the module		
Description	Request lock of an address area for exclusive access. Once the lock is granted, the referenced lock notification function is called by MemAcc.			
	Tags: atp.Status=draft			
Available via	MemAcc.h			

(SRS MemHwAb 14038, SRS MemHwAb 14039, SRS MemHwAb 14055)

[SWS_MemAcc_00115]{DRAFT} [MemAcc_RequestLock shall lock all memory accesses of the Mem driver referenced by the addressAreaId, address and length parameter.

If an upper layer calls a MemAcc service function for an address area which is locked for direct memory access, MemAcc shall still accept the memory access request for the address area but shall not forward the access request to the corresponding Mem driver until the lock request is released by the MemAcc_ReleaseLock service.



(SRS MemHwAb 14038)

[SWS_MemAcc_00116]{DRAFT} [MemAcc shall wait until the address area referenced by addressAreaId is idle before it calls the lock notification function referenced by lockNotificationFctPtr to notify the upper layer module that the lock of the address area was successfully acquired. | (SRS_MemHwAb_14055)

[SWS_MemAcc_00099]{DRAFT} [If development error detection is enabled by MemAccDevErrorDetect, the service MemAcc_RequestLock shall check that the MemAcc module has been initialized. If this check fails, MemAcc_RequestLock shall raise the development error MEMACC_E_UNINIT.|(SRS_BSW_00406)

[SWS_MemAcc_00071]{DRAFT} [If development error detection is enabled by MemAccDevErrorDetect, the service MemAcc_RequestLock shall check that the provided addressAreaId is consistent with the configuration. If this check fails, MemAcc_RequestLock shall raise the development error MEMACC_E_PARAM_ADDRESS_AREA_ID.|(SRS_BSW_00323)

[SWS_MemAcc_00072]{DRAFT} [If development error detection is enabled by MemAccDevErrorDetect, the service MemAcc_RequestLock shall raise the development error MEMACC_E_PARAM_POINTER if the lockNotificationFctPtr argument is a NULL pointer.|(SRS_BSW_00323)

[SWS_MemAcc_00073]{DRAFT} [If development error detection is enabled by MemAccDevErrorDetect, the service MemAcc_RequestLock shall raise the development error MEMACC_E_PARAM_ADDRESS_LENGTH if the address range defined by address and length is invalid, i.e. not mapped to a specific Mem driver.] (SRS_-BSW_00323)

8.3.2.9 MemAcc_ReleaseLock

[SWS_MemAcc_10031]{DRAFT}

Service Name	MemAcc_ReleaseLock (draft)	
Syntax	Std_ReturnType MemAcc_ReleaseLock (MemAcc_AddressAreaIdType addressAreaId, MemAcc_AddressType address, MemAcc_LengthType length)	
Service ID [hex]	0x12	
Sync/Async	Synchronous	





Reentrancy	Reentrant	
Parameters (in)	addressAreald	Numeric identifier of address area.
	address	Logical start address to identify lock area.
	length	Length to identify lock area.
Parameters (inout)	None	
Parameters (out)	None	
Return value	Std_ReturnType	
Description	Release access lock of provided address area.	
	Tags: atp.Status=draft	
Available via	MemAcc.h	

(SRS MemHwAb 14055)

[SWS_MemAcc_00076]{DRAFT} [If development error detection is enabled by MemAccDevErrorDetect, the service MemAcc_ReleaseLock shall check that the MemAcc module has been initialized. If this check fails, MemAcc_ReleaseLock shall raise the development error MEMACC_E_UNINIT.](SRS_BSW_00406, SRS_MemH-wAb_14038)

[SWS_MemAcc_00093]{DRAFT} [If development error detection is enabled by MemAccDevErrorDetect, the service MemAcc_ReleaseLock shall check that the provided addressAreald is consistent with the configuration. If this check fails, MemAcc_ReleaseLock shall raise the development error MEMACC_E_PARAM_ADDRESS_AREA_ID.|(SRS_BSW_00323)

[SWS_MemAcc_00077]{DRAFT} [If development error detection is enabled by MemAccDevErrorDetect, the service MemAcc_RequestLock shall raise the development error MEMACC_E_PARAM_ADDRESS_LENGTH if the address range defined by address and length is invalid, i.e. not mapped to a specific Mem driver.](SRS_BSW_00323)

8.4 Callback Notifications

MemAcc does not provide any call-back notification functions.

8.5 Scheduled Functions

These functions are directly called by Basic Software Scheduler. The following functions shall have no return value and no parameter. All functions shall be non reentrant.



8.5.1 MemAcc_MainFunction

[SWS_MemAcc_10017]{DRAFT}

Service Name	MemAcc_MainFunction (draft)	
Syntax	void MemAcc_MainFunction (void)	
Service ID [hex]	0x03	
Sync/Async	Synchronous	
Reentrancy	Non Reentrant	
Parameters (in)	None	
Parameters (inout)	None	
Parameters (out)	None	
Return value	None	
Description Service to handle the requested jobs and the internal management operations. Dep the configuration MemAcc will call the Mem driver main functions.		
	Tags: atp.Status=draft	
Available via	MemAcc.h	

(SRS_MemHwAb_14047)

[SWS_MemAcc_00084]{DRAFT} [If MemAccMemInvocation is set to INDIRECT_DYNAMIC or INDIRECT_STATIC, MemAcc shall call all Mem main functions within MemAcc MainFunction.

MemAcc_MainFunction shall only call the Mem main function if there is a job request pending for the corresponding Mem driver. | (SRS_MemHwAb_14047)

8.6 Expected Interfaces

In this chapter all interfaces required from other modules are listed.

8.6.1 Mandatory Interfaces

This section defines all interfaces, which are required to fulfill the core functionality of the module.

[SWS_MemAcc_10036] [



API Function	Header File	Description
Mem_BlankCheck (draft)	Mem.h	Triggers a job to check the erased state of the page which is referenced by targetAddress. The result of this service can be retrieved using the Mem_GetJob Result API. If the checked page is blank, the result of the job is MEM_JOB_OK. Otherwise, if the page is not blank, the result is MEM_INCONSISTENT.
		Tags: atp.Status=draft
Mem_Erase (draft)	Mem.h	Triggers an erase job of the given sector/sector batch defined by targetAddress and length. The result of this service can be retrieved using the Mem_GetJobResult API. If the erase operation was successful, the result of the job is MEM_JOB_OK. If the erase operation failed, e.g. due to a hardware issue, the result of the job is MEM_JOB_FAILED.
		Tags: atp.Status=draft
Mem_GetJobResult (draft)	Mem.h	Service to return results of the most recent job.
		Tags: atp.Status=draft
Mem_HwSpecificService (draft)	Mem.h	Triggers a hardware specific memory driver job. dataPtr can be used to pass and return data to/from this service. This service is just a dispatcher to the hardware specific service implementation referenced by hwServiceld. The result of this service can be retrieved using the Mem_GetJob Result API. If the hardware specific operation was successful, the result of the job is MEM_JOB_OK. If the hardware specific operation failed, the result of the job is MEM_JOB_FAILED.
		Tags: atp.Status=draft
Mem_Init (draft)	Mem.h	Initialization function - initializes all variables and sets the module state to initialized.
		Tags: atp.Status=draft
Mem_MainFunction (draft)	Mem.h	Service to handle the requested jobs and the internal management operations.
		Tags: atp.Status=draft
Mem_PropagateError (draft)	Mem.h	This service can be used to report an access error in case the Mem driver cannot provide the access error information - typically for ECC faults. It is called by the system ECC handler to propagate an ECC error to the memory upper layers
		Tags: atp.Status=draft
Mem_Read (draft)	Mem.h	Triggers a read job to copy the from the source address into the referenced destination data buffer. The result of this service can be retrieved using the Mem_GetJobResult API. If the read operation was successful, the result of the job is MEM_JOB_OK. If the read operation failed, the result of the job is either MEM_JOB_FAILED in case of a general error or MEM_ECC_CORRECTED/MEM_ECC_UNCORRECTED in case of a correctable/ uncorrectable ECC error.
		Tags: atp.Status=draft





API Function	Header File	Description
Mem_Write (draft)	Mem.h	Triggers a write job to store the passed data to the provided address area with given address and length. The result of this service can be retrieved using the Mem_GetJobResult API. If the write operation was successful, the job result is MEM_JOB_OK. If there was an issue writing the data, the result is MEM_FAILED. Tags: atp.Status=draft

(SRS_BSW_00415)

8.6.2 Optional Interfaces

This section defines all interfaces, which are required to fulfill an optional functionality of the module.

[SWS_MemAcc_10035] [

API Function	Header File	Description	
Det_ReportError	Det.h	Service to report development errors.	

(SRS BSW 00415)

8.6.3 Configurable Interfaces

In this chapter all interfaces are listed where the target function could be configured. The target function is usually a callback function. The names of this kind of interfaces are not fixed because they are configurable.

8.6.4 <AddressAreaJobEndNotification>

[SWS_MemAcc_10029]{DRAFT}

Service Name	<addressareajobendnotification> (draft)</addressareajobendnotification>
Syntax	<pre>void <addressareajobendnotification> (MemAcc_AddressAreaIdType addressAreaId, MemAcc_JobResultType jobResult)</addressareajobendnotification></pre>
Service ID [hex]	0x0f
Sync/Async	Synchronous
Reentrancy	Reentrant





Parameters (in)	addressAreald Numeric identifier of address area.		
	jobResult Result of the last MemAcc operation.		
Parameters (inout)	None		
Parameters (out)	None		
Return value	None		
Description	MemAcc application job end notification callback. The function name is configurable.		
	Tags: atp.Status=draft		
Available via	MemAcc.h		

](SRS_MemHwAb_14041)

8.6.5 < Application Lock Notification >

[SWS_MemAcc_10032]{DRAFT}

Service Name	<applicationlocknotification> (draft)</applicationlocknotification>
Syntax	<pre>void <applicationlocknotification> (void)</applicationlocknotification></pre>
Service ID [hex]	0x14
Sync/Async	Synchronous
Reentrancy	Reentrant
Parameters (in)	None
Parameters (inout)	None
Parameters (out)	None
Return value	None
Description	Address area lock application callback. The function name is configurable.
	Tags: atp.Status=draft
Available via	MemAcc.h

\(\((SRS_MemHwAb_14055 \)

8.7 Service Interfaces

The MemAcc module does not provide any service interfaces.



9 Sequence Diagrams

9.1 Job Handling with Result Polling

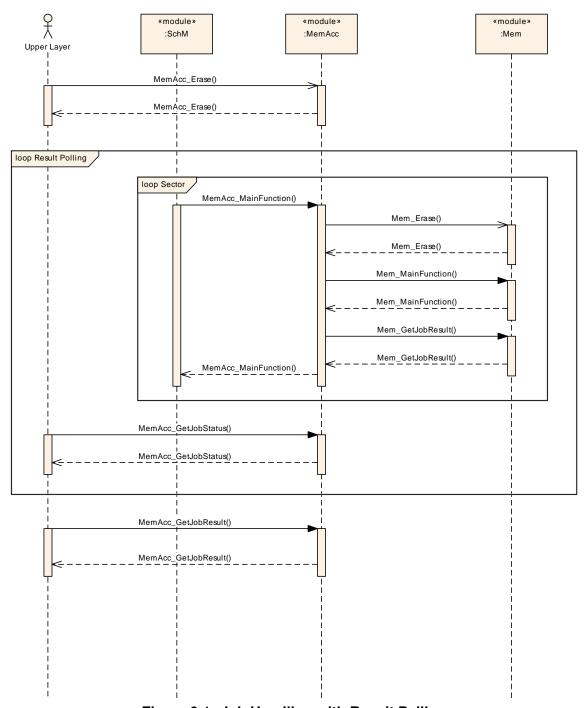


Figure 9.1: Job Handling with Result Polling



9.2 Job Handling with Job End Notification

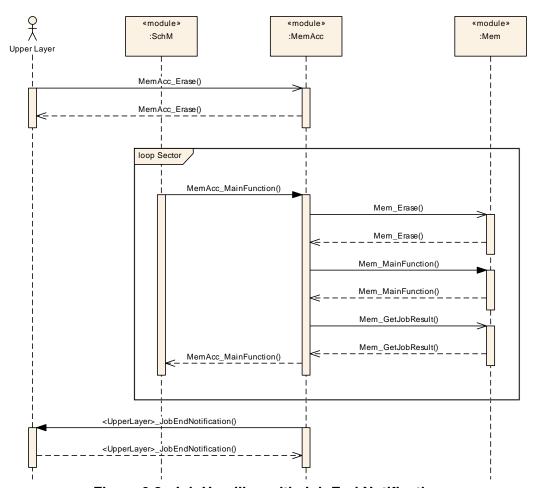


Figure 9.2: Job Handling with Job End Notification

9.3 Mem Driver Initialization by MemAcc

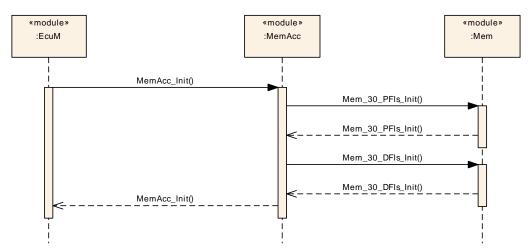


Figure 9.3: Mem Driver Initialization by MemAcc



9.4 Mem Driver Initialization by EcuM

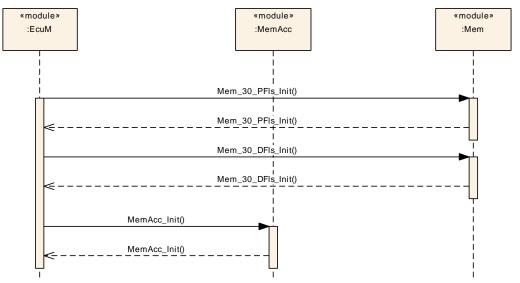


Figure 9.4: Mem Driver initialization by EcuM



9.5 Mem Driver Scheduling by MemAcc

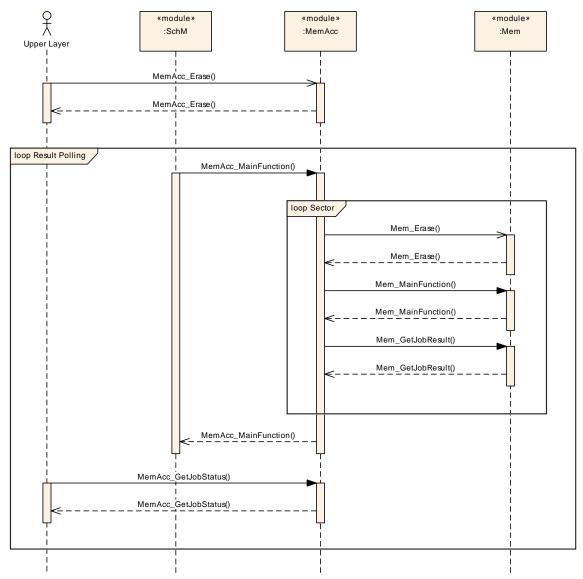


Figure 9.5: Mem Driver Scheduling by MemAcc



9.6 Mem Driver Scheduling by SchM

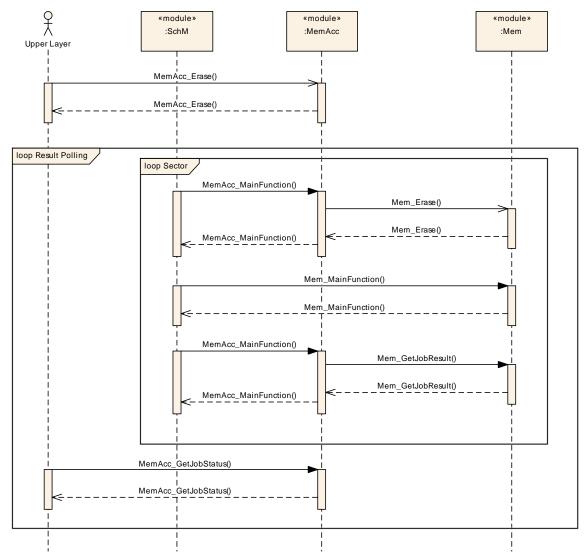


Figure 9.6: Mem Driver Scheduling by SchM



9.7 Generic Lock Sequence

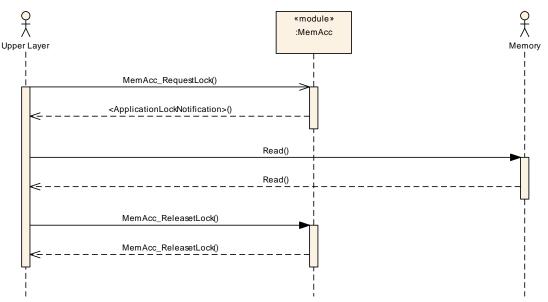


Figure 9.7: Example Lock/Unlock Sequence

10 Configuration Specification

In general, this chapter defines configuration parameters and their clustering into containers. In order to support the specification chapter 10.1 describes fundamentals. It also specifies a template (table) you shall use for the parameter specification. We intend to leave chapter 10.1 in the specification to guarantee comprehension.

Chapter 10.2 specifies the structure (containers) and the parameters of the module MemAcc.

Chapter 10.3 specifies published information of the module MemAcc.

10.1 How to Read this Chapter

For details refer to the chapter 10.1 "Introduction to configuration specification" in SWS_BSWGeneral.

10.2 Containers and Configuration Parameters

The following chapters summarize all configuration parameters. The detailed meanings of the parameters describe chapter 7 and chapter 8.



10.2.1 MemAcc

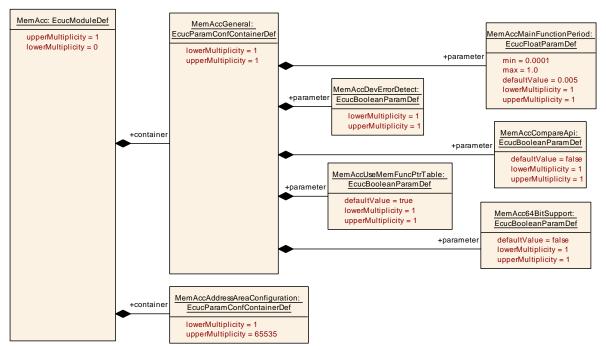


Figure 10.1: MemAcc

FOLIO M

Module SWS Item	ECUC_MemAcc_00001		
Module Name	MemAcc		
Module Description	The MemAcc (Memory Access module) coordinates the memory access by multiple users in order to avoid conflicts with this shared memory resource. The module abstracts from the memory device specific addressing scheme and provides a logical addressing scheme to the upper layer.		
Post-Build Variant	false		
Support	VADIANT DOOT BUILD VADIANT DDF COLUBILE		
Supported Config Variants	VARIANT-POST-BUILD, VARIANT-PRE-COMPILE		
Included Containers			
Container Name	Multiplicity	Scope / Dependency	
MemAccAddressArea Configuration	165535	This container includes the configuration of AddressArea specific parameters for the MemAcc module.	
		An AddressArea is a logical area of memory. Upper layers only use logical addresses to access the address area. It is the job of MemAcc to map between logical and physical addresses. An AddressArea contains SubAddressAreas and each SubAddressArea is part of a physically continuous memory area (sector batch).	
		Tags: atp.Status=draft	



Container Name	Multiplicity	Scope / Dependency
MemAccGeneral	1	General configuration parameters of the MemAcc. Tags: atp.Status=draft

SWS Item	[ECUC_MemAcc_00002]
Container Name	MemAccGeneral
Parent Container	MemAcc
Description	General configuration parameters of the MemAcc.
	Tags:
	atp.Status=draft
Configuration Parameters	

Name	MemAcc64BitSupport [ECU	MemAcc64BitSupport [ECUC_MemAcc_00024]		
Parent Container	MemAccGeneral			
Description	If this option is selected, the address type shall be implemented in 64Bit. Tags:			
Barrellin II - II -	atp.Status=draft			
Multiplicity	1			
Туре	EcucBooleanParamDef			
Default Value	false			
Post-Build Variant Value	false			
Value Configuration Class	Pre-compile time	Х	All Variants	
	Link time	_		
	Post-build time	-		
Scope / Dependency	scope: local	•	•	

Name	MemAccCompareApi [ECUC_MemAcc_00006]
Parent Container	MemAccGeneral
Description	This parameter enables/disables the function MemAcc_Compare().
	This function allows to compare data stored in a buffer with data stored in memory.
	Tags:
	atp.Status=draft
Multiplicity	1
Туре	EcucBooleanParamDef
Default Value	false
Post-Build Variant Value	false



Value Configuration Class	Pre-compile time	Χ	All Variants
	Link time	-	
	Post-build time	_	
Scope / Dependency	scope: local		

Name	MemAccDevErrorDetect [E0	MemAccDevErrorDetect [ECUC_MemAcc_00005]			
Parent Container	MemAccGeneral				
Description	Switches the development e	Switches the development error detection and notification on or off.			
	Tags: atp.Status=draft				
Multiplicity	1	1			
Туре	EcucBooleanParamDef	EcucBooleanParamDef			
Default Value					
Post-Build Variant Value	false				
Value Configuration Class	Pre-compile time	Х	All Variants		
	Link time	_			
	Post-build time	_			
Scope / Dependency	scope: local				

Name	MemAccMainFunctionPeriod	I [EC	UC_MemAco	c_00004]		
Parent Container	MemAccGeneral					
Description	This value specifies the fixed call cycle for MemAcc_MainFunction(). Additionally, if a job is ongoing on a Mem, the underlying Mem_MainFunction will be triggered directly by MemAcc at this fixed call cycle. MemAcc does not depend on a fixed cycle time; in can be triggered at arbitrary rates. Tags: atp.Status=draft					
Multiplicity	1					
Туре	EcucFloatParamDef					
Range	[1E-4 1]					
Default Value	0.005					
Post-Build Variant Value	false					
Value Configuration Class	Pre-compile time X All Variants					
	Link time	Link time –				
	Post-build time	_				
Scope / Dependency	scope: local					



Name	MemAccUseMemFuncPtrTa	MemAccUseMemFuncPtrTable [ECUC_MemAcc_00007]			
Parent Container	MemAccGeneral	MemAccGeneral			
Description	This parameter defines if the Mem driver functions are called using the Mem function pointer table API. Tags: atp.Status=draft				
Multiplicity	1	1			
Туре	EcucBooleanParamDef	EcucBooleanParamDef			
Default Value	true				
Post-Build Variant Value	false				
Value Configuration Class	Pre-compile time X All Variants				
	Link time –				
	Post-build time	_			
Scope / Dependency	scope: local				

No Included Containers



10.2.2 MemAccAddressAreaConfiguration

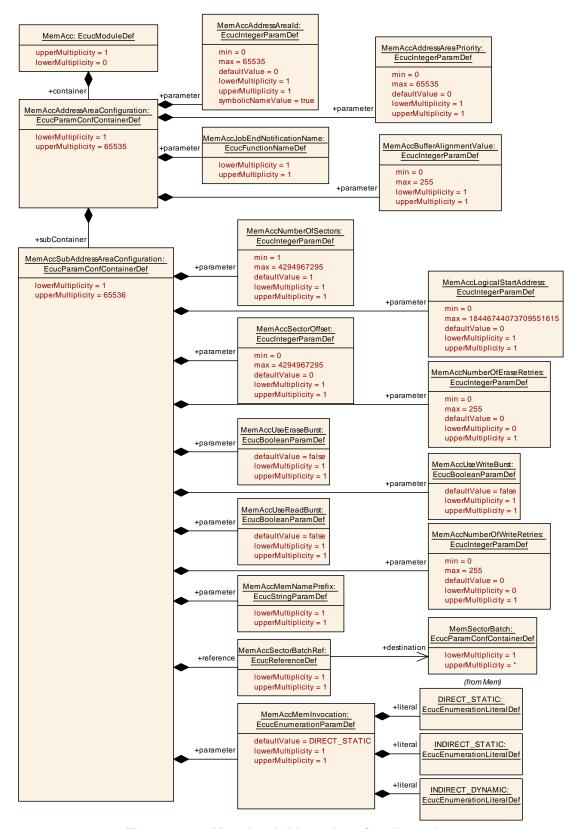


Figure 10.2: MemAccAddressAreaConfiguration



SWS Item	[ECUC_MemAcc_00010]	[ECUC_MemAcc_00010]			
Container Name	MemAccAddressAreaConfiguration				
Parent Container	MemAcc				
Description	This container includes the configuration of AddressArea specific parameters for the MemAcc module. An AddressArea is a logical area of memory. Upper layers only use logical addresses to access the address area. It is the job of MemAcc to map between logical and physical addresses. An AddressArea contains SubAddressAreas and each SubAddressArea is part of a physically continuous memory area (sector batch). Tags:				
Do at Decilal Vanions	atp.Status=draft				
Post-Build Variant Multiplicity	true				
Multiplicity Configuration Class	Pre-compile time	Х	VARIANT-PRE-COMPILE		
	Link time –				
	Post-build time X VARIANT-POST-BUILD				
Configuration Parameters					

Name	MemAccAddressAreald [EC	MemAccAddressAreald [ECUC_MemAcc_00011]			
Parent Container	MemAccAddressAreaConfiguration				
Description	This value specifies a unique identifier which is used to reference to an AddressArea. This identifier is used as parameter for MemAcc jobs in order to distinguish between several AddressAreas with the same logical addresses. Tags: atp.Status=draft				
Multiplicity	1				
Туре	EcucIntegerParamDef (Syml	oolic	Name generated for this parameter)		
Range	0 65535				
Default Value	0				
Post-Build Variant Value	false				
Value Configuration Class	Pre-compile time X All Variants				
	Link time	Link time –			
	Post-build time	_			
Scope / Dependency	scope: local				



Name	MemAccAddressAreaPriority [ECUC_MemAcc_00012]				
Parent Container	MemAccAddressAreaConfiguration				
Description	This value specifies the priority of an AddressArea compared to other AddressAreas (0 = lowest priority, 65535 = highest priority). For each AddressArea only one job can be processed at a time. MemAcc processes the jobs priority based. In case a job with a higher priority is requested by an upper layer, the lower priority jobs are suspended until the higher priority job is completed. Tags:				
Multiplicity	1	atp.Status=draft			
Туре	EcucIntegerParamDef				
Range	0 65535				
Default Value	0				
Post-Build Variant Value	true				
Value Configuration Class	Pre-compile time X VARIANT-PRE-COMPILE				
	Link time	_			
	Post-build time	Х	VARIANT-POST-BUILD		
Scope / Dependency	scope: local				

Name	MemAccBufferAlignmentValue [ECUC_MemAcc_00025]			
Parent Container	MemAccAddressAreaConfiguration			
Description	Buffer alignment value inherited by MemAcc upper layer modules.			
	Tags: atp.Status=draft			
Multiplicity	1			
Туре	EcucIntegerParamDef			
Range	0 255			
Default Value	·			
Post-Build Variant Value	false			
Value Configuration Class	Pre-compile time	Х	All Variants	
	Link time	_		
	Post-build time	_		
Scope / Dependency	scope: local			



Name	MemAccJobEndNotification	MemAccJobEndNotificationName [ECUC_MemAcc_00027]		
Parent Container	MemAccAddressAreaConfiguration			
Description	Job end notification function which is called after MemAcc job completion. If this parameter is left empty, no job end notification is triggered and the upper layer module needs to poll the job results. Tags: atp.Status=draft			
Multiplicity	1	1		
Туре	EcucFunctionNameDef	EcucFunctionNameDef		
Default Value				
Regular Expression				
Post-Build Variant Value	false			
Value Configuration Class	Pre-compile time X All Variants			
	Link time –			
	Post-build time	_		
Scope / Dependency				

Included Containers					
Container Name	Multiplicity	Scope / Dependency			
MemAccSubAddress AreaConfiguration	165536	This container includes the configuration parameters for a physically continuous area of memory.			
		Tags: atp.Status=draft			

10.2.3 MemAccSubAddressAreaConfiguration

SWS Item	[ECUC_MemAcc_00013]	[ECUC_MemAcc_00013]			
Container Name	MemAccSubAddressAreaCo	MemAccSubAddressAreaConfiguration			
Parent Container	MemAccAddressAreaConfig	jurati	on		
Description	This container includes the configuration parameters for a physically continuous area of memory. Tags: atp.Status=draft				
Post-Build Variant Multiplicity	true				
Multiplicity Configuration Class	Pre-compile time	Х	VARIANT-PRE-COMPILE		
	Link time –				
	Post-build time X VARIANT-POST-BUILD				
Configuration Parameter	Configuration Parameters				



Name	MemAccLogicalStartAddress [ECUC_MemAcc_00015]			
Parent Container	MemAccSubAddressAreaConfiguration			
Description	This value specifies the logical start address of the SubAddressArea.			
	Tags:			
	atp.Status=draft			
Multiplicity	1			
Туре	EcucIntegerParamDef			
Range	0			
	18446744073709551615			
Default Value	0			
Post-Build Variant Value	true			
Value Configuration Class	Pre-compile time	Х	VARIANT-PRE-COMPILE	
	Link time –			
	Post-build time	Х	VARIANT-POST-BUILD	
Scope / Dependency	scope: local			

Name	MemAccMemInvocation [ECUC_MemAcc_00026]				
Parent Container	MemAccSubAddressAreaConfiguration				
Description	Defines how the Mem driver services are accessed and how the Mem driver is scheduled and activated/initialized. Tags: atp.Status=draft				
Multiplicity	1				
Туре	EcucEnumerationParamDef				
Range	DIRECT_STATIC	Mem driver is linked with application. Mem service functions are directly called by MemAcc. Mem_Init is called by EcuM and Mem_MainFunction is triggered by SchM. Tags: atp.Status=draft			
	INDIRECT_DYNAMIC	Mem driver is linked as a separate binary and is dynamically activated. MemAcc will use Mem driver header table to invoke Mem service functions. Call of Mem_Init and Mem_MainFunction is handled by MemAcc. Tags: atp.Status=draft			



	INDIRECT_STATIC	Mem driver is linked with application. MemAcc will use Mem driver header table to invoke Mem service functions. Call of Mem_Init and Mem_MainFunction is handled by MemAcc. Tags: atp.Status=draft		
Default Value	DIRECT_STATIC			
Post-Build Variant Value	false			
Value Configuration Class	Pre-compile time	X All Variants		
	Link time	_		
	Post-build time	-		
Scope / Dependency				

Name	MemAccMemNamePrefix [ECUC_MemAcc_00017]			
Parent Container	MemAccSubAddressAreaConfiguration			
Description	Depending on the MemAccUseMemFuncPtrTable configuration, this prefix is either used to reference the Mem driver header structure or the according Mem API function. Tags:			
B. J. Latin. It also.	atp.Status=draft			
Multiplicity	1			
Туре	EcucStringParamDef			
Default Value				
Regular Expression				
Post-Build Variant Value	false			
Value Configuration Class	Pre-compile time	Х	All Variants	
	Link time	-		
	Post-build time	_		
Scope / Dependency	scope: local			

Name	MemAccNumberOfEraseRetries [ECUC_MemAcc_00021]			
Parent Container	MemAccSubAddressAreaConfiguration			
Description	This value specifies the number of retries of a failed erase job.			
	0: No retry, a failed job will be aborted immediately			
	> 0: Retry the number of times before aborting the job.			
	Tags:			
	atp.Status=draft			
Multiplicity	01			
Туре	EcucIntegerParamDef			
Range	0 255			



Default Value	0				
Post-Build Variant	false				
Multiplicity					
Post-Build Variant Value	true				
Multiplicity Configuration Class	Pre-compile time	X	All Variants		
	Link time	_			
	Post-build time	_			
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE		
	Link time	_			
	Post-build time	X	VARIANT-POST-BUILD		
Scope / Dependency	scope: local				

Name	MemAccNumberOfSectors [ECUC_MemAcc_00014]			
Parent Container	MemAccSubAddressAreaConfiguration			
Description	This value specifies the number of physical sectors of the SubAddressArea. Tags: atp.Status=draft			
Multiplicity	1			
Туре	EcucIntegerParamDef			
Range	1 4294967295			
Default Value	1			
Post-Build Variant Value	true			
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE	
	Link time –			
	Post-build time X VARIANT-POST-BUILD			
Scope / Dependency	scope: local			

Name	MemAccNumberOfWriteRetries [ECUC_MemAcc_00020]			
Parent Container	MemAccSubAddressAreaConfiguration			
Description	This value specifies the number of retries of a failed write job.			
	O: No retry, a failed job will be aborted immediately > 0: Retry the number of times before aborting the job.			
	Tags:			
	atp.Status=draft			
Multiplicity	01			
Туре	EcucIntegerParamDef			
Range	0 255			
Default Value	0			
Post-Build Variant Multiplicity	false			



Post-Build Variant Value	true		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	_	
	Post-build time	_	
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	_	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

Name	MemAccSectorOffset [ECUC_MemAcc_00016]			
Parent Container	MemAccSubAddressAreaConfiguration			
Description	This value specifies the sector offset of the SubAddressArea in case the SubAddressArea should not start with the first sector of the referenced MemSectorBatch. Tags: atp.Status=draft			
Multiplicity	1			
Туре	EcucIntegerParamDef			
Range	0 4294967295			
Default Value	0			
Post-Build Variant Value	true			
Value Configuration Class	Pre-compile time X VARIANT-PRE-COMPILE			
	Link time –			
	Post-build time X VARIANT-POST-BUILD			
Scope / Dependency	scope: local			

Name	MemAccUseEraseBurst [ECUC_MemAcc_00018]			
Parent Container	MemAccSubAddressAreaConfiguration			
Description	This parameter enables erase bursting for the related sub address area.			
	Tags: atp.Status=draft			
Multiplicity	1			
Туре	EcucBooleanParamDef			
Default Value	false			
Post-Build Variant Value	true			
Value Configuration Class	Pre-compile time	Х	VARIANT-PRE-COMPILE	
	Link time	_		
	Post-build time X VARIANT-POST-BUILD			
Scope / Dependency	scope: local			



Name	MemAccUseReadBurst [ECUC_MemAcc_00022]			
Parent Container	MemAccSubAddressAreaConfiguration			
Description	This parameter enables read	This parameter enables read bursting for the related sub address area.		
	Tags: atp.Status=draft			
Multiplicity	1			
Туре	EcucBooleanParamDef			
Default Value	false			
Post-Build Variant Value	true			
Value Configuration Class	Pre-compile time	Х	VARIANT-PRE-COMPILE	
	Link time –			
	Post-build time X VARIANT-POST-BUILD			
Scope / Dependency	scope: local			

Name	MemAccUseWriteBurst [ECUC_MemAcc_00019]			
Parent Container	MemAccSubAddressAreaConfiguration			
Description	This parameter enables write bursting for the related sub address area.			
	Tags:			
	atp.Status=draft			
Multiplicity	1			
Туре	EcucBooleanParamDef			
Default Value	false			
Post-Build Variant	true			
Value				
Value Configuration	Pre-compile time	X	VARIANT-PRE-COMPILE	
Class				
	Link time –			
	Post-build time X VARIANT-POST-BUILD			
Scope / Dependency	scope: local			

Name	MemAccSectorBatchRef [ECUC_MemAcc_00023]		
Parent Container	MemAccSubAddressAreaConfiguration		
Description	Reference to MemSectorBatch mapped to the SubAddressArea.		
	Tags: atp.Status=draft		
Multiplicity	1		
Туре	Reference to MemSectorBatch		
	true		
Post-Build Variant Value			
Value Configuration Class	Pre-compile time	Х	VARIANT-PRE-COMPILE
	Link time	_	
	Post-build time	Х	VARIANT-POST-BUILD
Scope / Dependency	scope: local		



No Included Containers

10.3 Published Information

For details, refer to the section 10.3 "Published Information" in [2, SWS BSW General].