

Hardscaping Geogrid

Product Dimensions: 6 ft wide x 60 ft long



STEP 1

Prepare Site



STEP 2

Roll Out Geogrid



STEP 3

Overlap Edges



STEP 4

Pavers that stay in place & no call backs!

Soil Stabilization Geogrid for Hardscape Projects


Install Checklist:

- ☐ Prepare site in accordance with project specifications
- ☐ Install geogrid before placing base material
- ☐ Gloves should be worn when handling and cutting
- ☐ Lay geogrid flat and free from folds
- ☐ Cut and overlap geogrid to accommodate curves using sharp shears or utility knife

Dig less &
use less
base material



WITHOUT AmeriGrid Geogrid

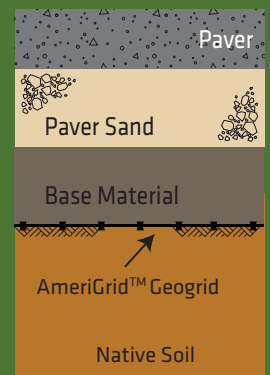

With AmeriGrid Geogrid



Please refer to paver manufacturer for installation guidelines and construction recommendations.
Geogrid use is at installer/owner's own risk.