
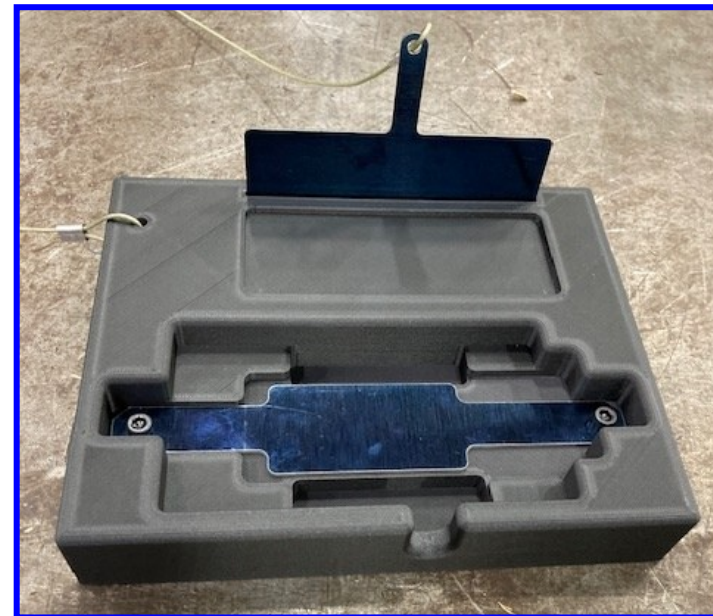
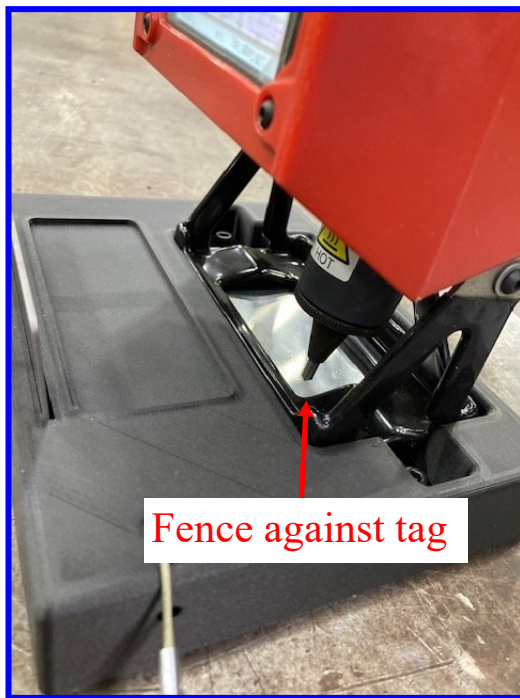


Making Generic Asset Tags:

1. ENG-124-10-001 aligns asset tag blanks for marking with the Sic-Marking E-Mark tool.
2. Water jet blank from .090" aluminum.
 - DXF Location: H:\item info\Library Parts\3d Asset Tags\Generic_Asset_Tag_REV_A.DXF
3. Load blank as shown, blank should be flush with fixture surface.
4. Load generic asset tag program and fill fields.
5. Place tool in fixture and mark tag.

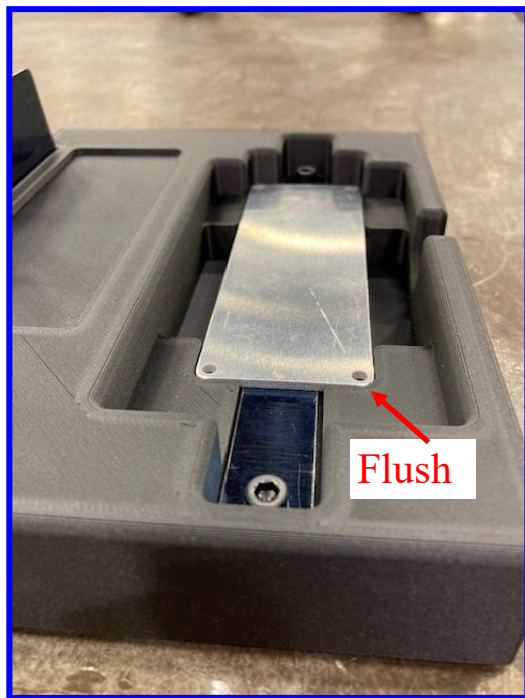

Making Mack/Volvo Asset Tags:

1. Insert shim into fixture as shown.
2. Load blank as shown, blank should be flush with fixture surface.
3. Load Mack/Volvo asset tag program and fill fields.
4. Place tool in fixture and mark tag.

