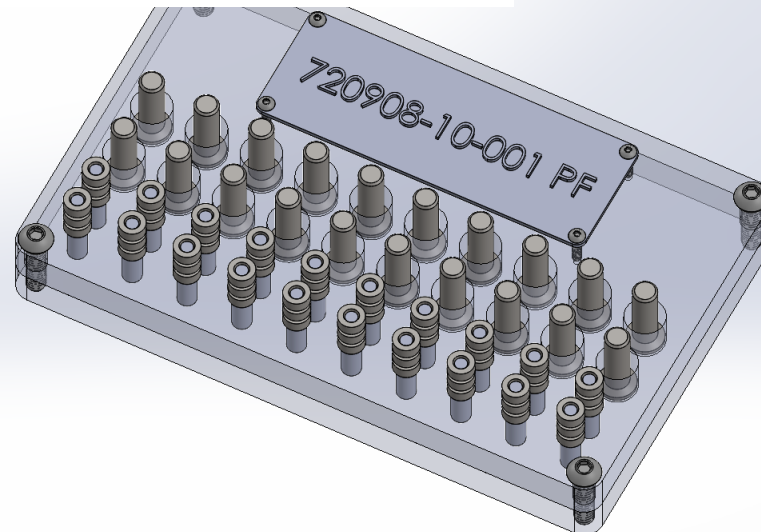


Prepare 720908-10-001 Shadowboard:

1. Load (20) 501915 press studs onto shadowboard, (1) per hole, head side DOWN.
2. Load (60) 501812 press nuts onto shadowboard, (3) per post.
3. Use (1) column of (2) press studs and (6) press nuts per 720908 part.
4. Shadowboard should be completely empty after running (10) parts.

Loaded Shadowboard**Shadowboard After (10) Parts**