
Processor part 1

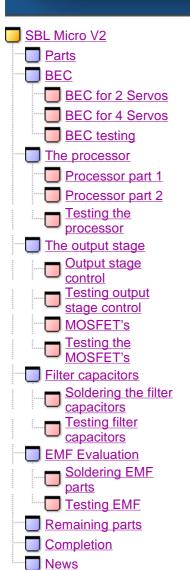

The parts you have to solder before soldering the socket.

Nr.	Part	Туре	Form
15	R30	4k7	0603
13	R31	100R	0805
	C13	100n	0805
13	R32	1k	0693

