




Installation Guide

August Wi-Fi Smart Lock

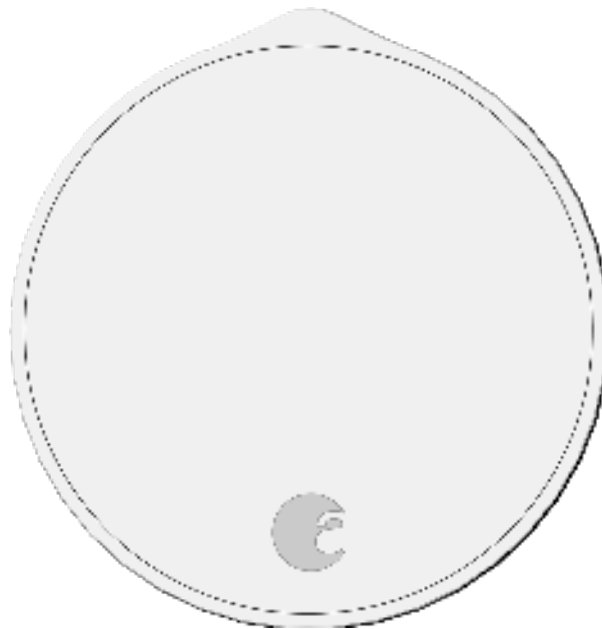

August is committed to ensuring you have a smooth setup experience.
To learn more about your new smart device go to support.august.com

© 2021 August Home Inc.



Getting started

Inside the box

- August Wi-Fi Smart Lock (4th gen)
- DoorSense® sensor
- CR123 batteries
- Lock adapter & mounting hardware*
- Tape

What you need

- Phillips Screwdriver
- August App for iOS or Android
- iOS or Android smartphone
- Wi-Fi internet connection
(802.11 b/g/n 2.4GHz)



Door Compatibility

The August Wi-Fi Smart Lock is compatible with most single-cylinder deadbolts. To learn more go to https://support.august.com/deadbolt-compatibility-list-rkzJDLYR_G



Installation

1 Prepare your existing deadbolt

Place the supplied adhesive strip to hold the keyed side of the lock in place. Be sure to press down the tape against the keyhole when you install the smart lock on the inside of the door.



2 Remove your existing thumbturn

Use a Philips Screwdriver to remove your existing thumbturn. Be sure to unlock your deadbolt before removing the thumbturn entirely. If your deadbolt has a back plate, remove that as well.



3 Prepare the mounting plate

The included Mounting Plate has two adjustable screw-holes that can be repositioned as needed. Use the two screws from the thumbturn, and insert it through the screw-holes.





Installation

4 Optional: Determine if you need the Cover Plate

For oversized deadbolt holes, an optional cover plate is included with your smart lock. If your smart lock's mounting plate does not fully cover the hole left by the removed thumbturn, you may want to use the included Cover Plate.

Attach the Mounting Plate

1. If using the optional Cover Plate, place it over the deadbolt hole.
2. Take note of the **DOOR SIDE and UP arrow**.
3. Pass the mounting plate screws through the larger opening in the Cover Plate, **taking note of the UP arrow**.
4. Tighten the screws until the mounting plate is settled securely against the door.

5 Choose your adapter

Select your adapter from the Compatibility Chart. If your lock brand is not in the chart, slide each adapter onto the tailpiece to find the right one. The correct adapter will have one of the teeth pointing up.

Tailpiece Shape	Adapter
	 or 
	 or 
 or 	 or  or rotate
 or 	 or  or rotate

Installation

6

Attach the adapter

Place the adapter onto the tail piece. One of the triangle shaped teeth should be facing up if you have the correct adapter. Make sure the non teeth side of the adapter goes in through the tail piece first.



7

Rotate to unlocked position and open wing latches

Rotate the thumbturn on your August Smart Lock all the way to the unlocked position, which may take some moderate force. The direction you turn will depend on which side of the door your deadbolt is on.



Installation

8 Attach the August Smart Lock

Before placing the August Smart Lock on the door, ensure the thumbturn is in the correct unlocked position. Slide the smart lock over the tailpiece and attach it to the mounting plate.

To secure the smart lock, clamp down both side wing latches to the mounting plate completely.

Make sure the back of the lock is flush with the door, and the lock is able to lock and unlock the deadbolt manually by rotating the outer shell.



9 Remove the faceplate

Press down on the August logo located at the bottom of the face plate. Grab the top of the faceplate and remove it.



Installation

10 Remove the battery tab

While holding the batteries in place, remove the plastic battery isolation tab. Make sure that the battery is properly seated in its compartment.



11 Reattach the faceplate

Place the faceplate back onto the smart lock, with the August logo at the bottom



12 Install DoorSense®

DoorSense® enables your lock to know when the door is open and closed. For instructions visit this support page:

https://support.august.com/what-is-doorsensetm-Hk4vL1A_z





Installation

13

Use the August Home App to complete setup

Download the free August App from the App Store or Google Play Store. Create an account.

From the menu, tap “Set up a device.” Then tap “Set up a smart lock” and choose “WI-FI SMART LOCK 4TH GENERATION.”

Tap “Start” and then tap “Continue, my device is installed.” The app will then begin the process of connecting to your Smart Lock.

