




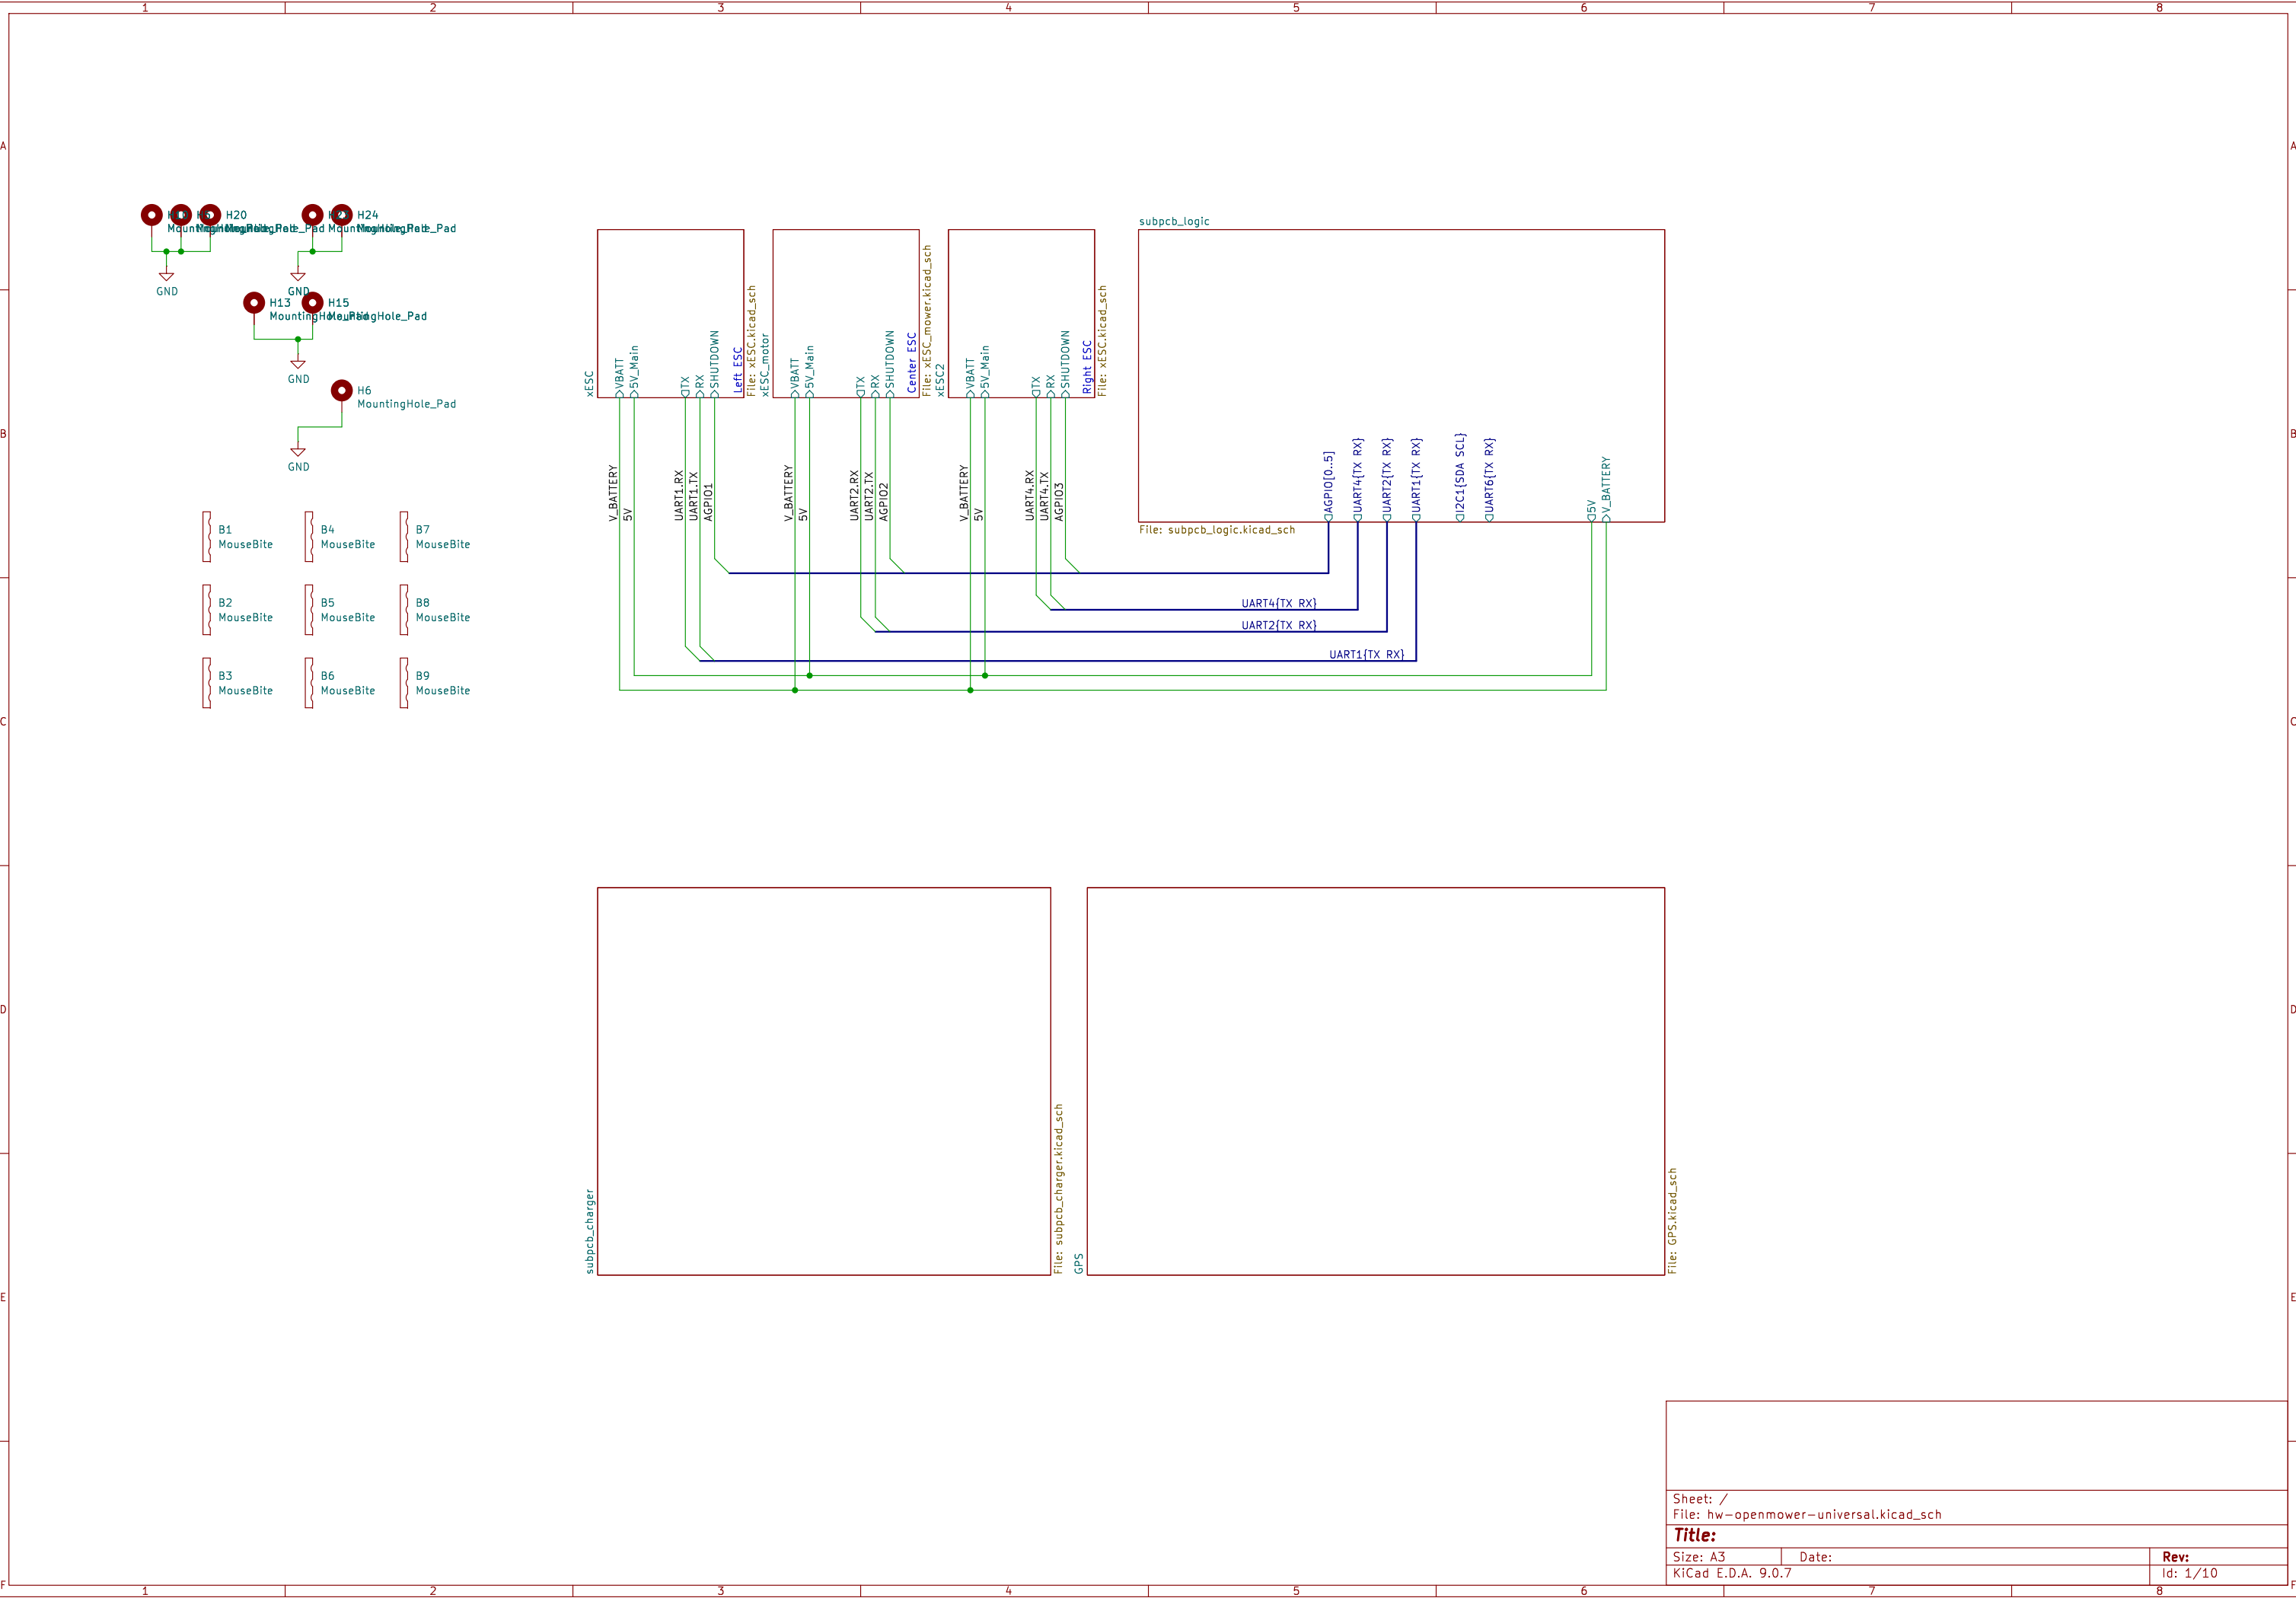


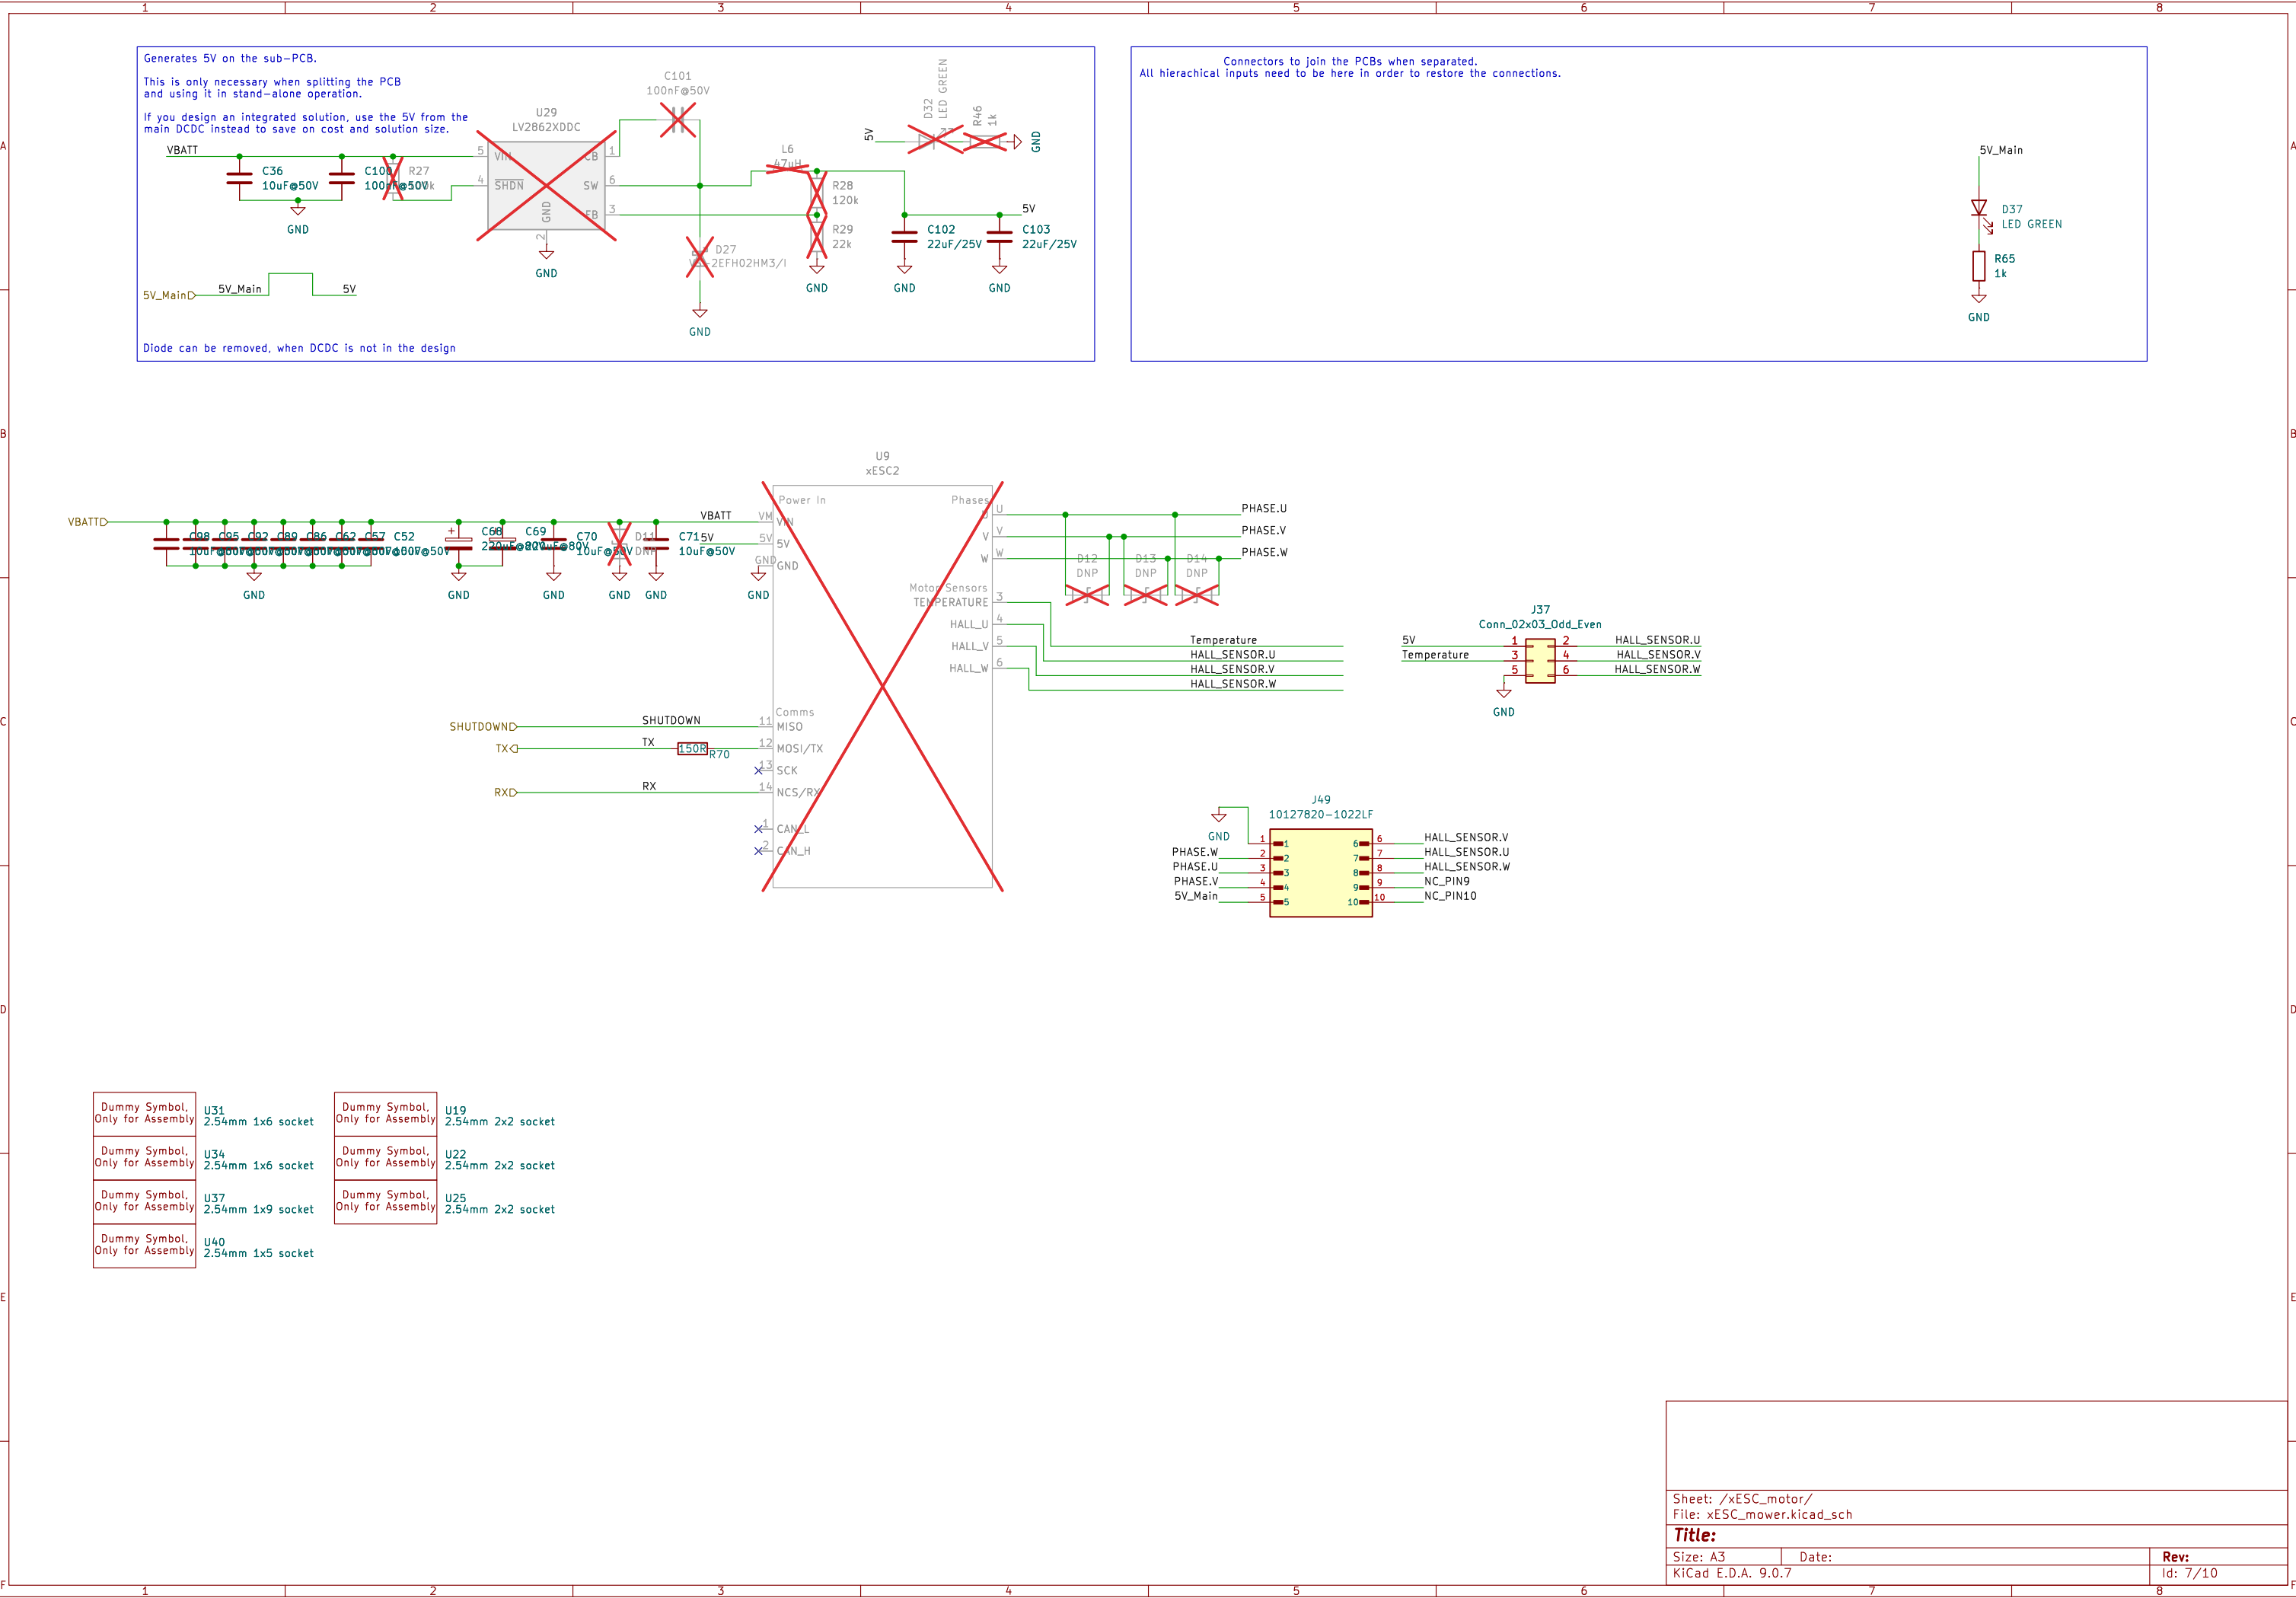





This is only necessary when splitting the PCB and using it in stand-alone operation.





If you design an integrated solution, use the 5V from the main DCDC instead to save on cost and solution size.

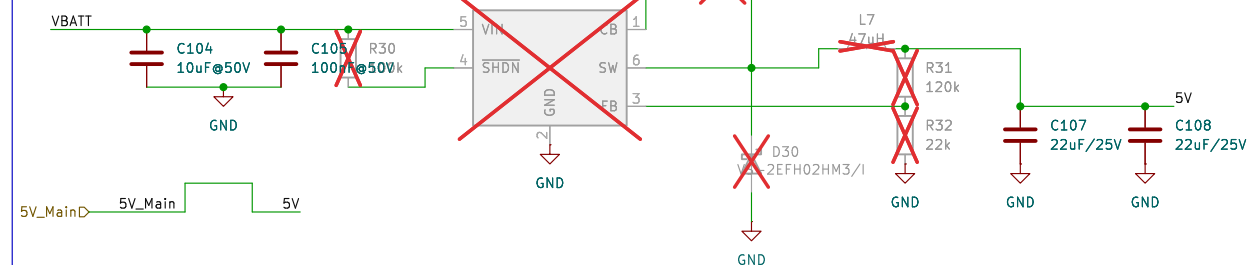

Connectors to join the PCBs when separated.
All hierarchical inputs need to be here in order to restore the connections.

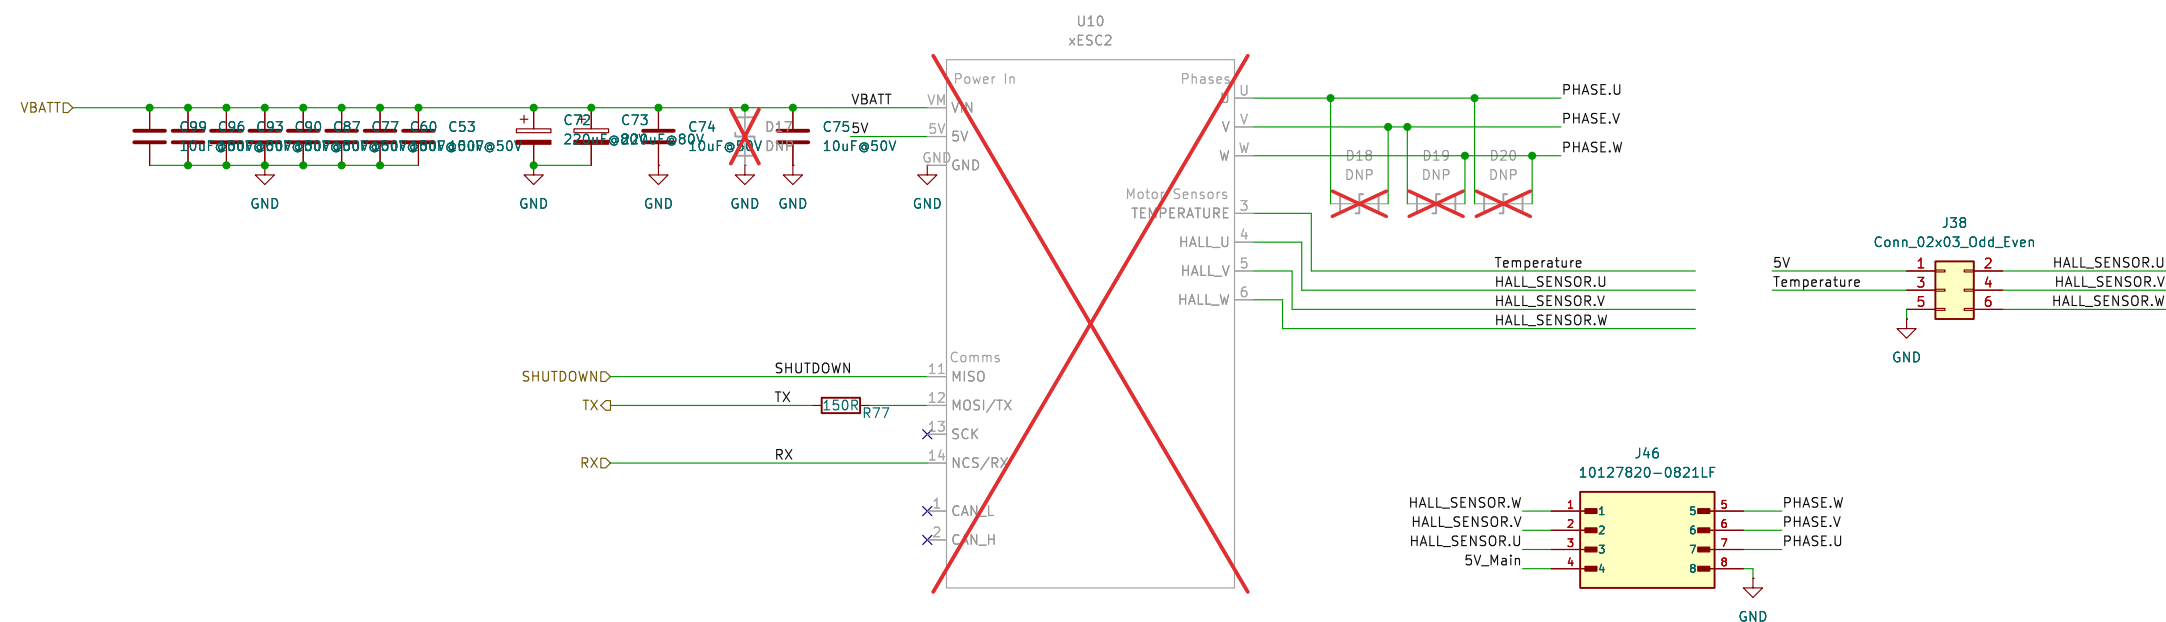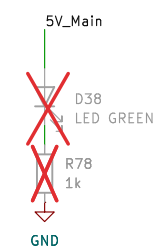


Dummy Symbol, Only for Assembly	U32 2.54mm 1x6 socket	Dummy Symbol, Only for Assembly	U20 2.54mm 2x2 socket
Dummy Symbol, Only for Assembly	U35 2.54mm 1x6 socket	Dummy Symbol, Only for Assembly	U23 2.54mm 2x2 socket
Dummy Symbol, Only for Assembly	U38 2.54mm 1x9 socket	Dummy Symbol, Only for Assembly	U26 2.54mm 2x2 socket
Dummy Symbol, Only for Assembly	U41 2.54mm 1x5 socket		

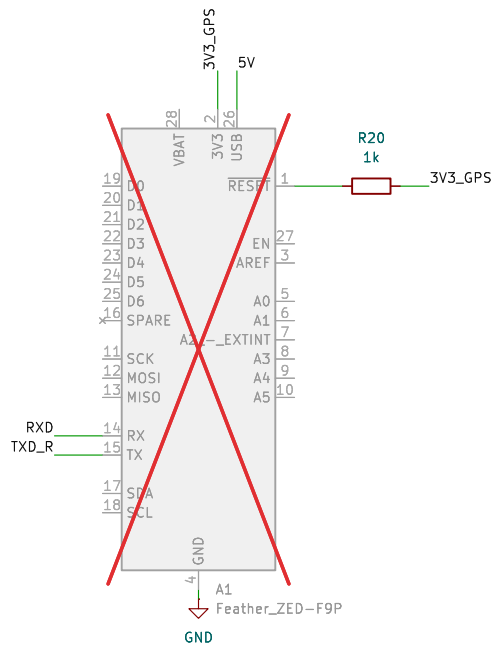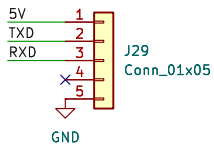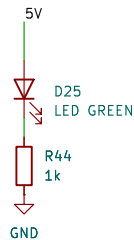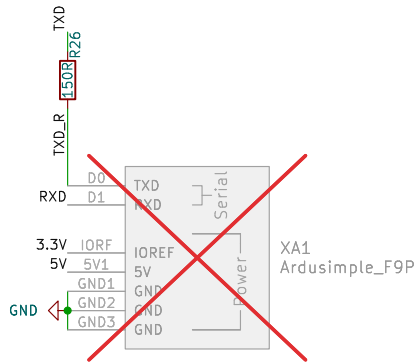

Dummy Symbol, Only for Assembly	U42	2.54mm 1x6 socket
Dummy Symbol, Only for Assembly	U43	2.54mm 1x8 socket
Dummy Symbol, Only for Assembly	U44	2.54mm 1x8 socket
Dummy Symbol, Only for Assembly	U45	2.54mm 1x10 socket
Dummy Symbol, Only for Assembly	U46	2.54mm 2x6 socket

Dummy symbols to generate positions and BOM entries for assembly

Generate 3.3V for the IOREF pin.
This only powers the level shifters, so LDO is fine here.
This is only needed because we can split the PCB and the data connector only carries 5V. If you build a more integrated PCB use the 3.3V from the core instead.

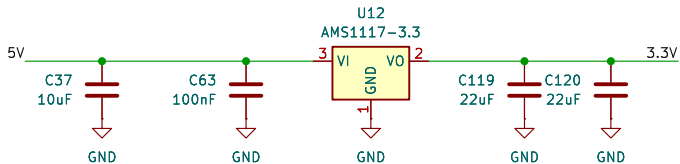

Sheet: /GPS/
File: GPS.kicad_sch

Title:


Size: A3


Date:


Rev:


KiCad E.D.A. 9.0.7

Id: 9/10

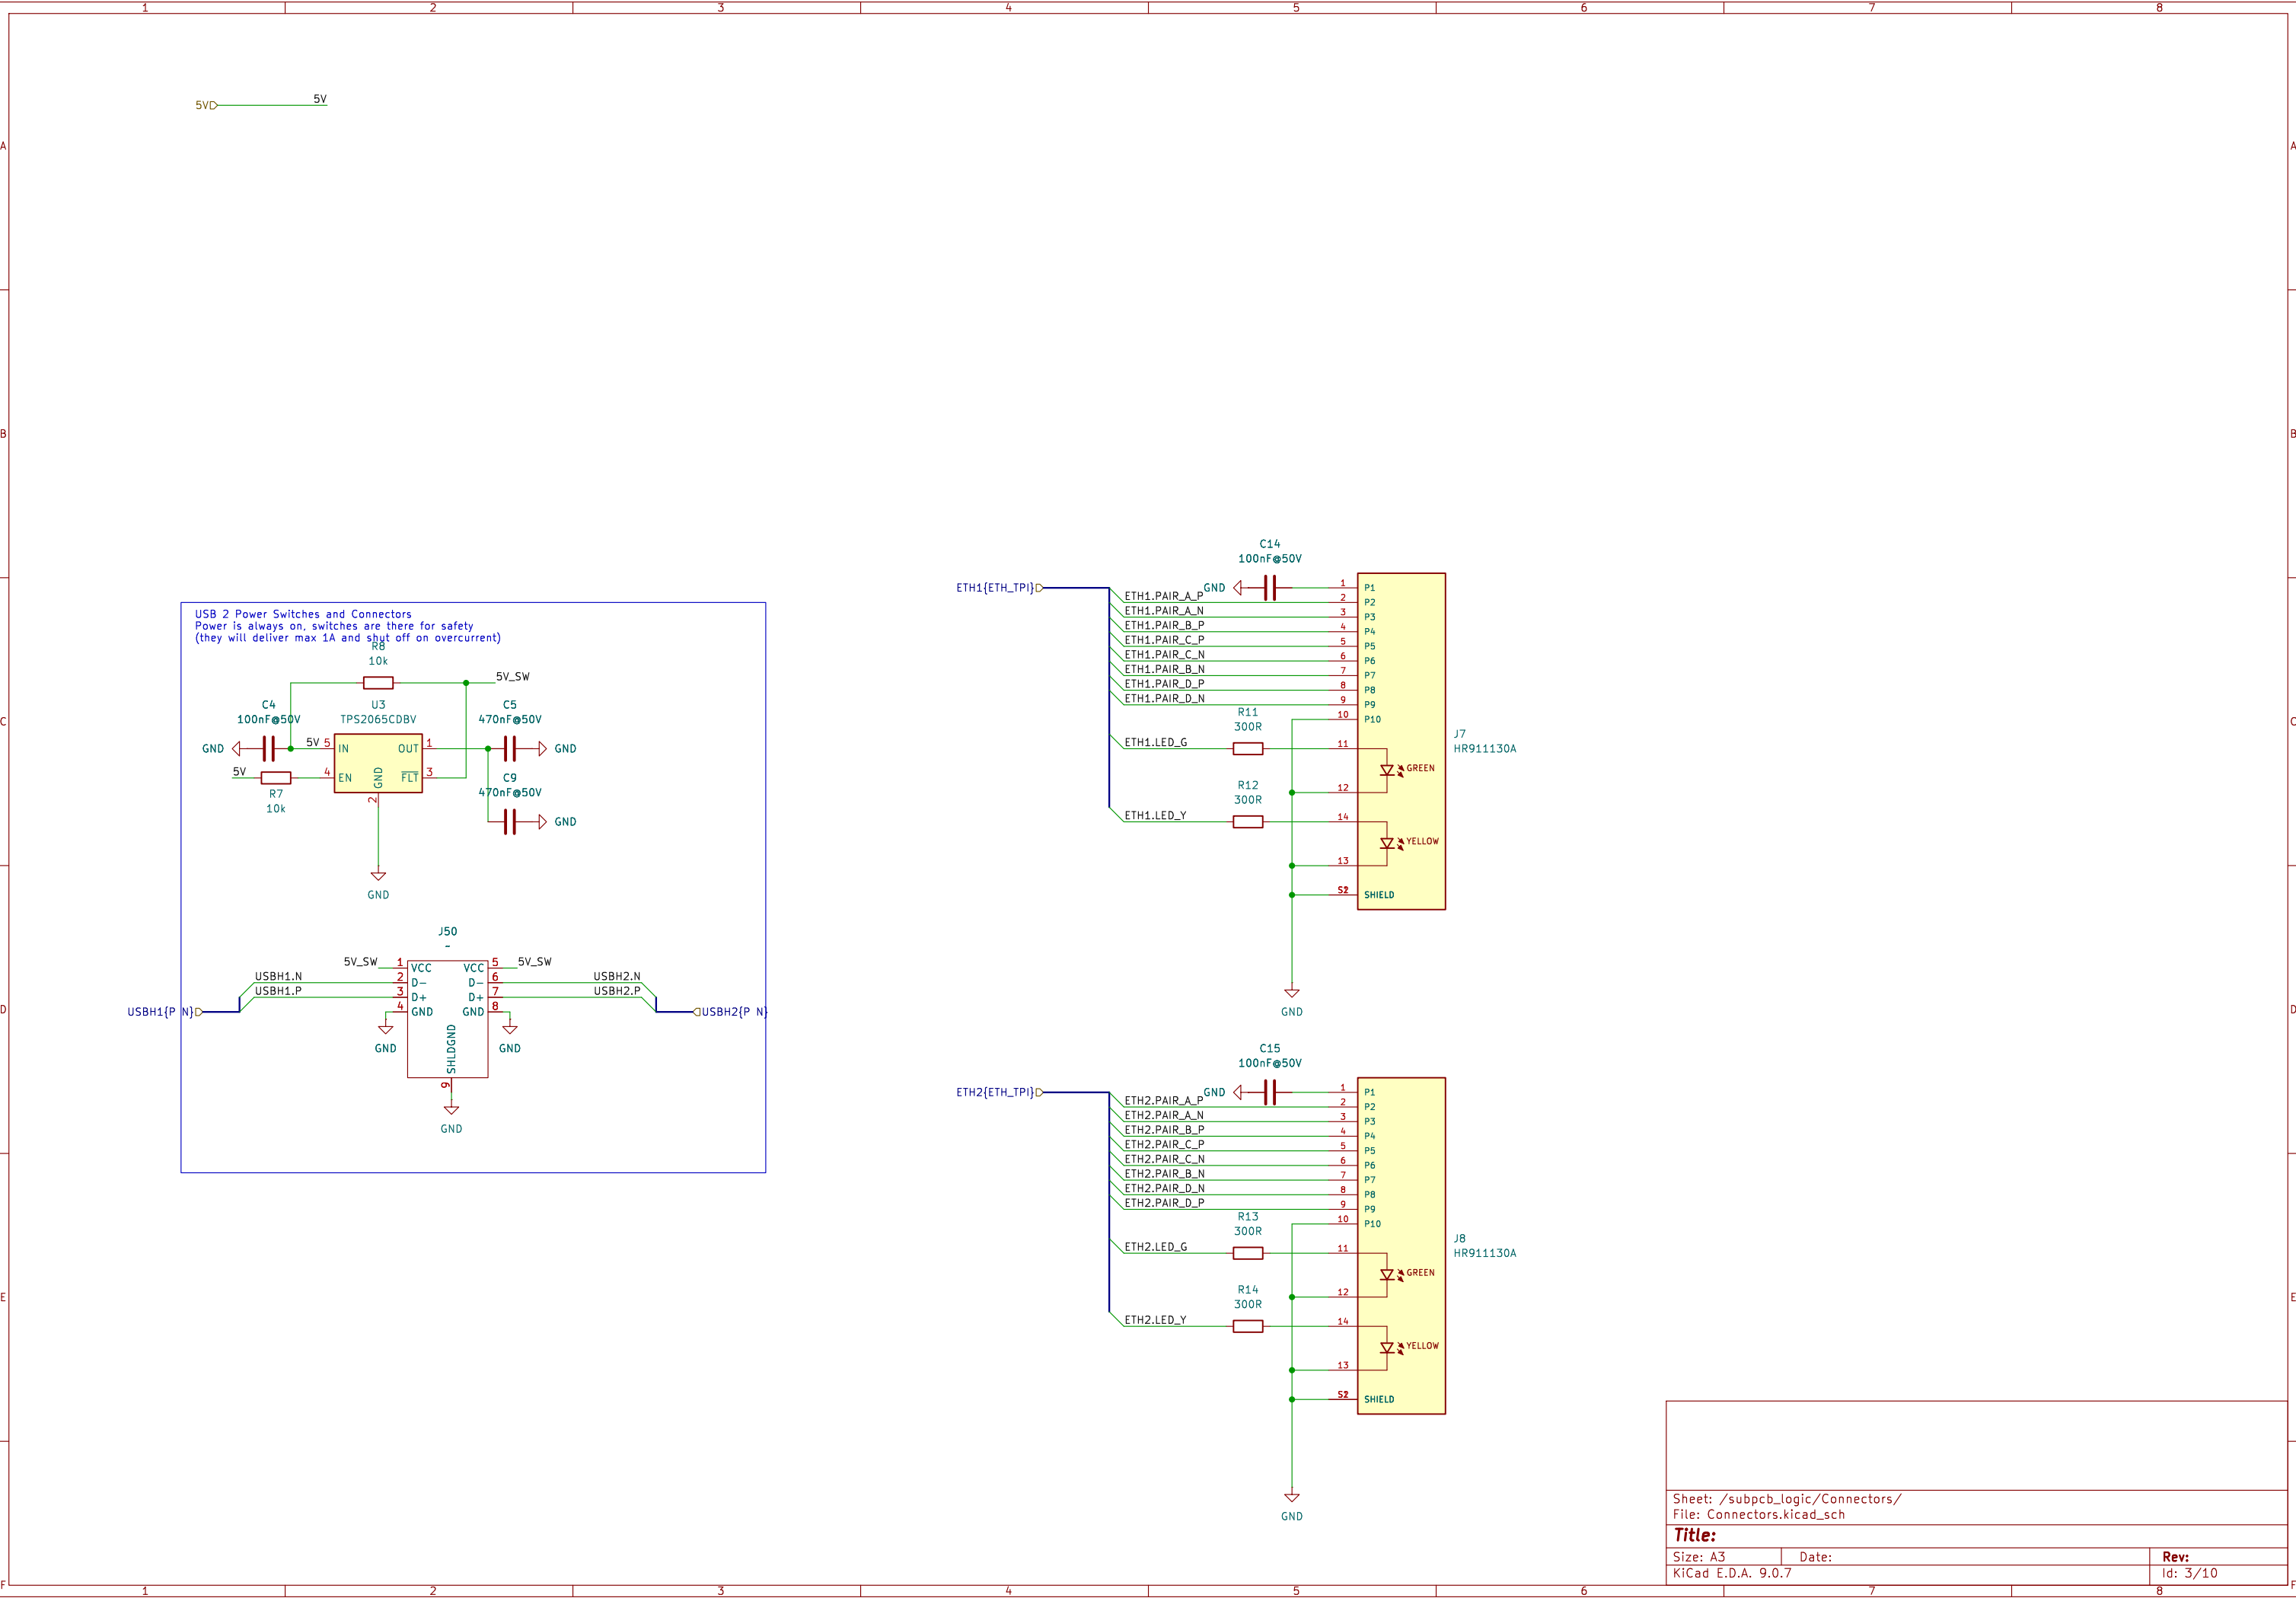

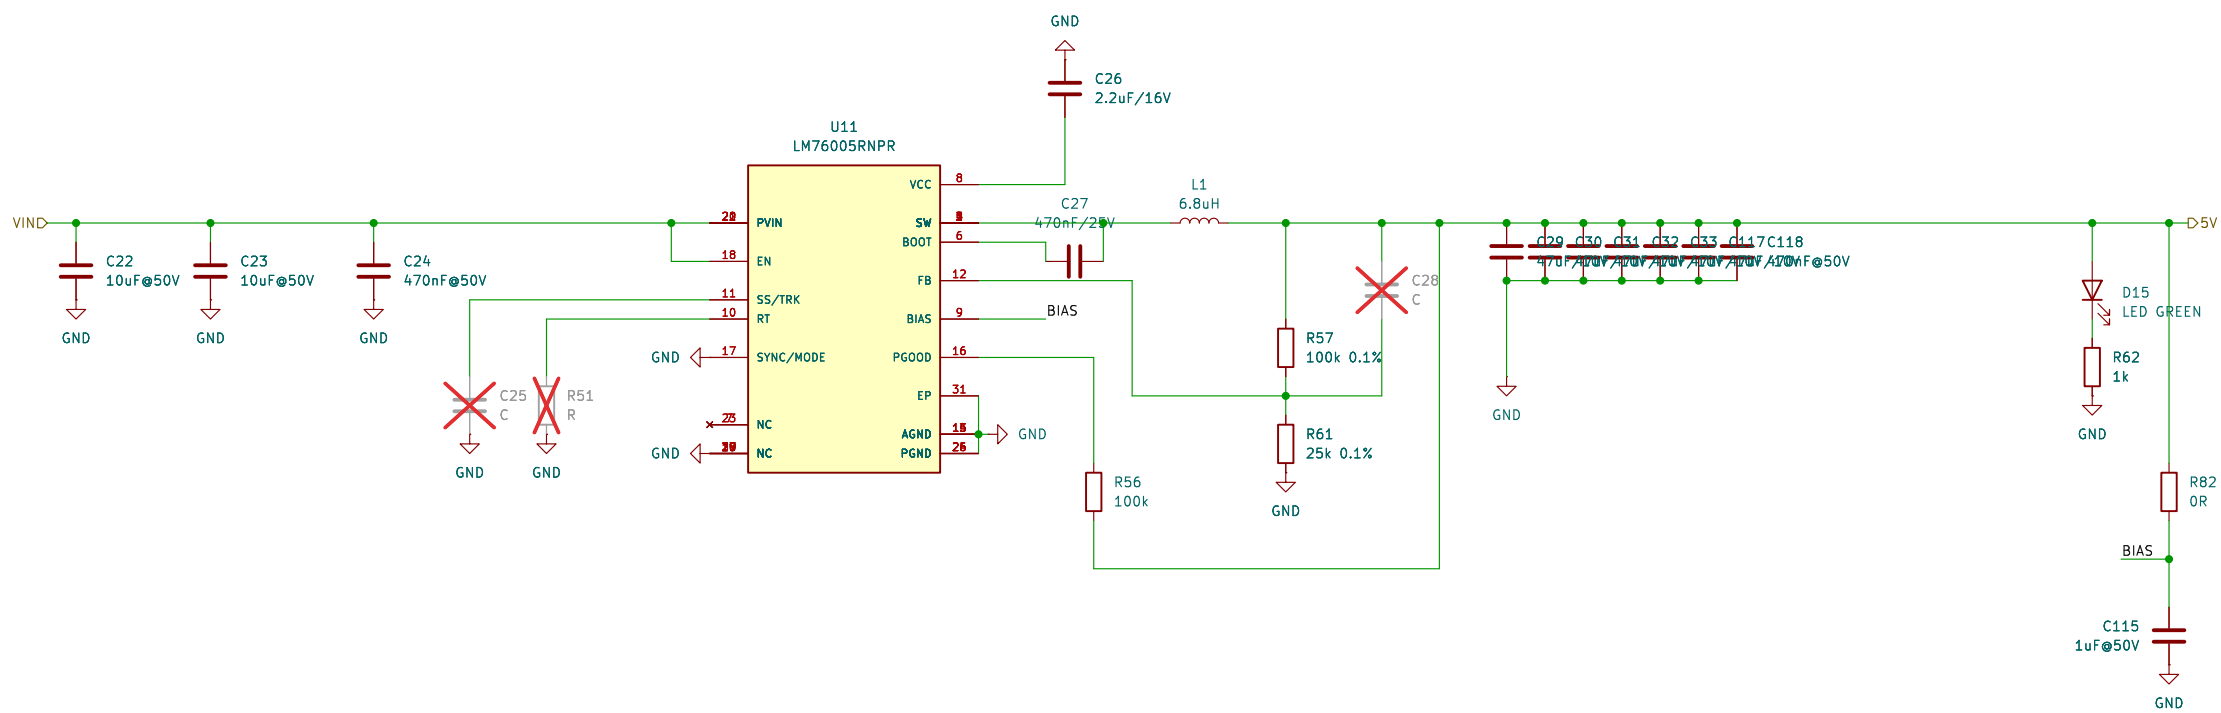

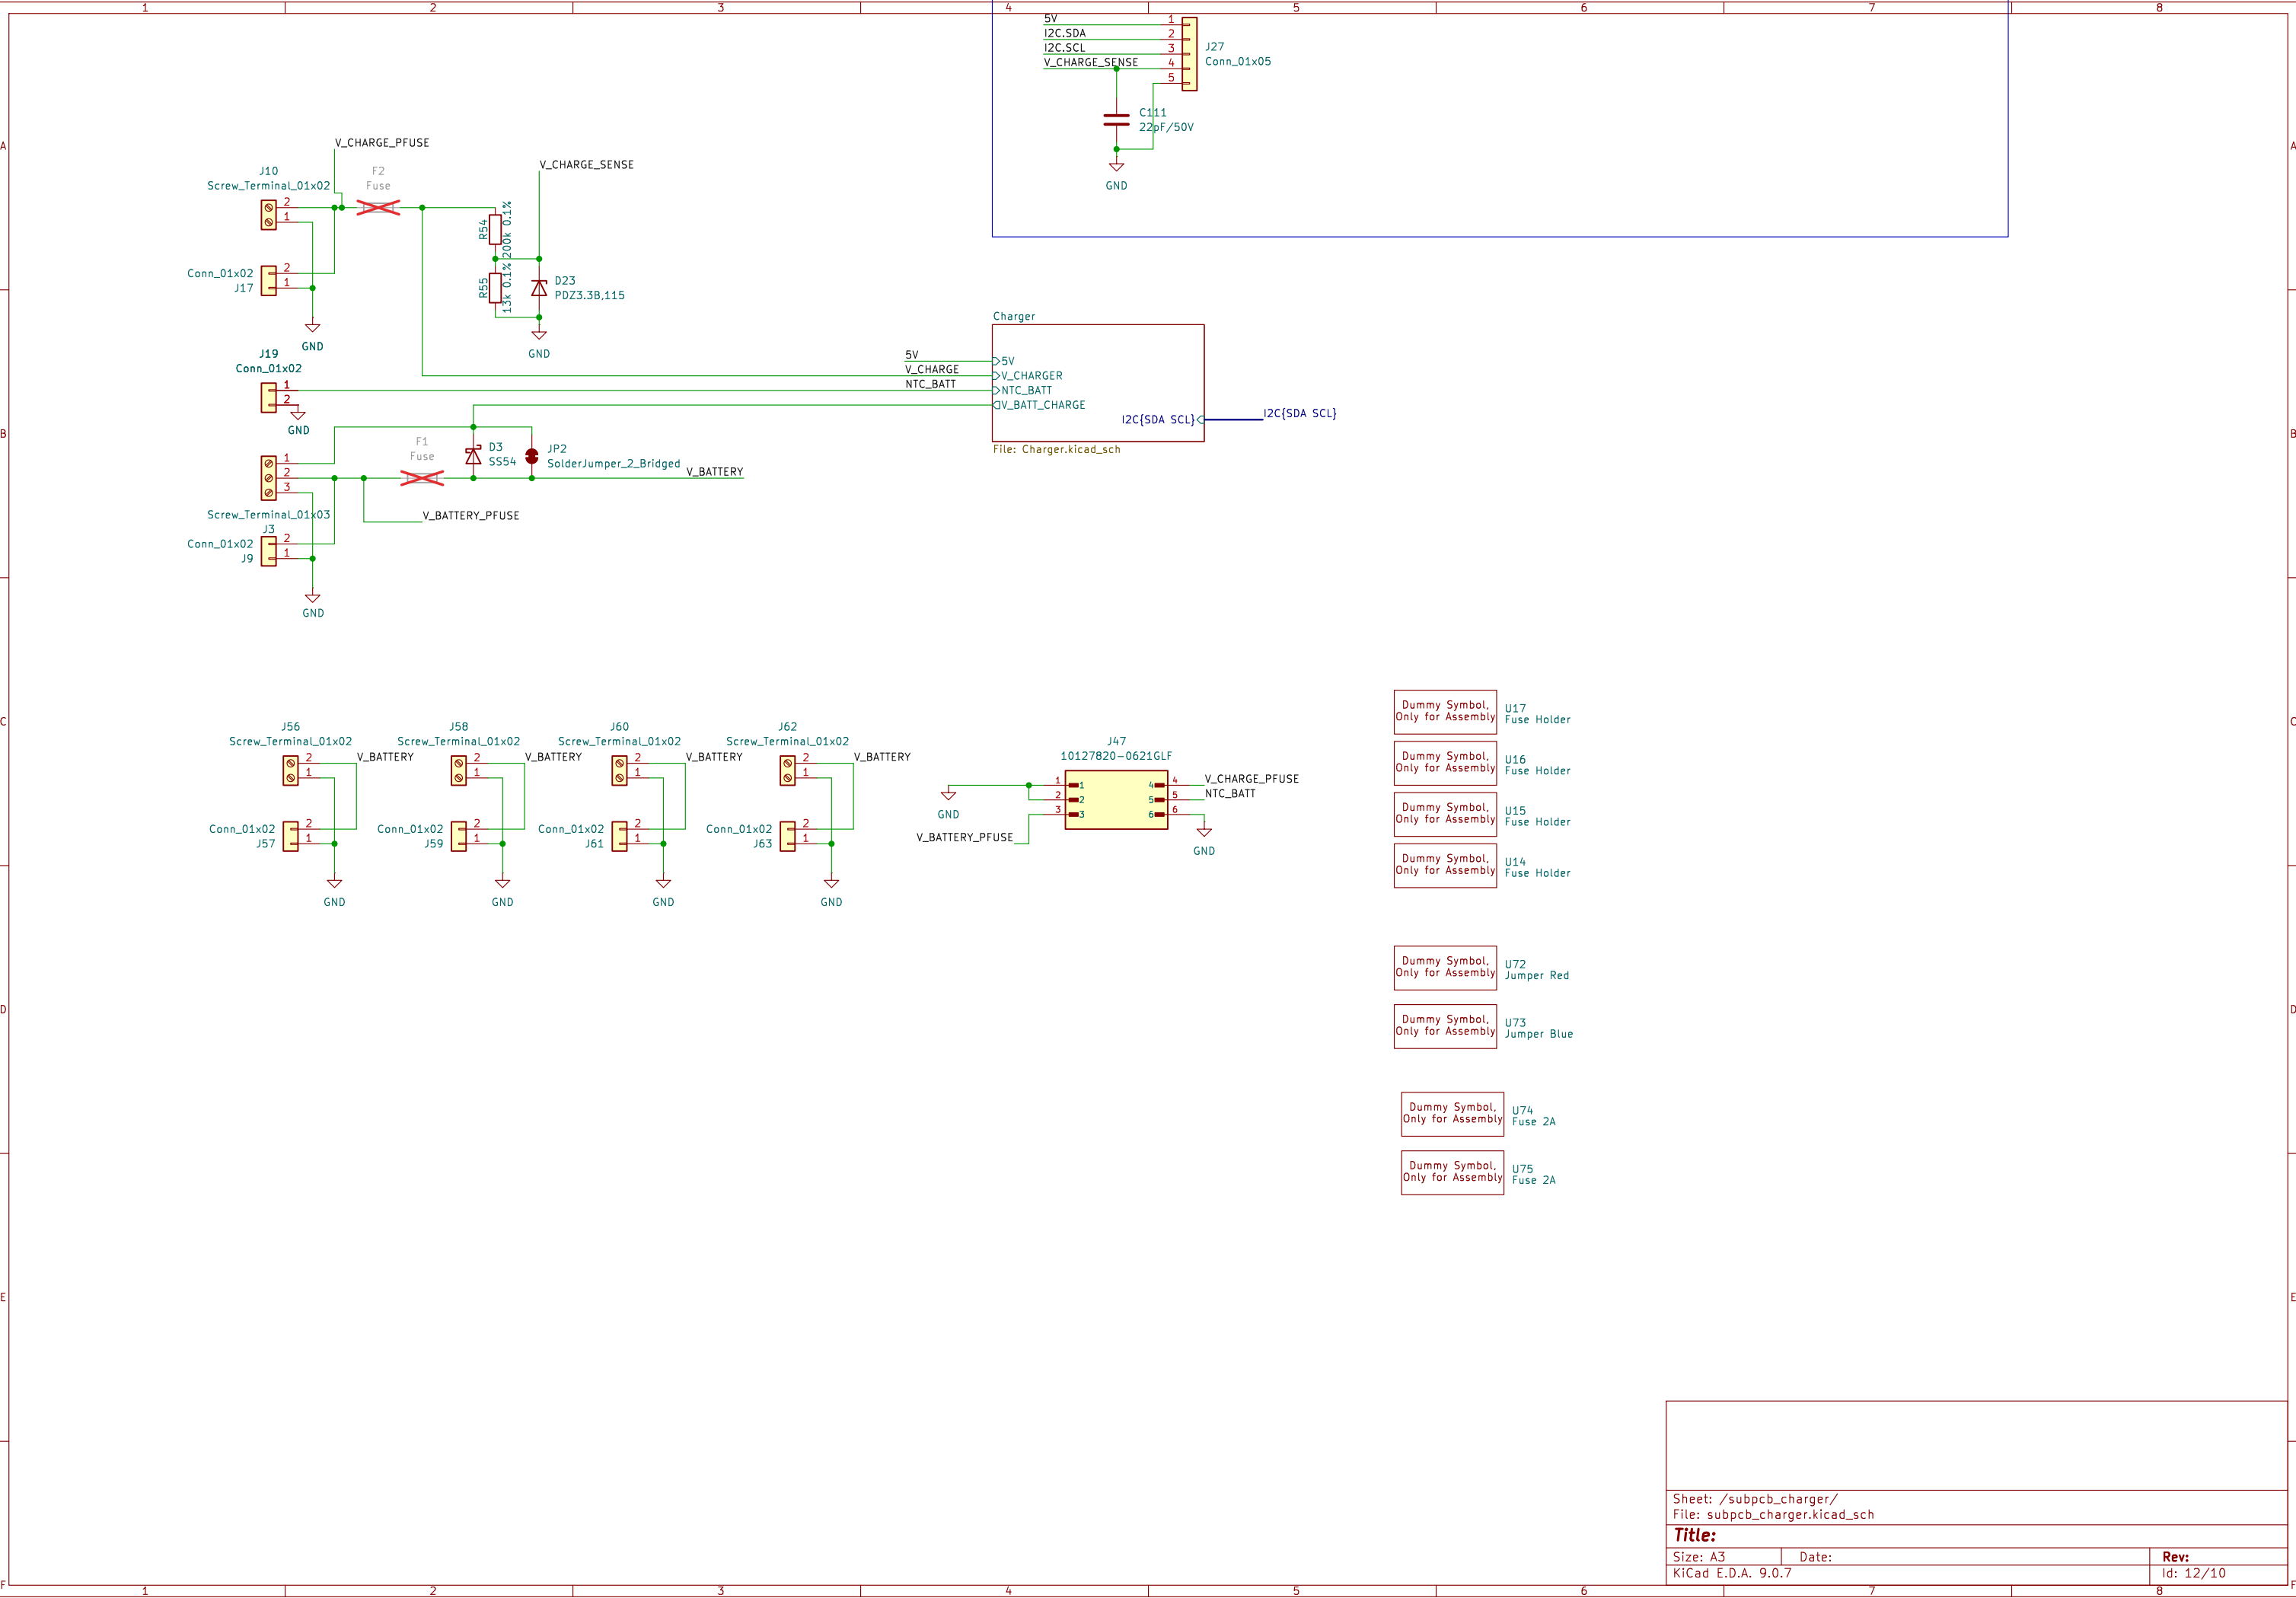

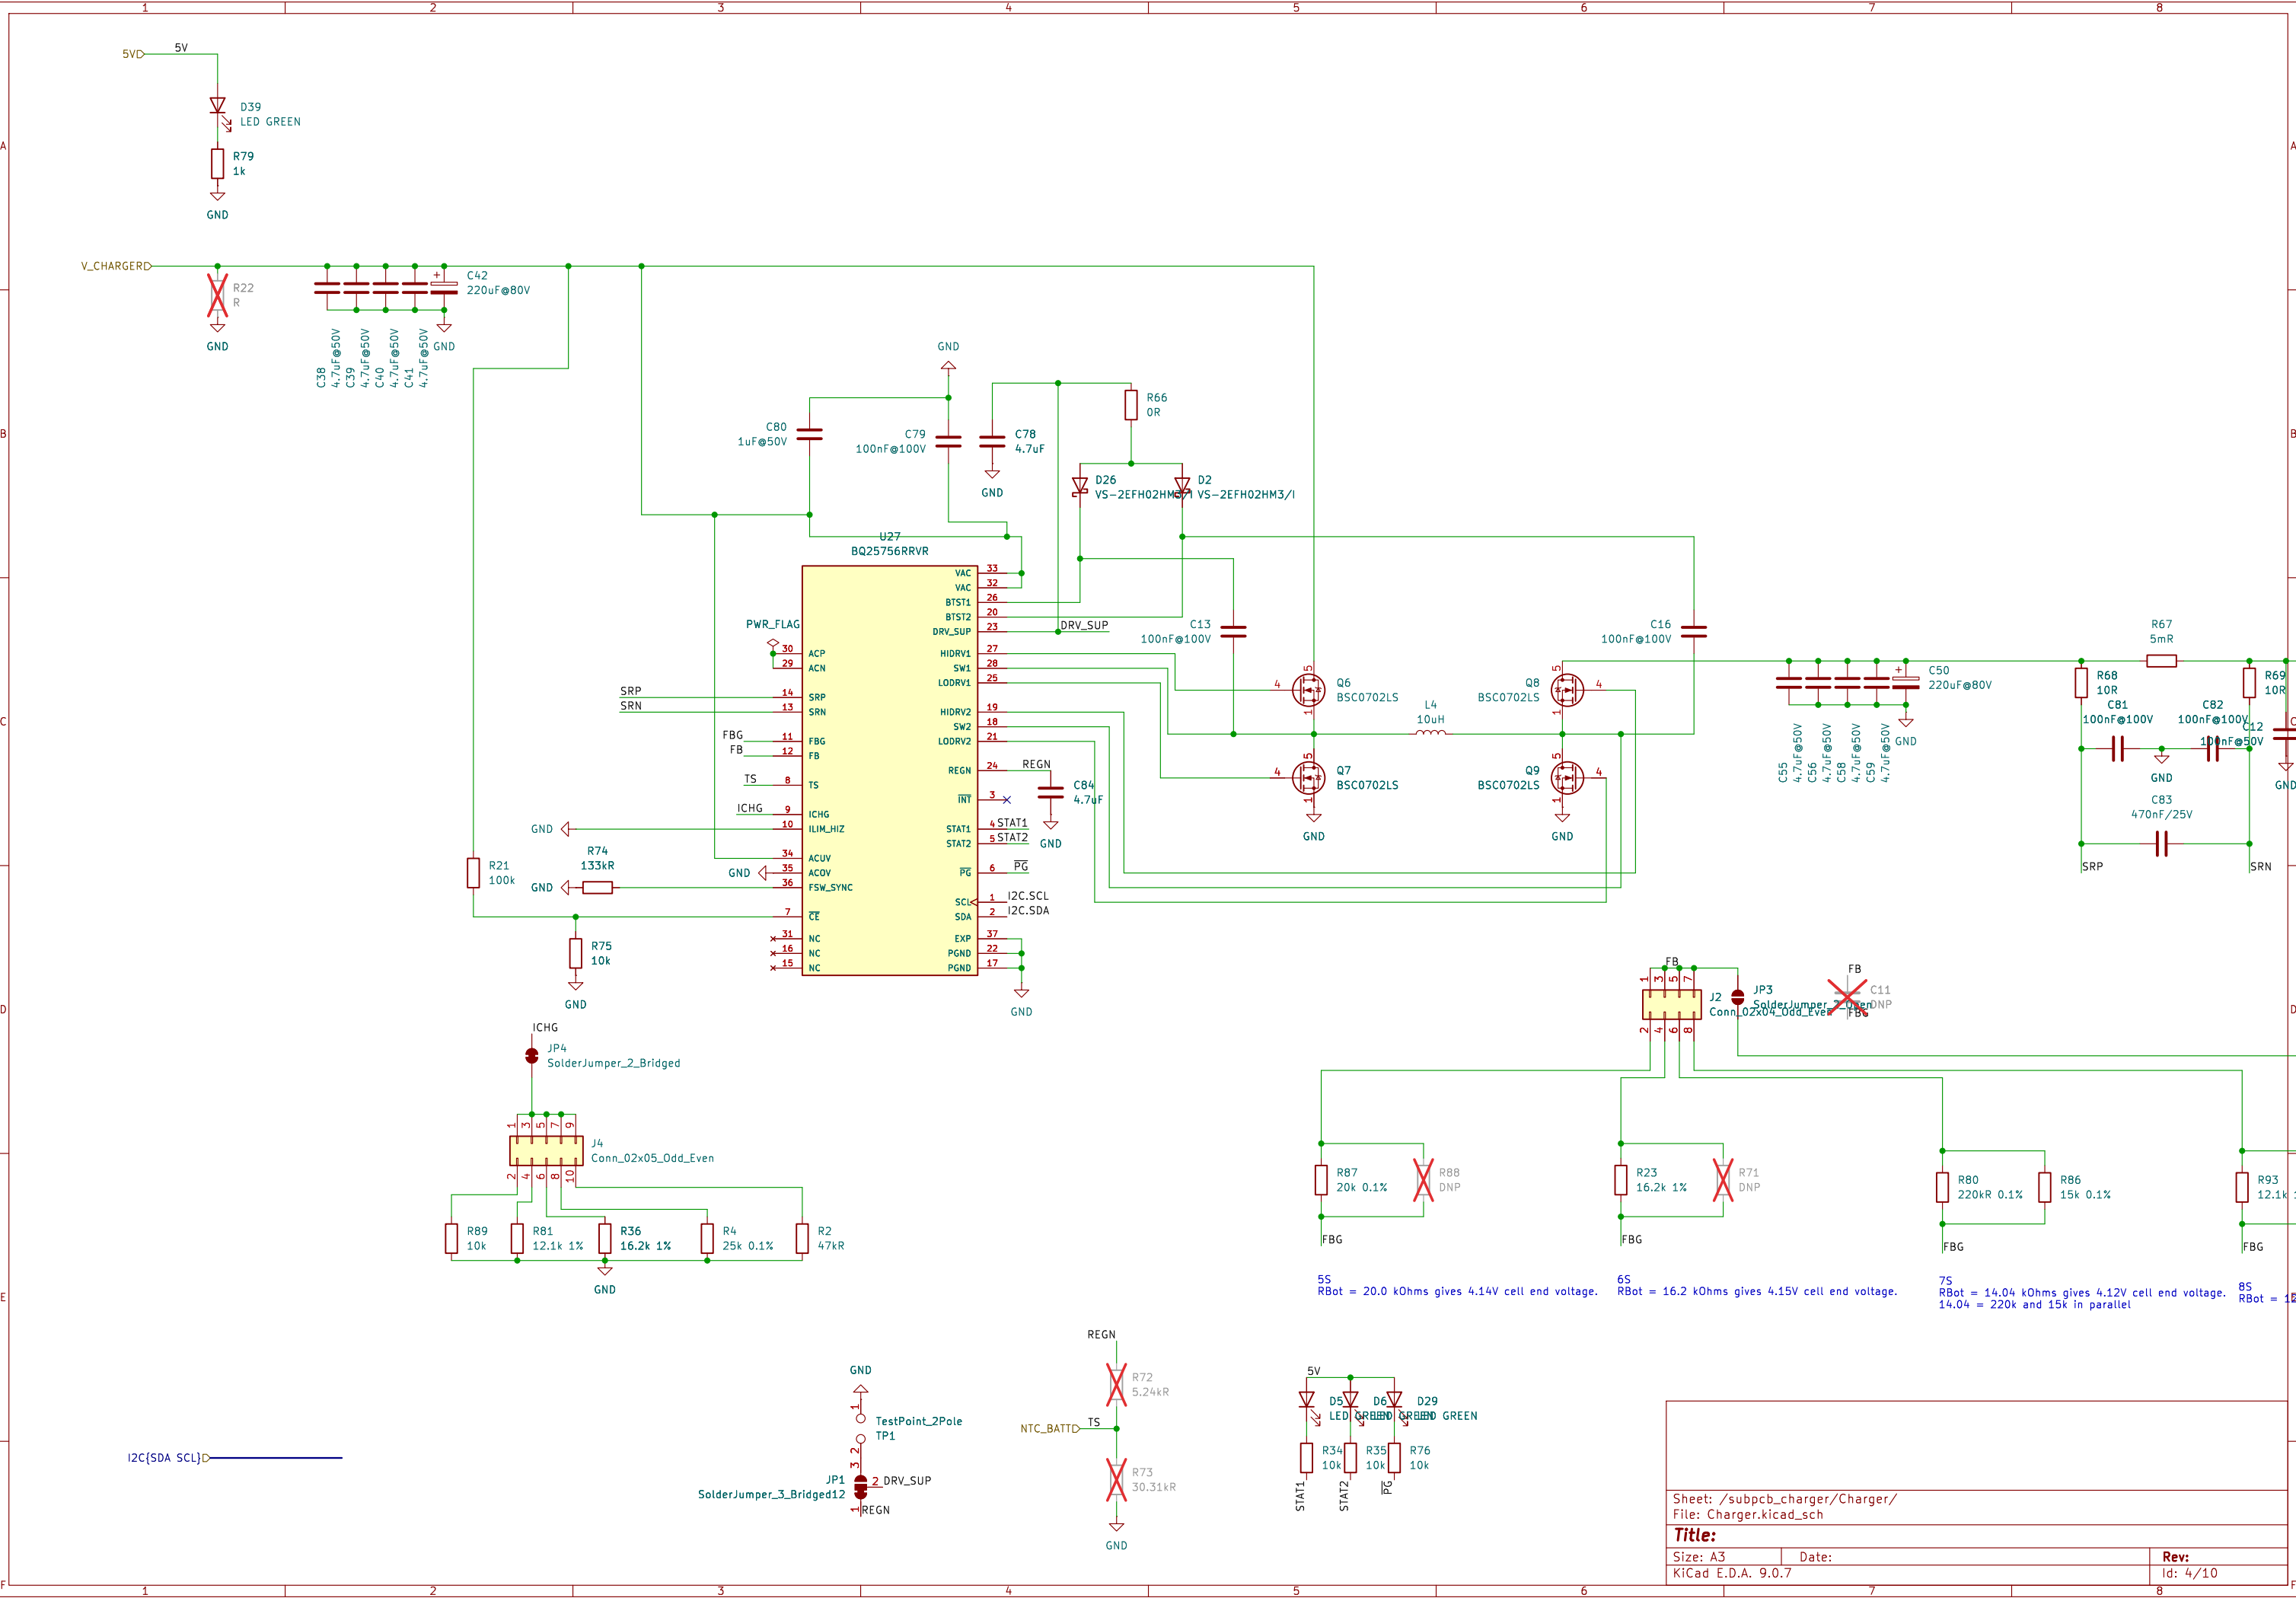

55 RBot = 20.0 kOhms gives 4.14V cell end voltage. 65 RBot = 16.2 kOhms gives 4.15V cell end voltage. 75 RBot = 14.04 kOhms gives 4.12V cell end voltage. 85 RBot = 12.1 kOhms gives 4.11V cell end voltage.