



Compensations for the button force (hole 20 × 15 mm, r = 1)

Reference: one pallet

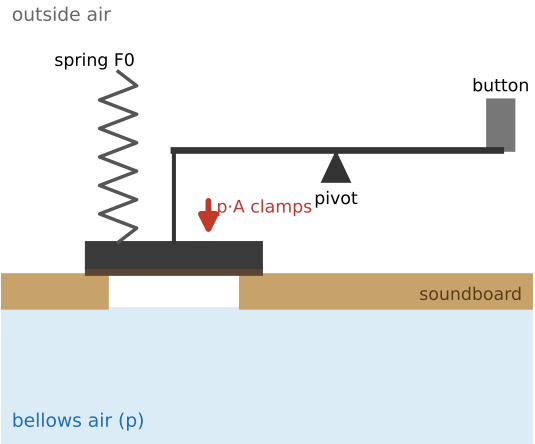


On the draw, pressure clamps the pallet:
 $\text{button} = (F_0 + p \cdot A) \times r / \eta$

(a) Pilot: small pallet first

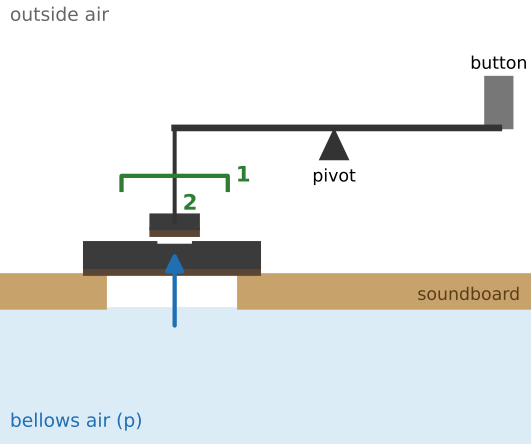


The lever first lifts the small pallet
(6 × 6 mm): the chamber equalises,
then it takes the big one. The draw
'pluck' disappears, F0 remains.

(b) Two pallets side by side

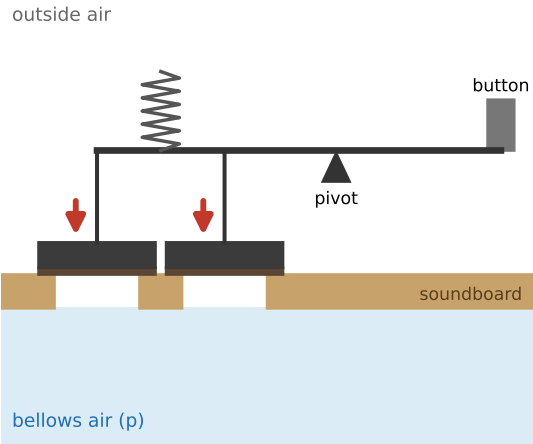


2 holes of 150 mm²: same area,
same total spring. No gain.

(c) Balanced pallet

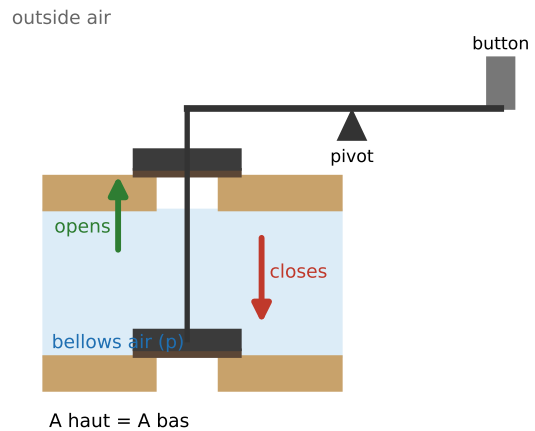

Two seats on the same stem, equal areas:
pressure opens one and closes the other.
The thrusts cancel; only the sealing
spring remains (0.3 to 0.5 N).

(d) Helper spring at the button

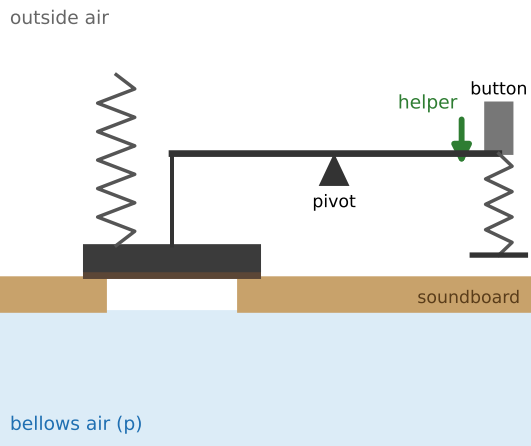

A constant force pulls the button
down: it removes as much on the
stroke as on the return.

(e) Force at the button (g)

