C2152b

14A005

R87
Heated wiper park

F01079

Pin	Circuit	Circuit Function
1	30S-HB12 (RD/YE)	Voltage supplied at all times (not overload protected), switch

C2243

14A005

U12
Radio capacitor (18801)



F02185

Pin	Circuit	Circuit Function
1	29S-LB20 (OG)	Voltage supplied at all times (overload protected), Switched
2	9-LB12 (BN)	Sensor signal return (reference/ground)

C3014

14A005

A225
Driver safety belt retractor pretensioner

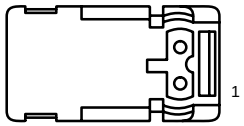

F02215

Pin	Circuit	Circuit Function
1	31S-JA33 (BK/BU)	Ground, switch
2	30S-JA33 (RD/BU)	Voltage supplied at all times (not overload protected), switch

C3015

14A699

M215
Power seat motor assembly, right

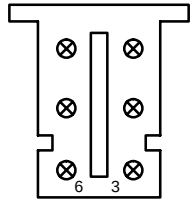

F06138

Pin	Circuit	Circuit Function
1	32-AH17 (WH/GN)	Switched between: Battery voltage, Ground or Open
2	–	not used
3	–	not used
4	33-AH17 (YE/GN)	Switched between: Battery voltage, Ground or Open
5	–	not used
6	–	not used

C4062

14A005

M271
Convertible top motor

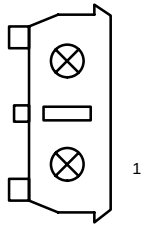

F02088

Pin	Circuit	Circuit Function
1	32-AG14 (WH)	Switched between: Battery voltage, Ground or Open
2	33-AG14 (YE)	Switched between: Battery voltage, Ground or Open