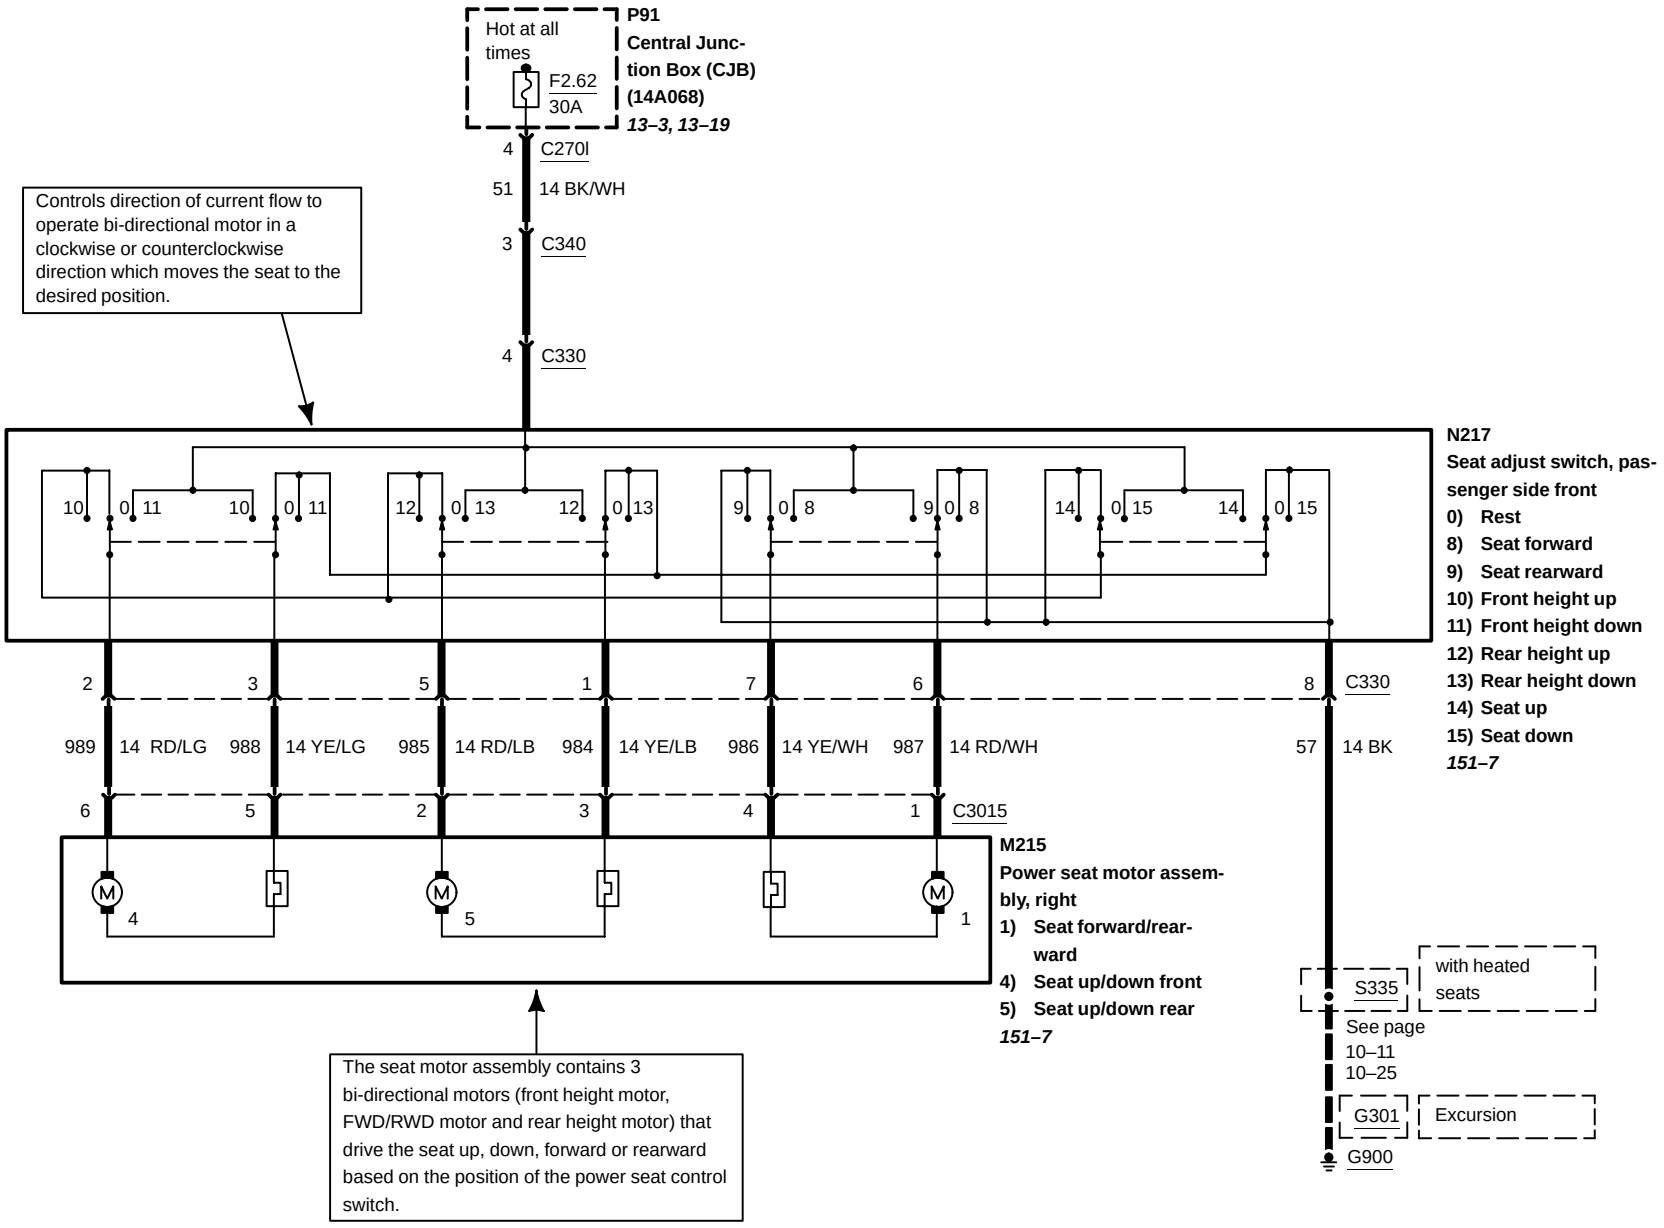
Hot at all times
F2.62
30A
P91
Central Junction Box (CJB)
(14A068)
13–3, 13–19
4 C270l
51 14 BK/WH
3 C340
4 C330
Controls direction of current flow to operate bi-directional motor in a clockwise or counterclockwise direction which moves the seat to the desired position.
10 0 11 10 0 11 12 0 13 12 0 13 9 0 8 9 0 8 14 0 15 14 0 15
N217
Seat adjust switch, passenger side front
0) Rest
8) Seat forward
9) Seat rearward
10) Front height up
11) Front height down
12) Rear height up
13) Rear height down
14) Seat up
15) Seat down
151–7
2 3 5 1 7 6 8 C330
989 14 RD/LG 988 14 YE/LG 985 14 RD/LB 984 14 YE/LB 986 14 YE/WH 987 14 RD/WH 57 14 BK
6 5 2 3 4 1 C3015
M215
Power seat motor assembly, right
1) Seat forward/rearward
4) Seat up/down front
5) Seat up/down rear
151–7
M 4
M 5
M 1
The seat motor assembly contains 3 bi-directional motors (front height motor, FWD/RWD motor and rear height motor) that drive the seat up, down, forward or rearward based on the position of the power seat control switch.
S335
with heated seats
See page 10–11 10–25
G301
Excursion
G900