C2031

14401

R42
Cigar lighter, front

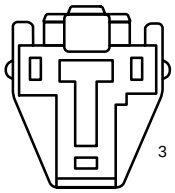

F03199

Pin	Circuit	Circuit Function
1	40 (LB/WH)	Voltage in Run or Accessory (overload protected)
2	-	not used
3	57 (BK)	Ground

C2033

14401

N251
Power point

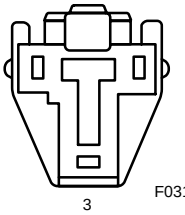

F03199

Pin	Circuit	Circuit Function
1	1049 (BN/PK)	Voltage supplied at all times (overload protected)
2	-	not used
3	57 (BK)	Ground

C2039

19B107

N49
Hazard flasher switch

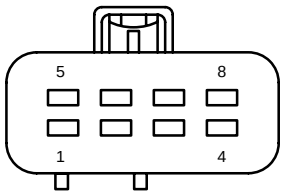

F08060

Pin	Circuit	Circuit Function
1	385 (WH/RD)	Voltage supplied at all times (overload protected)
2	57 (BK)	Ground
3	-	not used
4	57 (BK)	Ground
5	-	not used
6	-	not used
7	-	not used
8	19 (LB/RD)	Voltage supplied at all times (overload protected)

C2041a

14401

A208
Restraints Control Module (RCM)

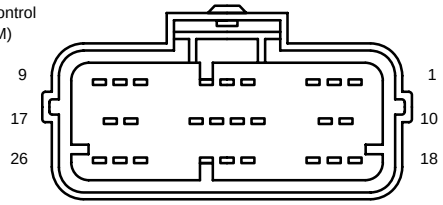

F26008

Pin	Circuit	Circuit Function
1	-	not used
2	296 (WH/VT)	Voltage supplied in Start and Run (overload protected)
3	614 (GY/OG)	Driver air bag, feed, monitor
4	615 (GY/WH)	Driver air bag, return
5	70 (LB/WH)	ISO Bus
6	607 (LB/OG)	Passenger air bag, feed, monitor
7	616 (PK/BK)	Passenger air bag, return
8	-	not used
9	-	not used
10	57 (BK)	Ground
11	-	not used
12	-	not used
13	57 (BK)	Ground
14	601 (LB/PK)	Voltage supplied in Start and Run (overload protected)
15	1081 (YE/RD)	Passenger safety belt retractor pretensioner, feed
16	1082 (YE/BK)	Passenger safety belt retractor pretensioner, return
17	-	not used
18	1079 (LG/RD)	Driver safety belt retractor pretensioner, feed
19	-	not used
20	608 (BK/YE)	Air bag indicator, control
21	57 (BK)	Ground
22	1080 (LG/BK)	Driver safety belt retractor pretensioner, return
23	-	not used
24	-	not used
25	-	not used
26	1083 (LB/BK)	Air bag, tone driver