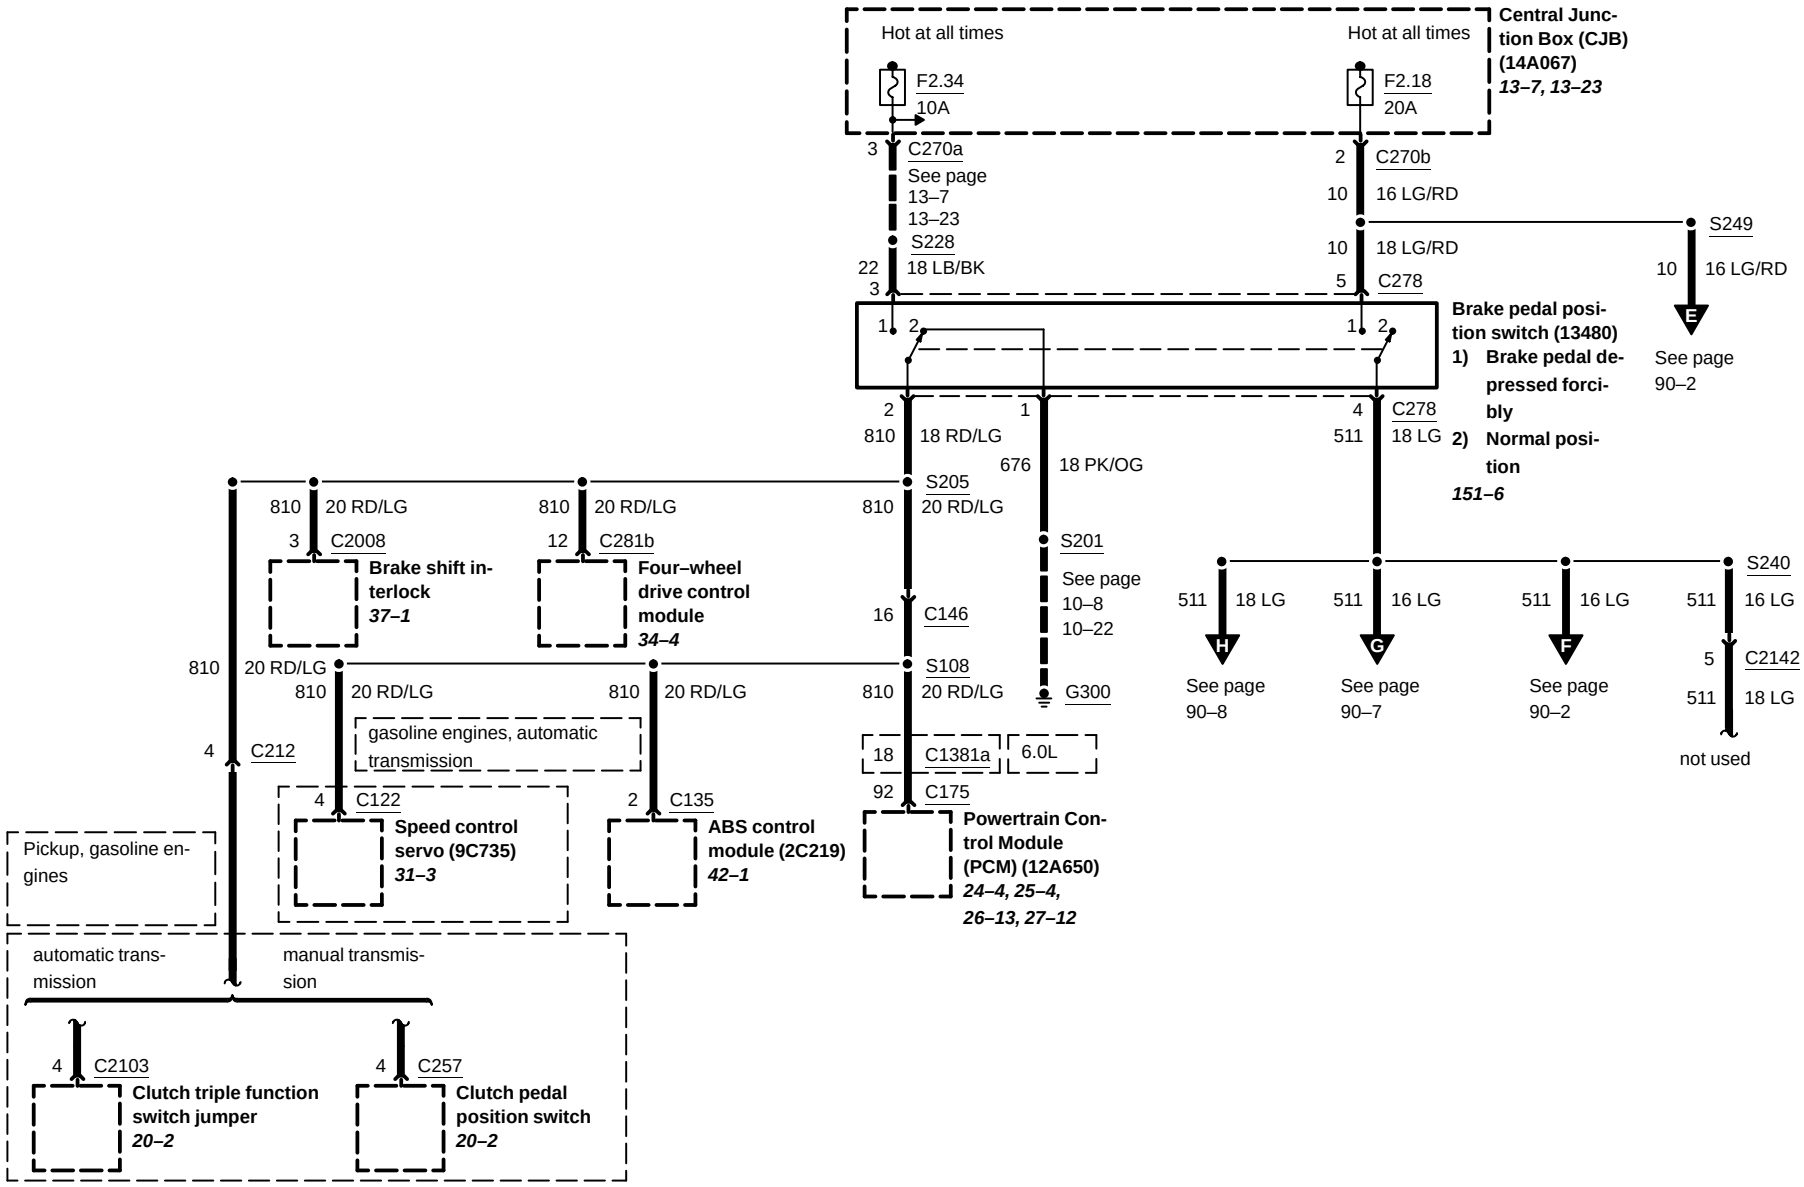
Central Junction Box (CJB) (14A067)
13–7, 13–23
Hot at all times
F2.34
10A
Hot at all times
F2.18
20A
3 C270a
See page 13–7 13–23
2 C270b
10 16 LG/RD
S228
22 18 LB/BK
3
10 18 LG/RD
5 C278
S249
10 16 LG/RD
See page 90–2
Brake pedal position switch (13480)
1) Brake pedal depressed forcibly
2) Normal position
151–6
2 810 18 RD/LG
1 676 18 PK/OG
4 C278
511 18 LG
S205
810 20 RD/LG
S201
See page 10–8 10–22
810 20 RD/LG
3 C2008
Brake shift interlock
37–1
810 20 RD/LG
12 C281b
Four–wheel drive control module
34–4
16 C146
511 18 LG
See page 90–8
511 16 LG
See page 90–7
511 16 LG
See page 90–2
S240
511 16 LG
5 C2142
511 18 LG
not used
810 20 RD/LG
S108
810 20 RD/LG
G300
gasoline engines, automatic transmission
4 C212
4 C122
Speed control servo (9C735)
31–3
2 C135
ABS control module (2C219)
42–1
18 C1381a
6.0L
92 C175
Powertrain Control Module (PCM) (12A650)
24–4, 25–4, 26–13, 27–12
Pickup, gasoline engines
automatic transmission
manual transmission
4 C2103
Clutch triple function switch jumper
20–2
4 C257
Clutch pedal position switch
20–2