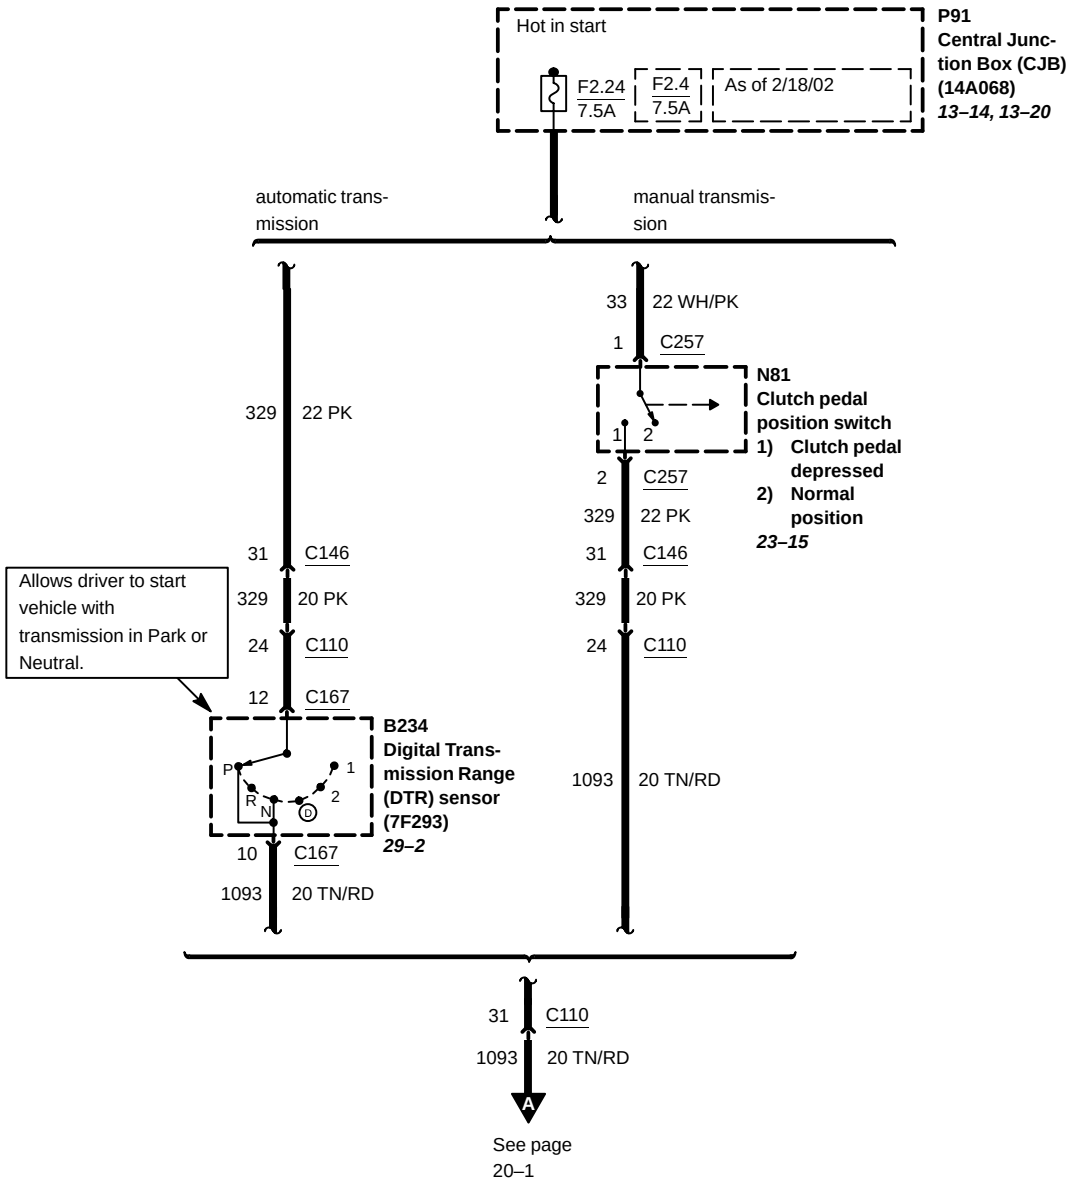
Hot in start
F2.24
7.5A
F2.4
7.5A
As of 2/18/02
P91
Central Junction Box (CJB)
(14A068)
13–14, 13–20
automatic transmission
manual transmission
33
22 WH/PK
1
C257
N81
Clutch pedal position switch
1) Clutch pedal depressed
2) Normal position
23–15
329
22 PK
2
C257
329
22 PK
31
C146
329
20 PK
24
C110
12
C167
Allows driver to start vehicle with transmission in Park or Neutral.
B234
Digital Transmission Range (DTR) sensor
(7F293)
29–2
P
R
N
D
1
2
10
C167
1093
20 TN/RD
1093
20 TN/RD
31
C110
1093
20 TN/RD
A
See page 20–1