C437

14K024

N10
Rear window defrost switch

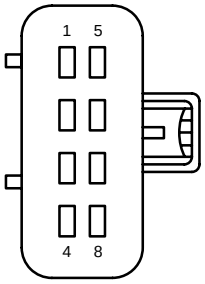

F08060

Pin	Circuit	Circuit Function
1	31-HB22 (BK) + 31-LH27 (BK)	Ground
	31-HB22 (BK) + 31-LH45 (BK)	Ground
2	31S-HB29 (BK/WH)	Ground, switched
3	–	not used
4	31-HB22 (BK) + 31-LH37 (BK)	Ground
5	–	not used
6	15S-HB2 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected), switched
7	–	not used
8	64S-LH27 (BU/YE) + 64S-LH37 (BU)	Variable D.C. voltage (not overload protected), switched
	64S-LH37 (BU) + 64-LH45 (BU/OG)	Variable D.C. voltage (not overload protected), switched

C438

12A522

B120
Transmission range sensor

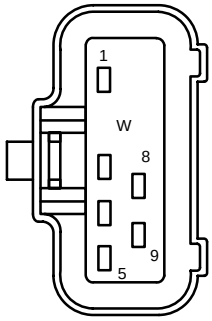

F06021

Pin	Circuit	Circuit Function
1	15-LG28 (GN/WH)	Voltage, ignition switch in Start or Run (not overload protected)
3	15S-LG9 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected), switched
4	31S-BB12 (BK/YE)	Ground, switched
5	9-TA9 (BN/GN)	Sensor signal return (reference/ground)
8	31S-TA9 (BK/GN)	Ground, switched
9	8-TA9 (WH/GN)	Sensor signal