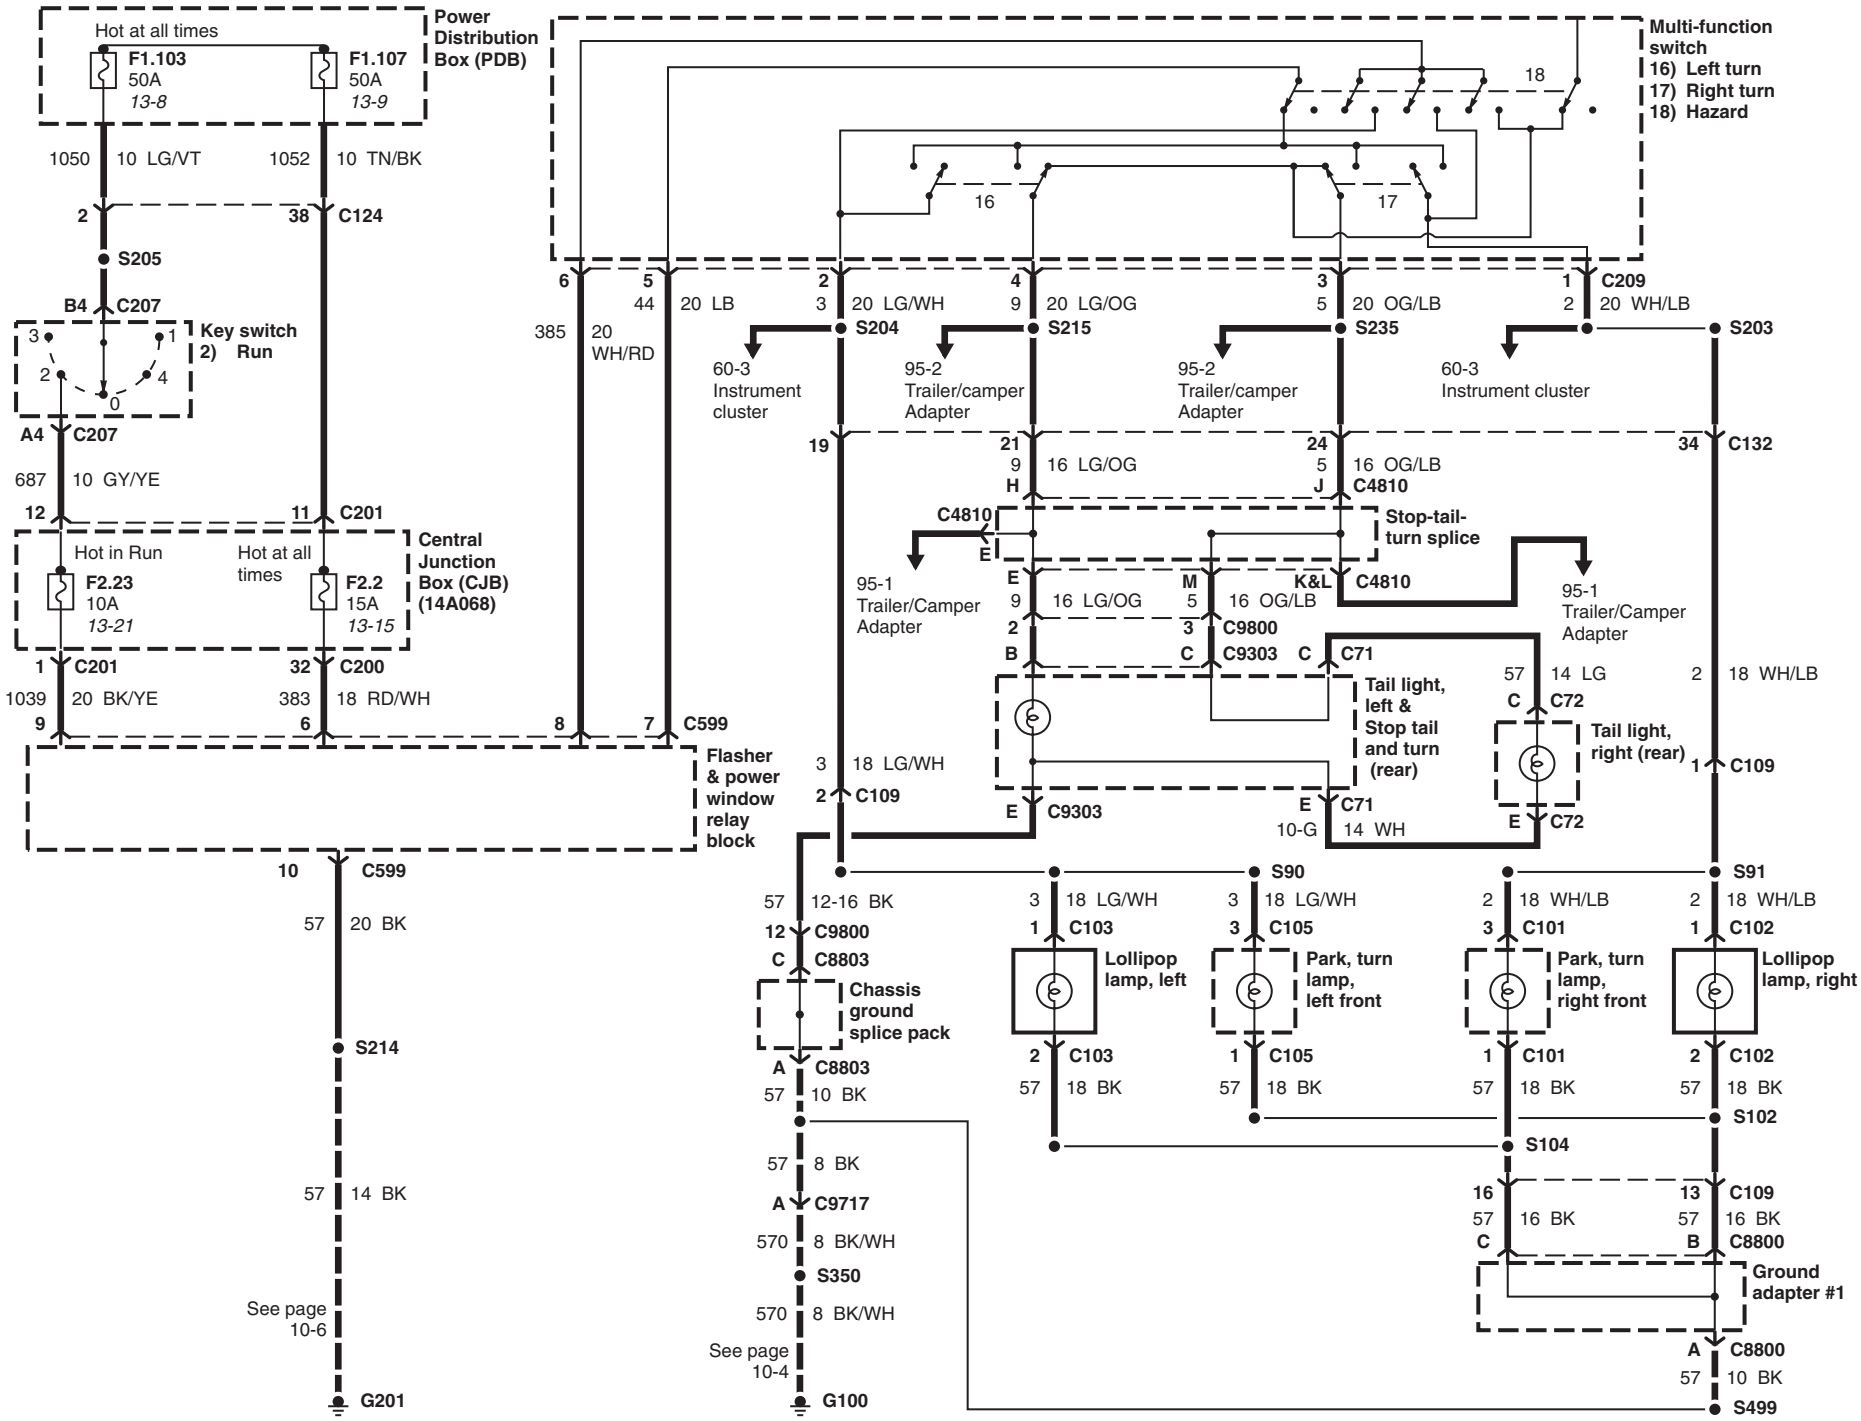
Power Distribution Box (PDB)
Hot at all times
F1.103 50A 13-8
F1.107 50A 13-9
1050 10 LG/VT
1052 10 TN/BK
2 S205
38 C124
B4 C207
Key switch 2) Run
A4 C207
687 10 GY/YE
12
11 C201
Central Junction Box (CJB) (14A068)
Hot in Run
Hot at all times
F2.23 10A 13-21
F2.2 15A 13-15
1 C201
32 C200
1039 20 BK/YE
383 18 RD/WH
9
6
8
7 C599
Flasher & power window relay block
10 C599
57 20 BK
S214
57 14 BK
See page 10-6
G201
Multi-function switch
16) Left turn
17) Right turn
18) Hazard
16
17
18
6
5 44 20 LB
385 20 WH/RD
2 3 20 LG/WH
4 9 20 LG/OG
3 5 20 OG/LB
1 2 20 WH/LB
C209
S204
S215
S235
S203
60-3 Instrument cluster
95-2 Trailer/camper Adapter
95-2 Trailer/camper Adapter
60-3 Instrument cluster
19
21 9 16 LG/OG
24 5 16 OG/LB
34 C132
H
J C4810
C4810
Stop-tail-turn splice
E
E 9 16 LG/OG
M 5 16 OG/LB
K&L C4810
95-1 Trailer/Camper Adapter
95-1 Trailer/Camper Adapter
2
3 C9800
B
C C9303
C C71
57 14 LG
2 18 WH/LB
C C72
Tail light, left & Stop tail and turn (rear)
Tail light, right (rear)
1 C109
3 18 LG/WH
2 C109
E C9303
E C71
10-G 14 WH
E C72
S90
S91
57 12-16 BK
12 C9800
C C8803
3 18 LG/WH
1 C103
3 18 LG/WH
3 C105
2 18 WH/LB
3 C101
2 18 WH/LB
1 C102
Chassis ground splice pack
Lollipop lamp, left
Park, turn lamp, left front
Park, turn lamp, right front
Lollipop lamp, right
A C8803
57 10 BK
2 C103
57 18 BK
1 C105
57 18 BK
1 C101
57 18 BK
2 C102
57 18 BK
S102
S104
57 8 BK
A C9717
570 8 BK/WH
S350
570 8 BK/WH
See page 10-4
G100
16 57 16 BK C
13 C109
57 16 BK B C8800
Ground adapter #1
A C8800
57 10 BK
S499