C278 (GN)

14405

N82
Brake pedal position switch

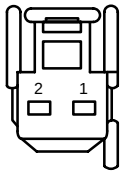

F02307

Pin	Circuit	Circuit Function
1	511 (LG)	Brake pedal position switch, to stoplamps
2	10 (LG/RD)	Voltage supplied at all times (overload protected)

C284

19B107

N141
Four–wheel drive switch

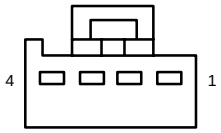

F04153

Pin	Circuit	Circuit Function
1	57 (BK)	Ground
2	704 (DG/LG)	Voltage supplied in Start and Run (overload protected)
3	780 (DB)	Four–wheel drive control module, to, Four–wheel drive switch
4	19 (LB/RD)	Voltage supplied at all times (overload protected)

C290a

19B107

A220
Audio unit

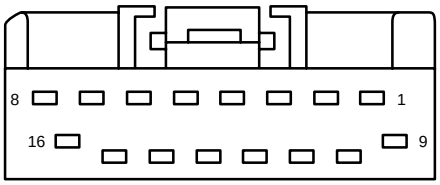

F16071

Pin	Circuit	Circuit Function
1	19 (LB/RD)	Voltage supplied at all times (overload protected)
2	57 (BK)	Ground
3	306 (TN/LB)	Voltage supplied in Start (overload protected)
4	-	not used
5	802 (OG/RD)	Speaker, right rear +
6	803 (BN/PK)	Speaker, right rear -
7	805 (WH/LG)	Speaker, right front +
8	811 (DG/OG)	Speaker, right front -
9	956 (OG/LG)	Voltage supplied at all times (overload protected)
10	137 (YE/BK)	Voltage in Run or Accessory (overload protected)
11	57 (BK)	Ground
12	801 (TN/YE)	Speaker, left rear -
13	800 (GY/LB)	Speaker, left rear +
14	804 (OG/LG)	Speaker, left front +
15	813 (LB/WH)	Speaker, left front -
16	694 (BK/LG)	Ground