C3041b

18B864

A14
Subwoofer amplifier
(18C804)

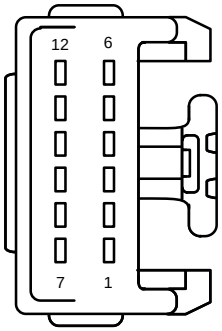

F12075

Pin	Circuit	Circuit function
1	176 (PK/LG)	Subwoofer +
2	179 (OG/RD)	Subwoofer –
3	–	not used
4	–	not used
5	–	not used
6	813 (LB/WH)	Speaker, left, front –
7	805 (WH/LG)	Speaker, right, front +
8	–	not used
9	173	Radio (18806), – Subwoofer, High, mute
10	–	not used
11	811 (DG/OG)	Speaker, right, front –
12	804 (OG/LG)	Speaker, left, front +

C3041c

18B864

A14
Subwoofer amplifier
(18C804)

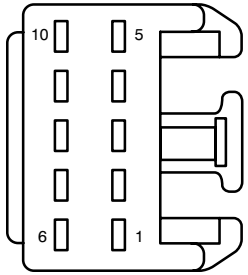

F10063

Pin	Circuit	Circuit function
1	168	Radio (18806), input, Subwoofer –
2	–	not used
3	820	Radio (18806), input, Speaker, left front (18808) +
4	816	Radio (18806), input, Speaker, right front (18808) +
5	819	Radio (18806), input, Speaker, left front (18808) –
6	–	not used
7	815	Radio (18806), input, Speaker, right front (18808) –
8	167	Radio (18806), input, Subwoofer +
9	–	not used
10	–	not used

C4032 (BN)

13A409
14A488

E243
Park/stop/turn lamp, right rear

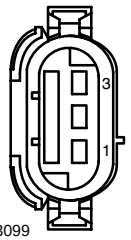

F03099

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	14 (BN)	Power, Exterior lamps
3	5 (OG/LB)	Turn lamps, feed, right rear