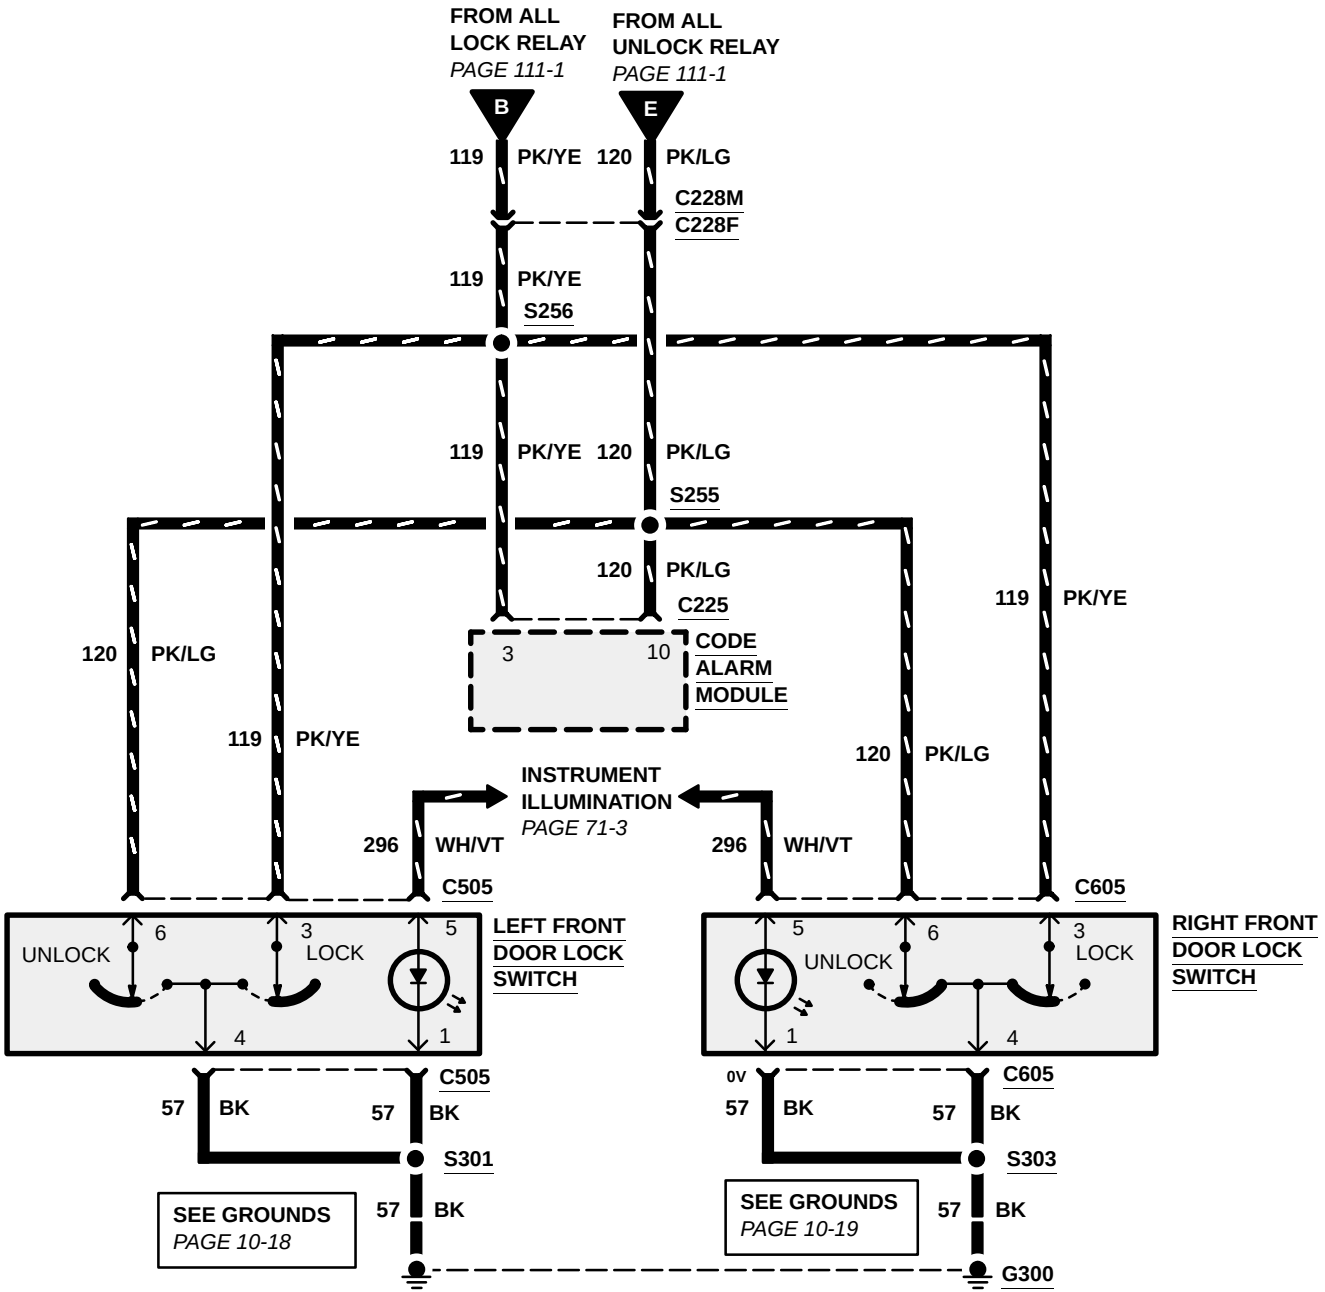
FROM ALL LOCK RELAY
PAGE 111-1
FROM ALL UNLOCK RELAY
PAGE 111-1
B
E
119 PK/YE
120 PK/LG
C228M
C228F
119 PK/YE
S256
119 PK/YE
120 PK/LG
S255
120 PK/LG
C225
119 PK/YE
120 PK/LG
3
10
CODE ALARM MODULE
120 PK/LG
119 PK/YE
119 PK/YE
120 PK/LG
INSTRUMENT ILLUMINATION
PAGE 71-3
296 WH/VT
296 WH/VT
C505
C605
UNLOCK
LOCK
6
3
5
4
1
LEFT FRONT DOOR LOCK SWITCH
5
6
3
1
4
UNLOCK
LOCK
RIGHT FRONT DOOR LOCK SWITCH
C505
57 BK
57 BK
S301
SEE GROUNDS
PAGE 10-18
57 BK
0V
C605
57 BK
57 BK
S303
SEE GROUNDS
PAGE 10-19
57 BK
G300