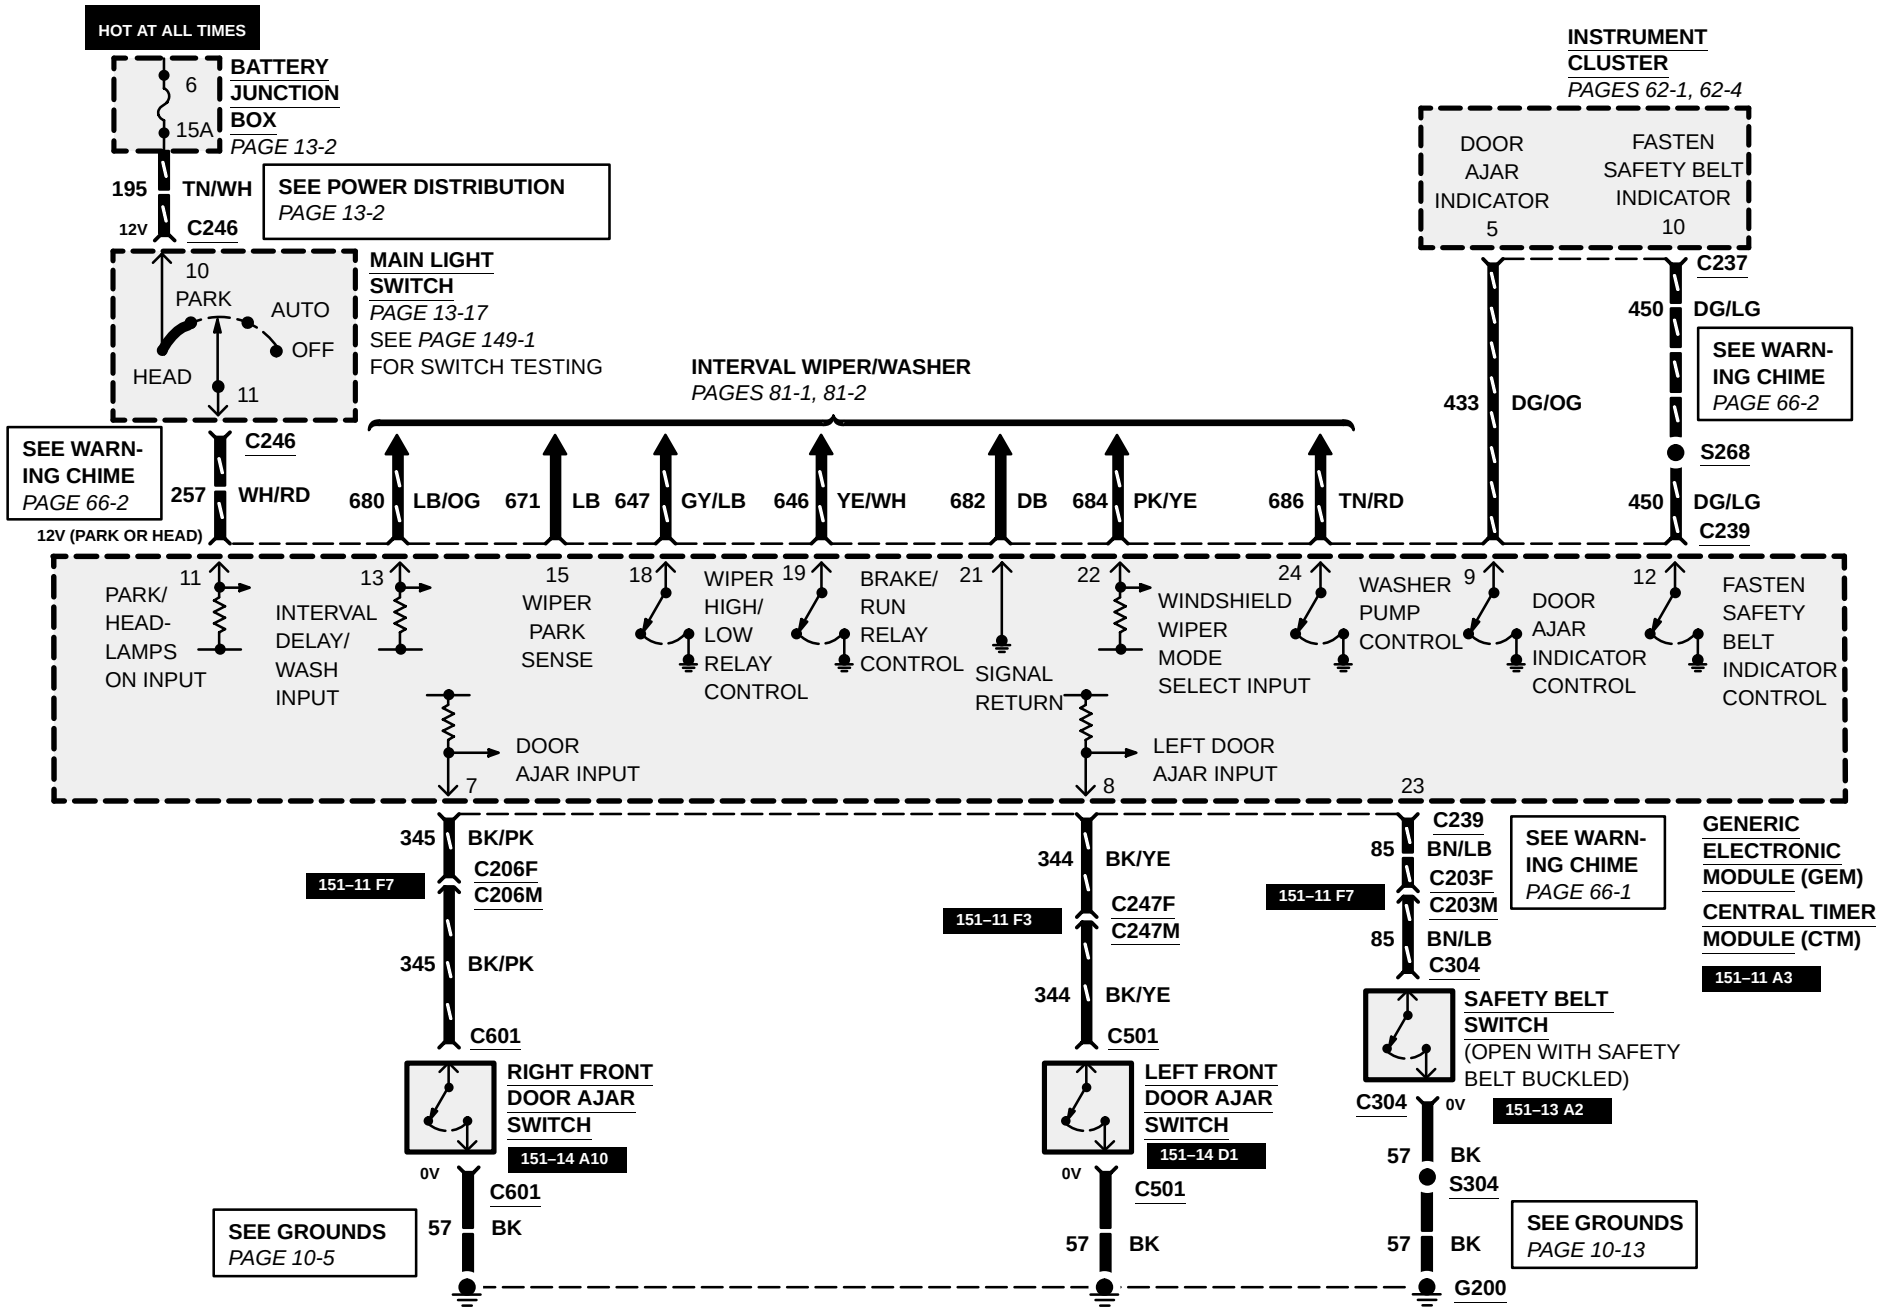
HOT AT ALL TIMES
BATTERY JUNCTION BOX
PAGE 13-2
6
15A
195 TN/WH
12V
C246
SEE POWER DISTRIBUTION
PAGE 13-2
MAIN LIGHT SWITCH
PAGE 13-17
SEE PAGE 149-1
FOR SWITCH TESTING
10
PARK
AUTO
OFF
HEAD
11
INTERVAL WIPER/WASHER
PAGES 81-1, 81-2
INSTRUMENT CLUSTER
PAGES 62-1, 62-4
DOOR AJAR INDICATOR 5
FASTEN SAFETY BELT INDICATOR 10
C237
450 DG/LG
SEE WARNING CHIME
PAGE 66-2
433 DG/OG
S268
450 DG/LG
C239
SEE WARNING CHIME
PAGE 66-2
257 WH/RD
12V (PARK OR HEAD)
680 LB/OG
671 LB
647 GY/LB
646 YE/WH
682 DB
684 PK/YE
686 TN/RD
11 PARK/ HEADLAMPS ON INPUT
13 INTERVAL DELAY/ WASH INPUT
15 WIPER PARK SENSE
18 WIPER HIGH/ LOW RELAY CONTROL
19 BRAKE/ RUN RELAY CONTROL
21 SIGNAL RETURN
22 WINDSHIELD WIPER MODE SELECT INPUT
24 WASHER PUMP CONTROL
9 DOOR AJAR INDICATOR CONTROL
12 FASTEN SAFETY BELT INDICATOR CONTROL
7 DOOR AJAR INPUT
8 LEFT DOOR AJAR INPUT
23
345 BK/PK
C206F
151–11 F7
C206M
345 BK/PK
C601
RIGHT FRONT DOOR AJAR SWITCH
151–14 A10
0V
C601
57 BK
SEE GROUNDS
PAGE 10-5
344 BK/YE
C247F
151–11 F3
C247M
344 BK/YE
C501
LEFT FRONT DOOR AJAR SWITCH
151–14 D1
0V
C501
57 BK
C239
85 BN/LB
C203F
151–11 F7
C203M
85 BN/LB
C304
SEE WARNING CHIME
PAGE 66-1
GENERIC ELECTRONIC MODULE (GEM)
CENTRAL TIMER MODULE (CTM)
151–11 A3
SAFETY BELT SWITCH
(OPEN WITH SAFETY BELT BUCKLED)
C304
0V
151–13 A2
57 BK
S304
57 BK
SEE GROUNDS
PAGE 10-13
G200