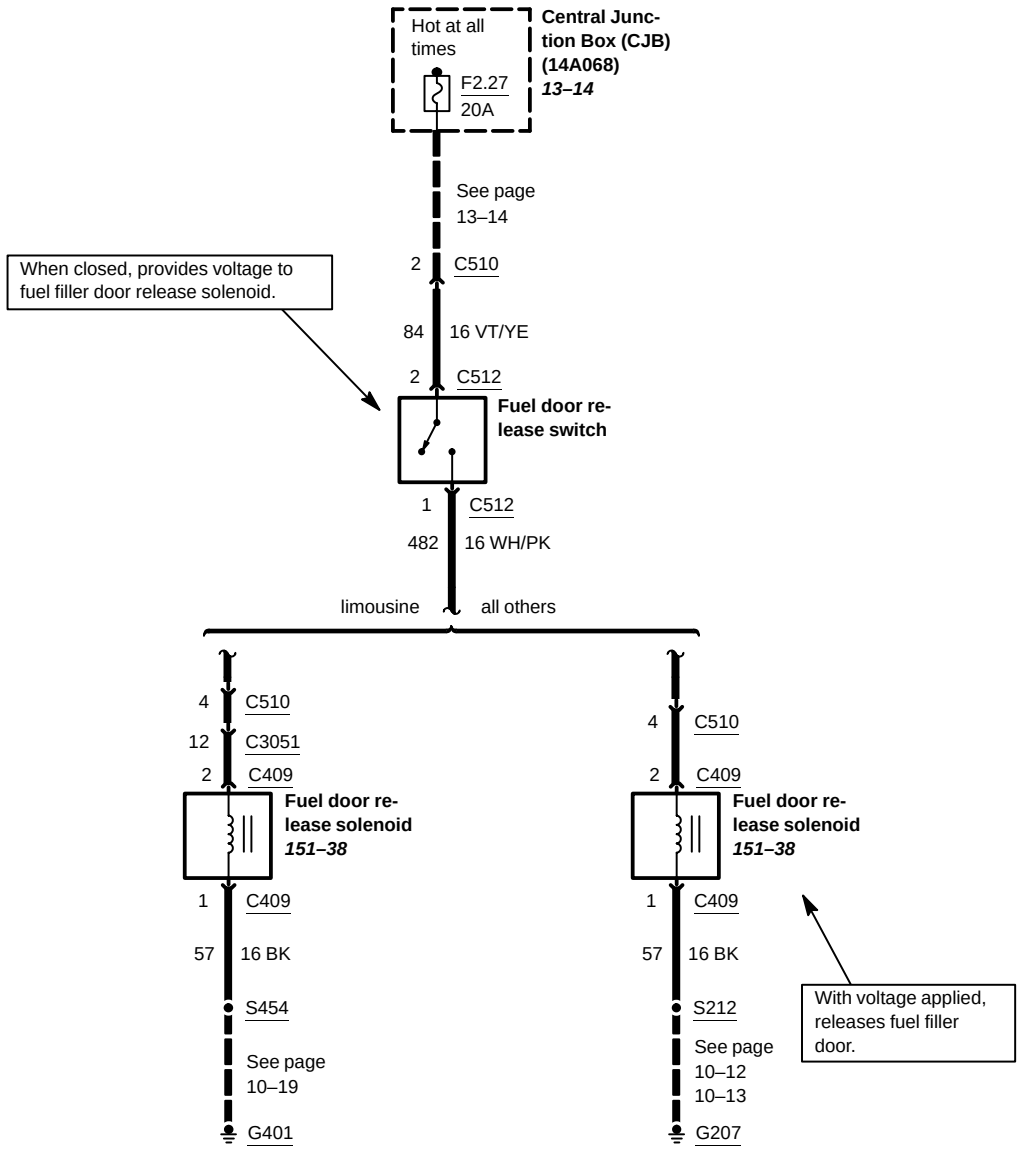
Hot at all times
F2.27
20A
Central Junction Box (CJB) (14A068)
13–14
See page 13–14
2 C510
84 16 VT/YE
2 C512
Fuel door release switch
When closed, provides voltage to fuel filler door release solenoid.
1 C512
482 16 WH/PK
limousine
all others
4 C510
12 C3051
2 C409
Fuel door release solenoid
151–38
1 C409
57 16 BK
S454
See page 10–19
G401
4 C510
2 C409
Fuel door release solenoid
151–38
1 C409
57 16 BK
S212
See page 10–12 10–13
G207
With voltage applied, releases fuel filler door.