C167

7C078

Digital Transmission Range (DTR) sensor (7F293)

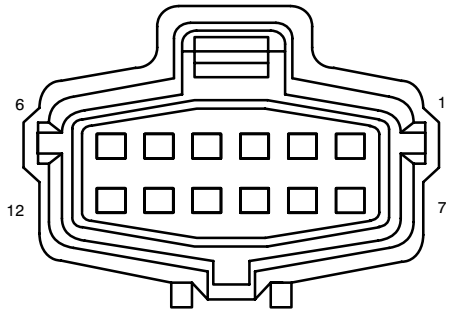

F12040

Pin	Circuit	Circuit function
1	–	not used
2	9-TA18 (BN/YE)	Signal return
3	8-TA37 (WH)	Digital Transmission Range (DTR) sensor, TR3A
4	8-TA40 (WH/GN)	Digital Transmission Range (DTR) sensor, TR1
5	8-TA39 (WH/BU)	Digital Transmission Range (DTR) sensor, TR2
6	8-TA38 (WH/RD)	Digital Transmission Range (DTR) sensor, TR4
7	–	not used
8	–	not used
9	–	not used
10	50-BB15 (GY/OG)	Voltage supplied in Start (overload protected)
11	–	not used
12	50S-BB12 (GY)	Power, Hot in Start with Park or Neutral

C168

7C078

Automatic transmission (7000)

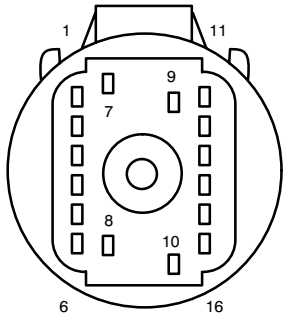

F16053

Pin	Circuit	Circuit function
1	91S-TA64 (BK/RD)	Pressure Control (PCB) solenoid B
2	8-TA26 (WH/RD)	Transmission Fluid Temperature (TFT) sensor
3	15S-TA36 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected), Switched
4	91S-TA65 (BK/WH)	Pressure Control (PCC) solenoid C
5	91S-TA70 (BK/RD)	Shift solenoid, D
6	91S-TA69 (BK/WH)	Shift solenoid, C
7	–	not used
8	–	not used
9	–	not used
10	–	not used
11	91S-TA6 (BK/GN)	Pressure Control (PCA) solenoid A
12	9-TA36 (BN/GN)	Signal return
13	–	not used
14	91S-TA47 (BK/WH)	Torque Converter Clutch (TCC) solenoid
15	91S-TA24 (BK/BU)	Shift solenoid, B
16	91S-TA23 (BK/YE)	Shift solenoid, A