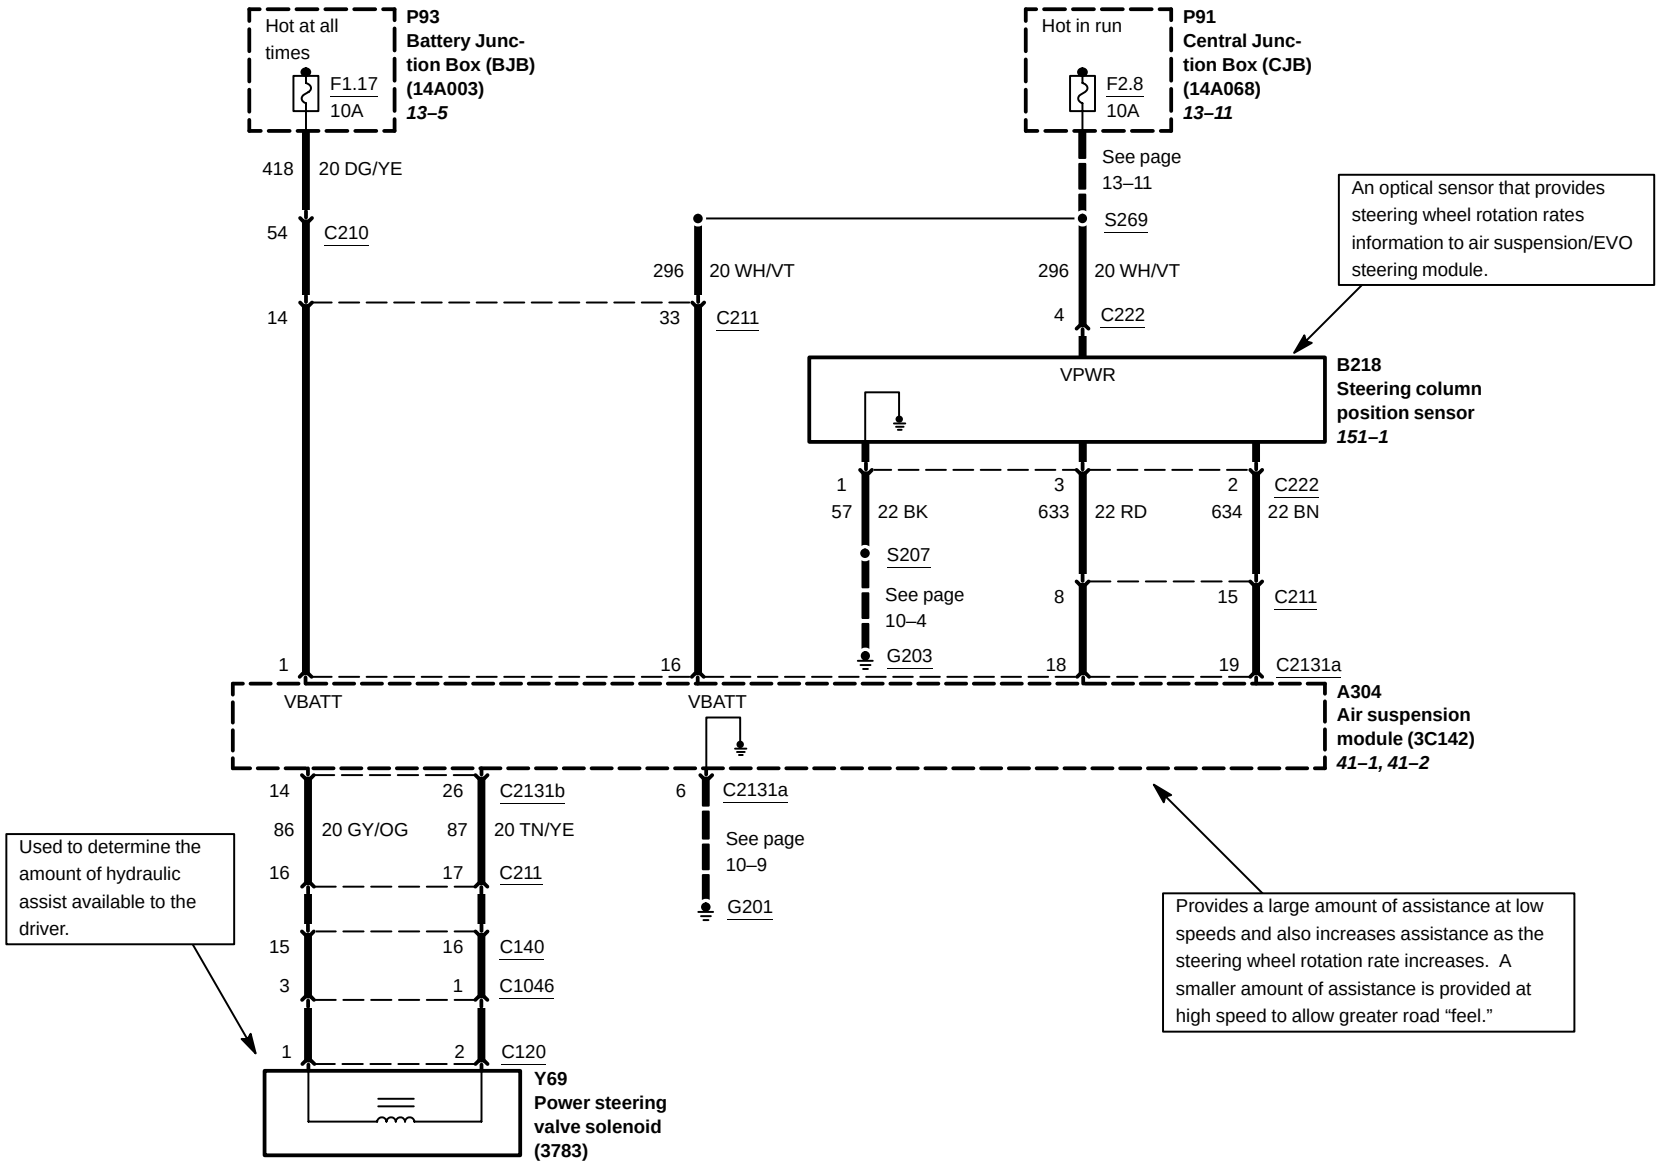
Hot at all times
F1.17
10A
P93
Battery Junction Box (BJB)
(14A003)
13–5
Hot in run
F2.8
10A
P91
Central Junction Box (CJB)
(14A068)
13–11
418 20 DG/YE
See page 13–11
54 C210
S269
296 20 WH/VT
296 20 WH/VT
An optical sensor that provides steering wheel rotation rates information to air suspension/EVO steering module.
14
33 C211
4 C222
VPWR
B218
Steering column position sensor
151–1
1
3
2 C222
57 22 BK
633 22 RD
634 22 BN
S207
See page 10–4
8
15 C211
1
16
G203
18
19 C2131a
VBATT
VBATT
A304
Air suspension module (3C142)
41–1, 41–2
14
26 C2131b
6 C2131a
86 20 GY/OG
87 20 TN/YE
See page 10–9
16
17 C211
G201
Used to determine the amount of hydraulic assist available to the driver.
15
16 C140
3
1 C1046
1
2 C120
Y69
Power steering valve solenoid
(3783)
Provides a large amount of assistance at low speeds and also increases assistance as the steering wheel rotation rate increases. A smaller amount of assistance is provided at high speed to allow greater road “feel.”