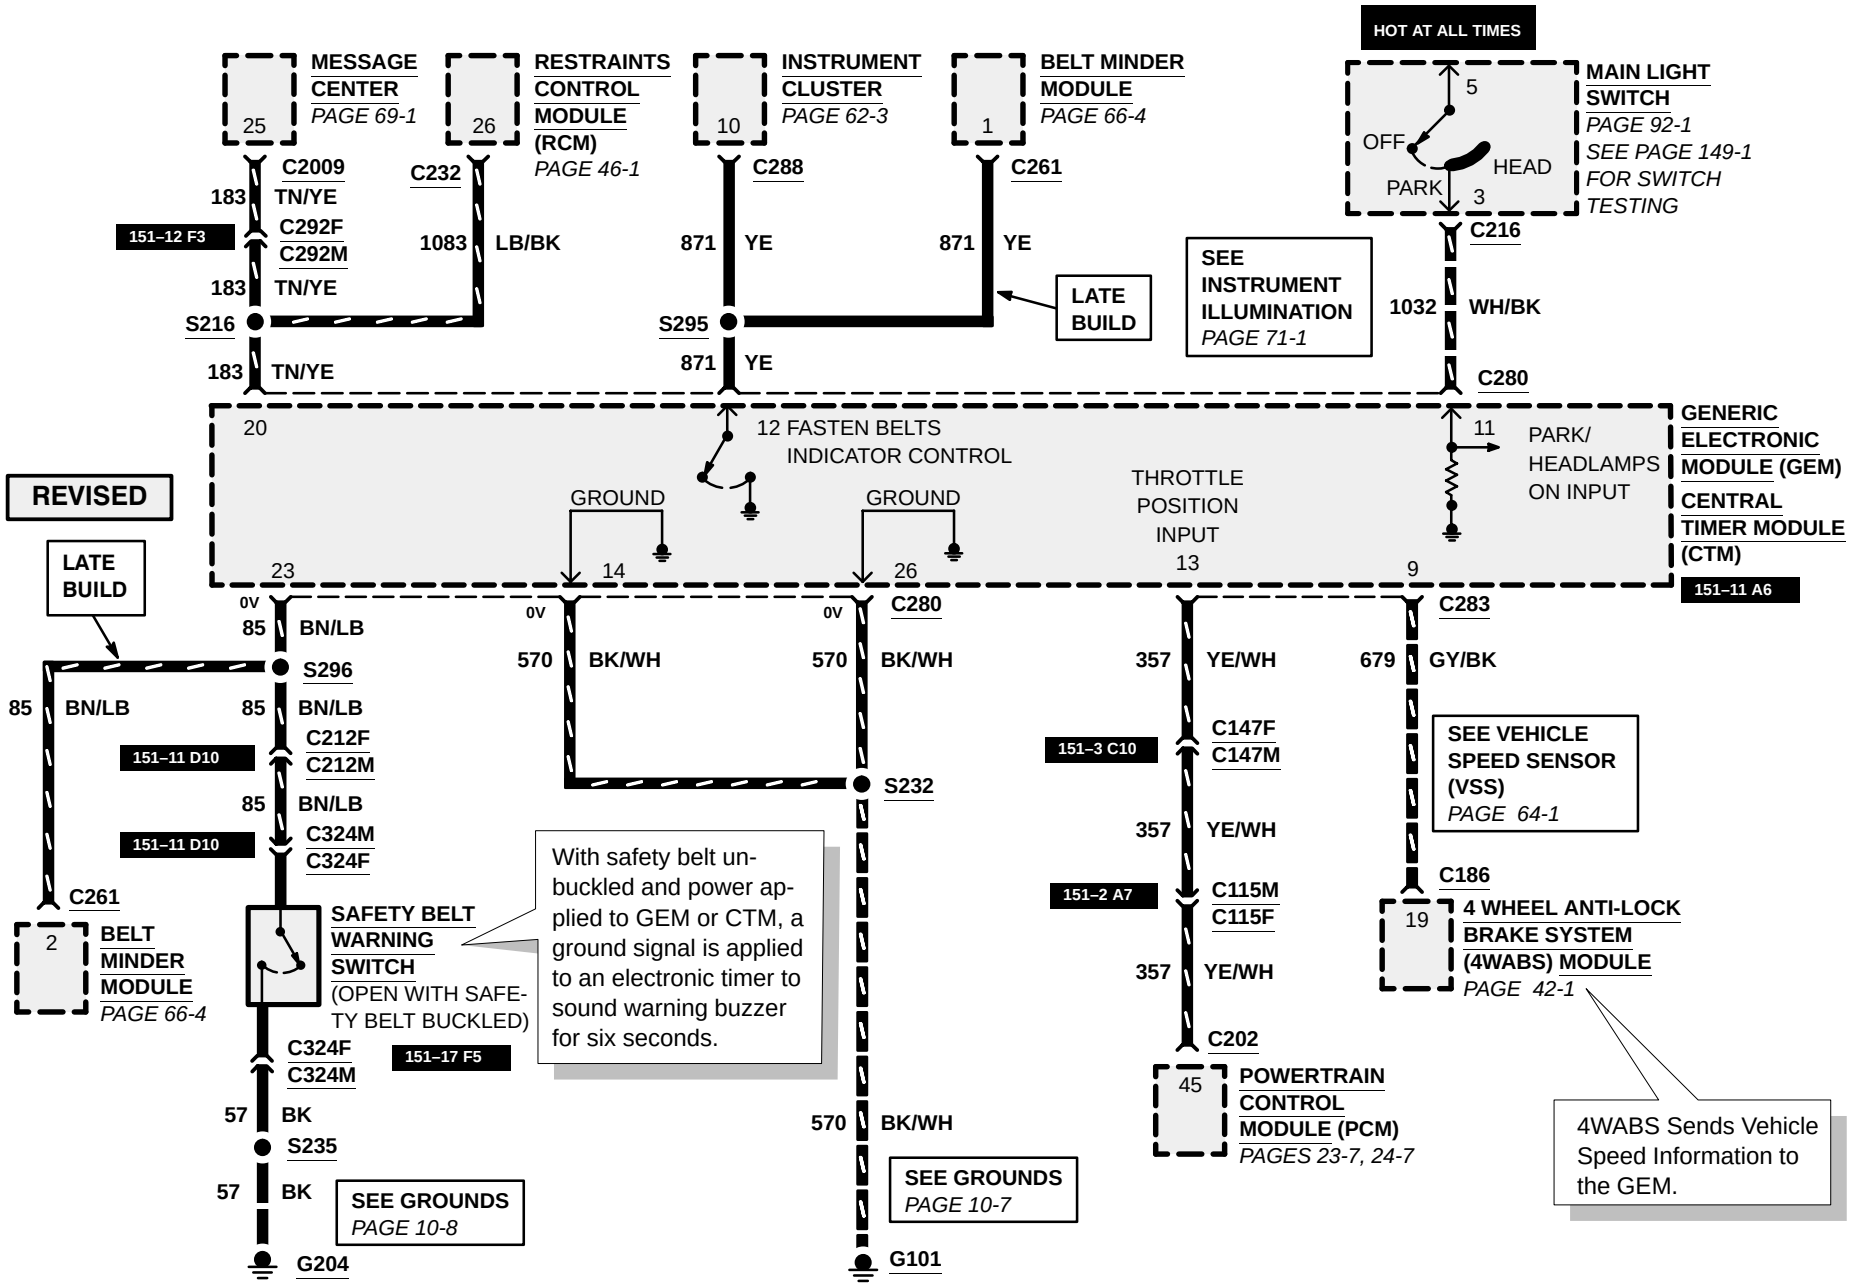
HOT AT ALL TIMES
MESSAGE CENTER
PAGE 69-1
RESTRAINTS CONTROL MODULE (RCM)
PAGE 46-1
INSTRUMENT CLUSTER
PAGE 62-3
BELT MINDER MODULE
PAGE 66-4
MAIN LIGHT SWITCH
PAGE 92-1
SEE PAGE 149-1 FOR SWITCH TESTING
OFF
HEAD
PARK
C2009
C232
C288
C261
C216
183 TN/YE
1083 LB/BK
871 YE
1032 WH/BK
151–12 F3
C292F
C292M
S216
S295
LATE BUILD
SEE INSTRUMENT ILLUMINATION
PAGE 71-1
C280
12 FASTEN BELTS INDICATOR CONTROL
GENERIC ELECTRONIC MODULE (GEM)
CENTRAL TIMER MODULE (CTM)
PARK/ HEADLAMPS ON INPUT
THROTTLE POSITION INPUT
GROUND
REVISED
LATE BUILD
151–11 A6
85 BN/LB
S296
C212F
C212M
C324M
C324F
C261
BELT MINDER MODULE
PAGE 66-4
SAFETY BELT WARNING SWITCH
(OPEN WITH SAFETY BELT BUCKLED)
With safety belt unbuckled and power applied to GEM or CTM, a ground signal is applied to an electronic timer to sound warning buzzer for six seconds.
151–11 D10
151–17 F5
570 BK/WH
S232
357 YE/WH
C147F
C147M
151–3 C10
C115M
C115F
151–2 A7
C202
POWERTRAIN CONTROL MODULE (PCM)
PAGES 23-7, 24-7
679 GY/BK
C283
SEE VEHICLE SPEED SENSOR (VSS)
PAGE 64-1
C186
4 WHEEL ANTI-LOCK BRAKE SYSTEM (4WABS) MODULE
PAGE 42-1
4WABS Sends Vehicle Speed Information to the GEM.
57 BK
S235
G204
SEE GROUNDS
PAGE 10-8
G101
SEE GROUNDS
PAGE 10-7