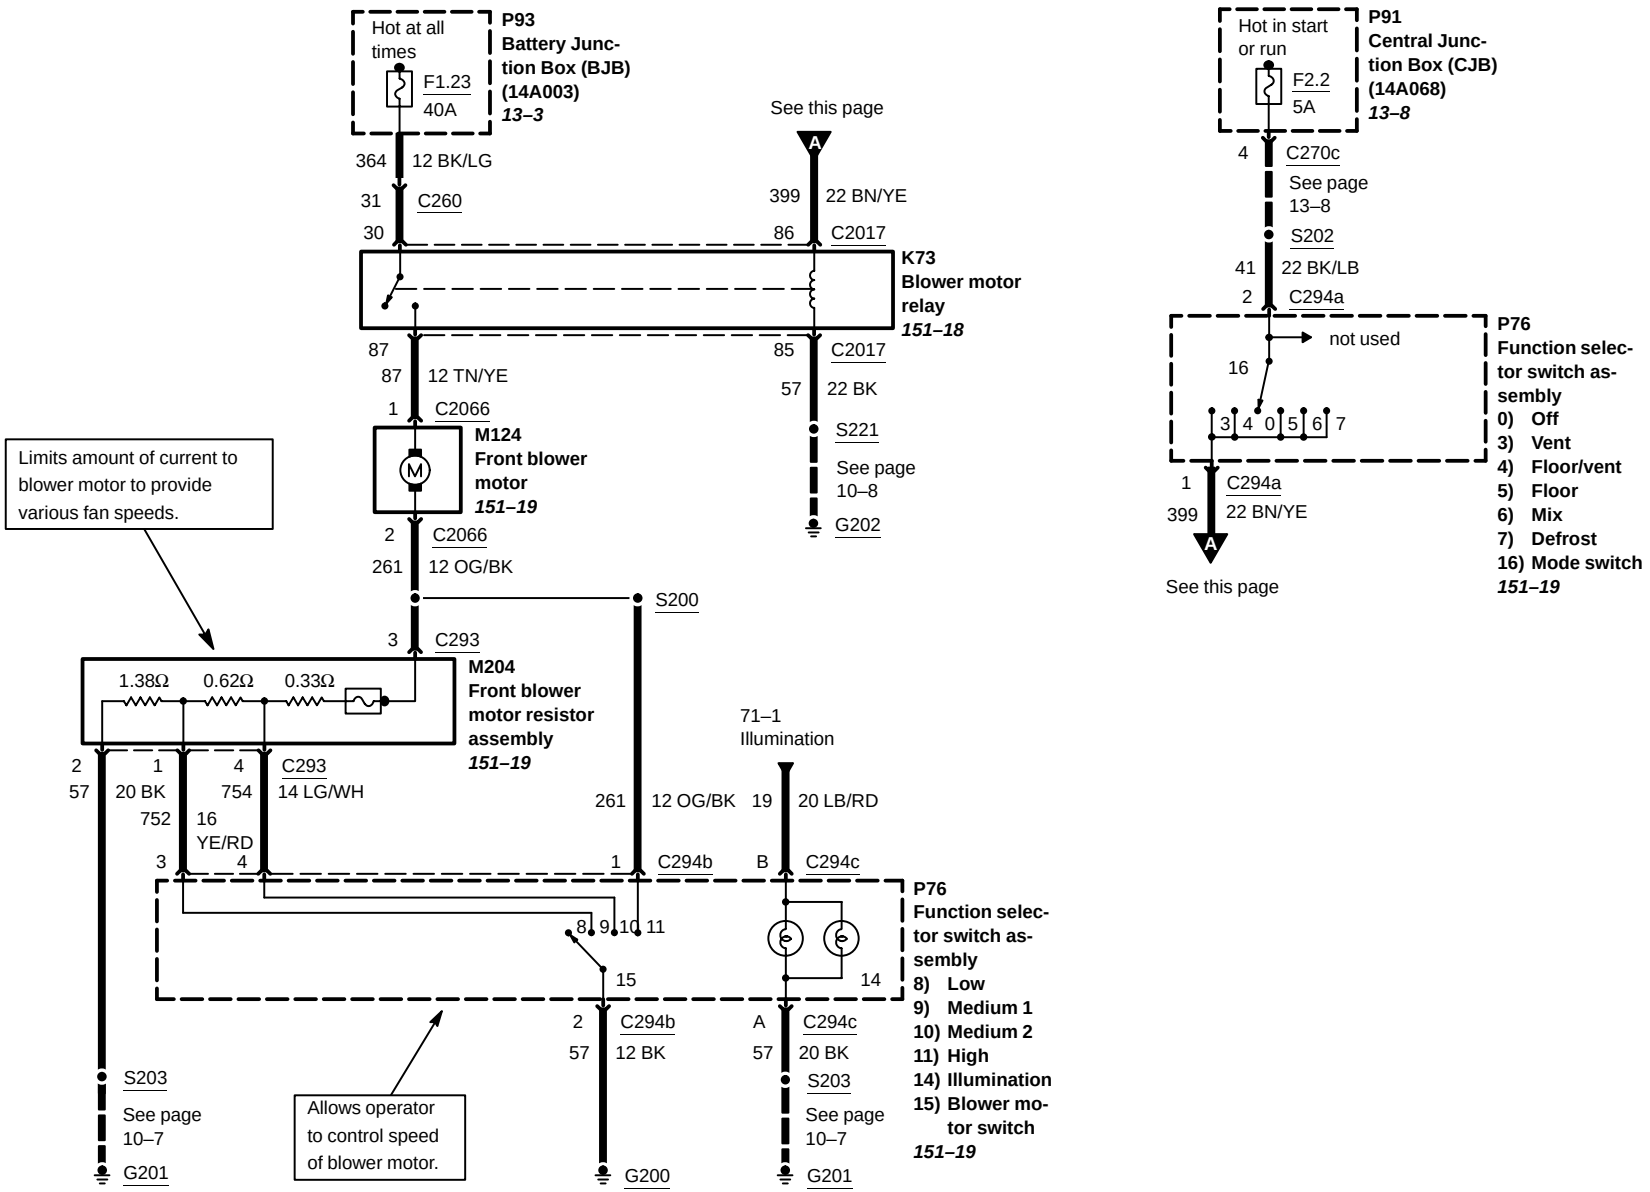
Hot at all times
F1.23
40A
P93
Battery Junction Box (BJB)
(14A003)
13–3
364
12 BK/LG
31
C260
30
See this page
A
399
22 BN/YE
86
C2017
K73
Blower motor relay
151–18
87
87
12 TN/YE
1
C2066
85
C2017
57
22 BK
S221
See page 10–8
G202
M124
Front blower motor
151–19
2
C2066
261
12 OG/BK
Limits amount of current to blower motor to provide various fan speeds.
S200
3
C293
M204
Front blower motor resistor assembly
151–19
1.38Ω
0.62Ω
0.33Ω
71–1
Illumination
2
57
20 BK
1
752
4
754
14 LG/WH
C293
16
YE/RD
261
12 OG/BK
19
20 LB/RD
3
4
1
C294b
B
C294c
P76
Function selector switch assembly
8) Low
9) Medium 1
10) Medium 2
11) High
14) Illumination
15) Blower motor switch
151–19
8
9
10
11
15
14
2
C294b
57
12 BK
A
C294c
57
20 BK
S203
See page 10–7
G201
Allows operator to control speed of blower motor.
G200
S203
See page 10–7
G201
Hot in start or run
F2.2
5A
P91
Central Junction Box (CJB)
(14A068)
13–8
4
C270c
See page 13–8
S202
41
22 BK/LB
2
C294a
not used
16
3
4
0
5
6
7
P76
Function selector switch assembly
0) Off
3) Vent
4) Floor/vent
5) Floor
6) Mix
7) Defrost
16) Mode switch
151–19
1
C294a
399
22 BN/YE
A
See this page