* SUPERCREWZER

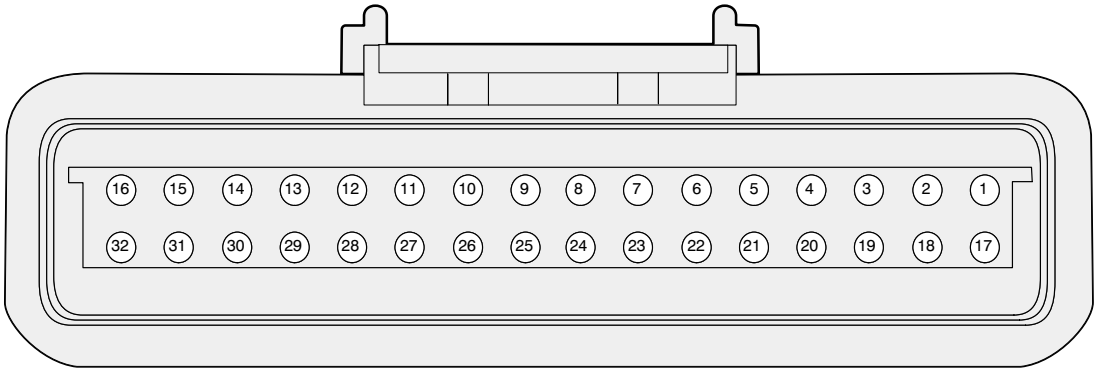

C363

ALLISON ELECTRONIC CONTROL UNIT

PIN	CIRCUIT	CIRCUIT FUNCTION	PIN	CIRCUIT	CIRCUIT FUNCTION
1	142 (LB/RD)	To Diagnostic Connector	17	151 (LB/BK)	To Diagnostic Connector
2	* 52 (YE)	Trailer Signal	18	166 (WH/OG)	To Body-Builder Connector
3	124 (BN)	To Primary Shift Selector	19	* 52 (YE)	Trailer Signal
4	* 52 (YE)	Trailer Signal	20	* 52 (YE)	Trailer Signal
5	170 (RD/LB)	To Primary Shift Selector	21	* 52 (YE)	Trailer Signal
6	171 (BK/WH)	To Primary Shift Selector	22	* 52 (YE)	Trailer Signal
7	172 (LB/RD)	To Primary Shift Selector	23	* 52 (YE)	Trailer Signal
8	173 (DG/PK)	To Primary Shift Selector	24	* 52 (YE)	Trailer Signal
9	174 (GY/BK)	To Primary Shift Selector	25	* 52 (YE)	Trailer Signal
10	175 (BK/YE)	To Primary Shift Selector	26	* 52 (YE)	Trailer Signal
11	* 119 (PK/YE)	Door Lock Switch	27	* 52 (YE)	Trailer Signal
12	* 52 (YE)	Trailer Signal	28	* 52 (YE)	Trailer Signal
13	* 52 (YE)	Trailer Signal	29	* 52 (YE)	Trailer Signal
14	180 (RD/YE)	To Primary Shift Selector	30	157 (PK/LB)	To Generic Electronic Module
15	176 (PK/LG)	To Primary Shift Selector/Body Builder Connector	31	115 (LG/BK)	“Do Not Shift” Indicator
			32	143 (LB/YE)	To Primary Shift Selector
16	136 (DB/YE)	To Primary Shift Selector			