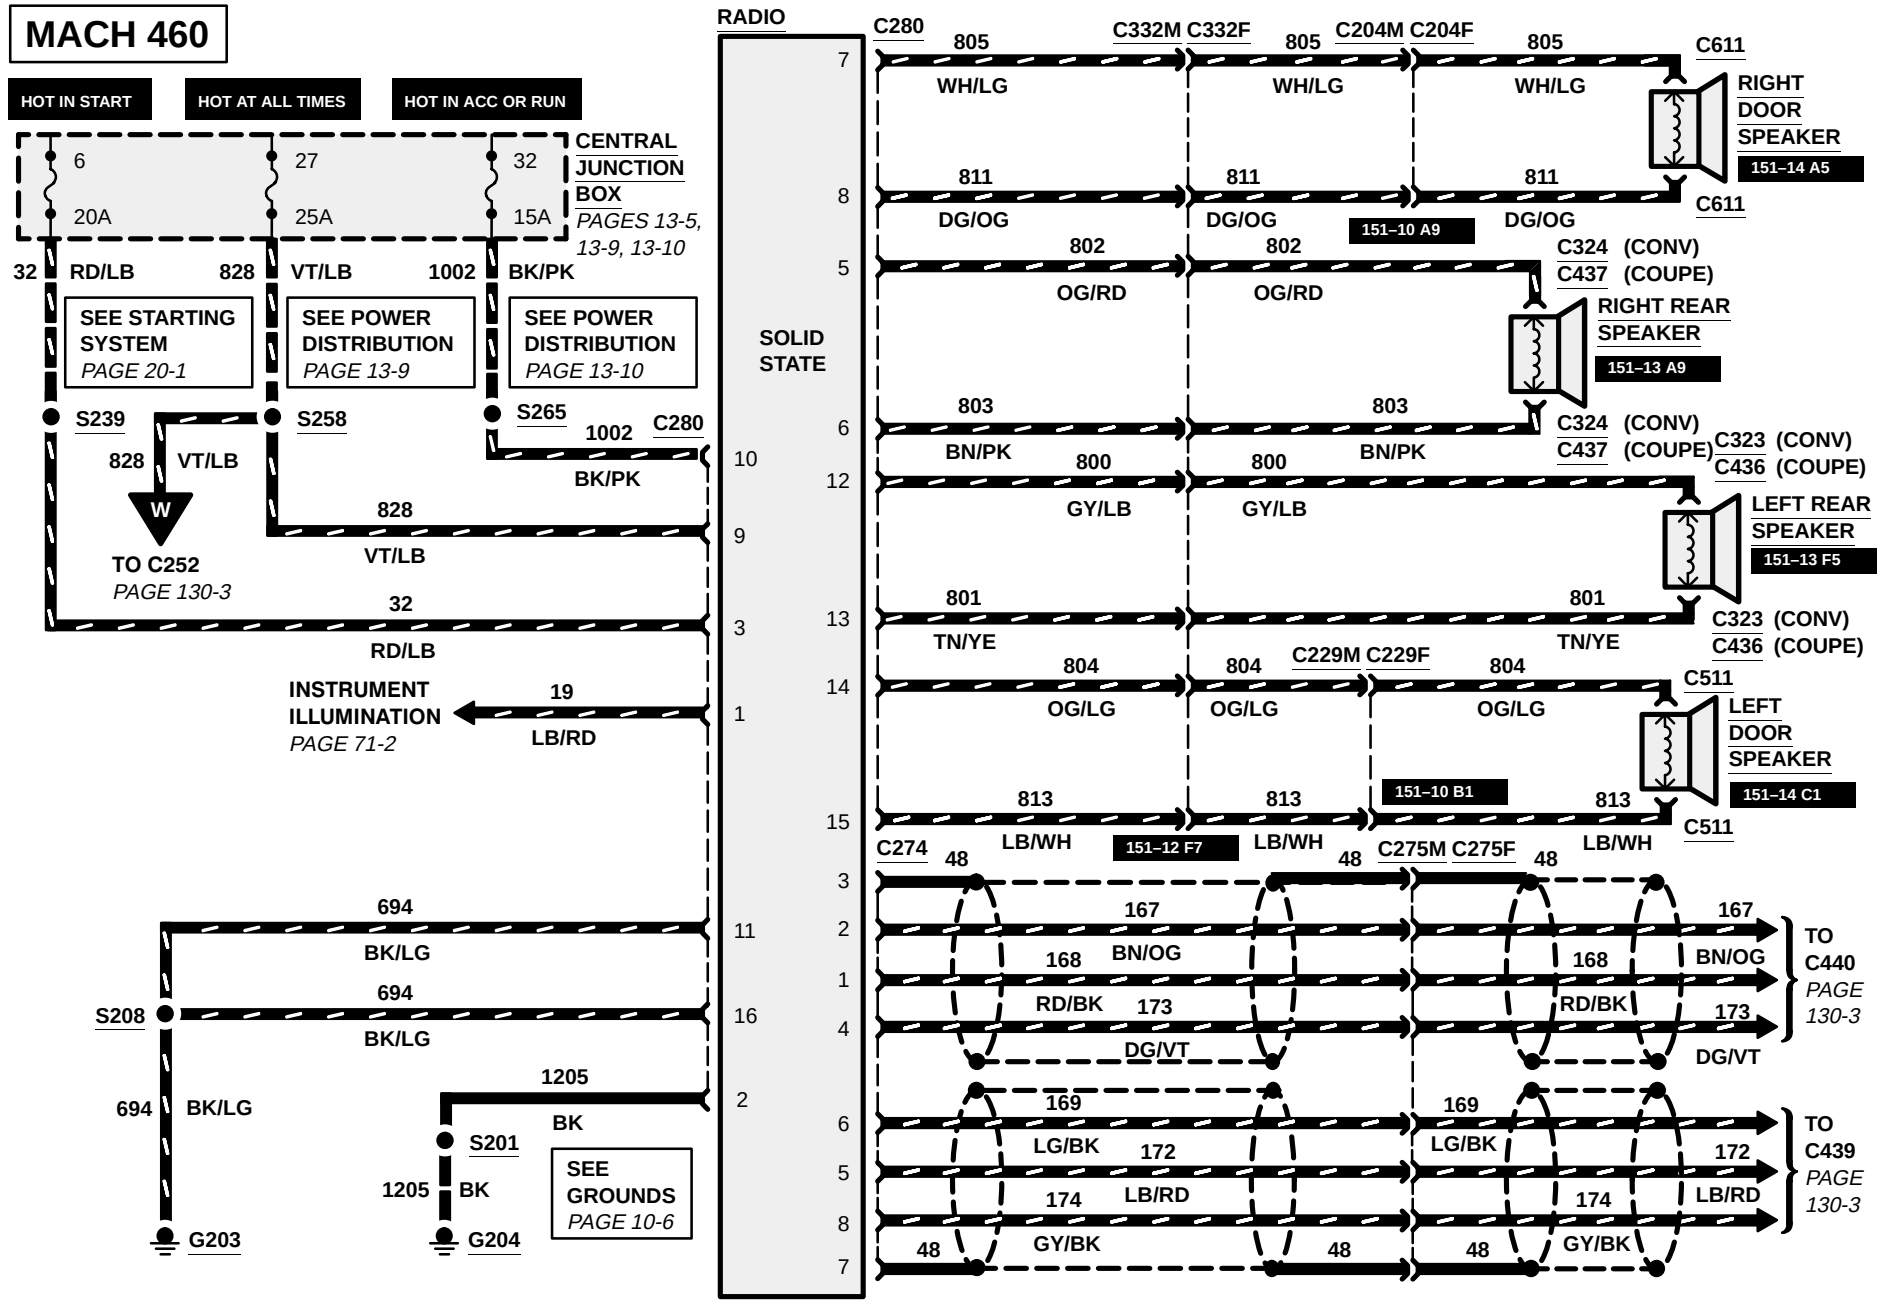
MACH 460
HOT IN START
HOT AT ALL TIMES
HOT IN ACC OR RUN
6
20A
27
25A
32
15A
CENTRAL JUNCTION BOX
PAGES 13-5, 13-9, 13-10
32 RD/LB
828 VT/LB
1002 BK/PK
SEE STARTING SYSTEM PAGE 20-1
SEE POWER DISTRIBUTION PAGE 13-9
SEE POWER DISTRIBUTION PAGE 13-10
S239
S258
S265
1002 C280
828 VT/LB
BK/PK
W
TO C252
PAGE 130-3
828
VT/LB
32
RD/LB
INSTRUMENT ILLUMINATION
PAGE 71-2
19
LB/RD
694
BK/LG
S208
694
BK/LG
694 BK/LG
1205
BK
S201
1205 BK
SEE GROUNDS PAGE 10-6
G203
G204
RADIO
SOLID STATE
10
9
3
1
11
16
2
C280
805 WH/LG
C332M C332F
805 WH/LG
C204M C204F
805 WH/LG
C611
RIGHT DOOR SPEAKER
151–14 A5
811 DG/OG
811 DG/OG
151–10 A9
811 DG/OG
C611
802 OG/RD
802 OG/RD
C324 (CONV)
C437 (COUPE)
RIGHT REAR SPEAKER
151–13 A9
803 BN/PK
803 BN/PK
C324 (CONV)
C437 (COUPE)
C323 (CONV)
C436 (COUPE)
800 GY/LB
800 GY/LB
LEFT REAR SPEAKER
151–13 F5
801 TN/YE
801 TN/YE
C323 (CONV)
C436 (COUPE)
804 OG/LG
804 OG/LG
C229M C229F
804 OG/LG
C511
LEFT DOOR SPEAKER
151–14 C1
151–10 B1
813 LB/WH
813 LB/WH
813 LB/WH
C511
151–12 F7
C274
48
48
C275M C275F
48
167
168 BN/OG
RD/BK 173
DG/VT
167
168 BN/OG
RD/BK 173
DG/VT
TO C440 PAGE 130-3
169
LG/BK 172
174 LB/RD
48 GY/BK
48
169
LG/BK 172
174 LB/RD
48 GY/BK
TO C439 PAGE 130-3