C310b

14A005

A208
Restraints control
module (14B321)

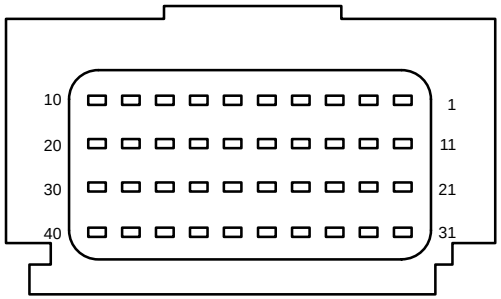

F40011

Pin	Circuit	Circuit function
1	1257 (WH/LB)	Air bag – driver side impact – to module – feed
2	1258 (BN/LB)	Air bag – driver side impact – to module – return
3	–	not used
4	–	not used
5	–	not used
6	–	not used
7	–	not used
8	–	not used
9	–	not used
10	–	not used
11	–	not used
12	–	not used
13	–	not used
14	–	not used
15	–	not used
16	–	not used
17	–	not used
18	–	not used
19	617 (PK/OG)	Air bag crash sensor #1, feed
20	618 (VT/OG)	Air bag crash sensor #1, monitor
21	1259 (WH/YE)	Air bag – passenger side impact – to module – feed
22	1260 (BN/YE)	Air bag – passenger side impact – to module – return

Pin	Circuit	Circuit function
23	1520 (LG)	Seat position sensor – horizontal sense
24	1558 (TN/BK)	Seat position sensor – horizontal sense
25	85 (BN/LB)	Safety belt buckle switch (10B924), input
26	1514 (RD/BK)	Safety belt buckle switch (10B924), input
27	1261 (WH/LG)	Air bag – driver side impact – crash sensor to module – feed
28	1262 (BN/LG)	Air bag – driver side impact – crash sensor to module – return
29	1263 (WH)	Air bag – passenger side impact – crash sensor to module – feed
30	1264 (BN)	Air bag –, passenger side impact – crash sensor to module – return
31	1079 (LG/RD)	Driver safety belt retractor pretensioner, feed
32	1080 (LG/BK)	Driver safety belt retractor pretensioner, return
33	1081 (YE/RD)	Passenger safety belt retractor pretensioner, feed
34	1082 (YE/BK)	Passenger safety belt retractor pretensioner, return
35	–	not used
36	–	not used
37	–	not used
38	–	not used
39	–	not used
40	–	not used