C710

14A005

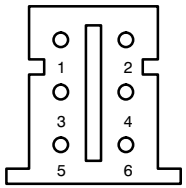

F06257

14A511

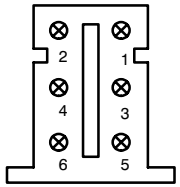

F06138

(1) 333 (YE/RD)
(2) 334 (RD/YE)
(3) 317 (GY/OG)

(4) 316 (YE/LB)
(5) 170 (RD/LB)
(6)

C713

14632/14A511

E280
Courtesy lamp, left
rear door

F02071

Pin	Circuit	Circuit function
1	53 (BK/LB)	Interior lamp relay, switched power, output
2	57 (BK)	Ground

C714

14A511

R123
Cigar lighter, left
rear door

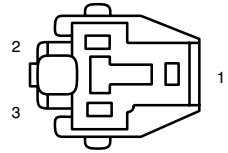

F03163

Pin	Circuit	Circuit function
1	1523 (DG)	Voltage supplied at all times (overload protected)
2	484 (OG/BK)	Headlamp switch, on input
3	57 (BK)	Ground

C715a

14A005

N237
Door ajar switch,
driver side rear
(14018)



F01053

Pin	Circuit	Circuit function
1	627 (BK/OG)	Door ajar indicator, control

C715b

14A005

N237
Door ajar switch,
driver side rear
(14018)

F01067

Pin	Circuit	Circuit function
1	57 (BK)	Ground