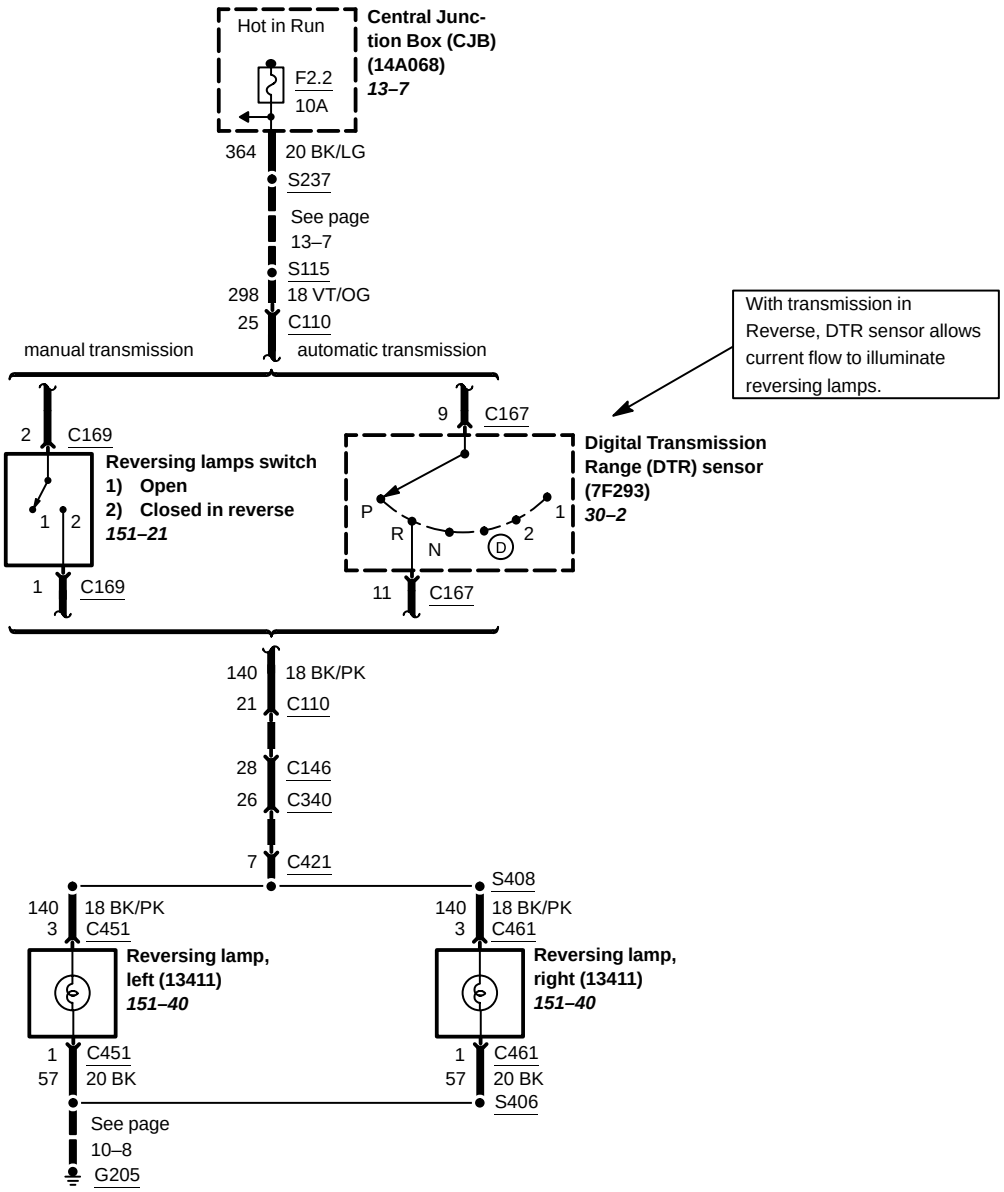
Hot in Run
F2.2
10A
Central Junction Box (CJB) (14A068) 13–7
364 20 BK/LG
S237
See page 13–7
S115
298 18 VT/OG
25 C110
manual transmission
automatic transmission
With transmission in Reverse, DTR sensor allows current flow to illuminate reversing lamps.
9 C167
2 C169
Reversing lamps switch 1) Open 2) Closed in reverse 151–21
1 2
1 C169
Digital Transmission Range (DTR) sensor (7F293) 30–2
P R N D 1 2
11 C167
140 18 BK/PK
21 C110
28 C146
26 C340
7 C421
S408
140 18 BK/PK
3 C451
Reversing lamp, left (13411) 151–40
1 C451
57 20 BK
140 18 BK/PK
3 C461
Reversing lamp, right (13411) 151–40
1 C461
57 20 BK
S406
See page 10–8
G205