-8

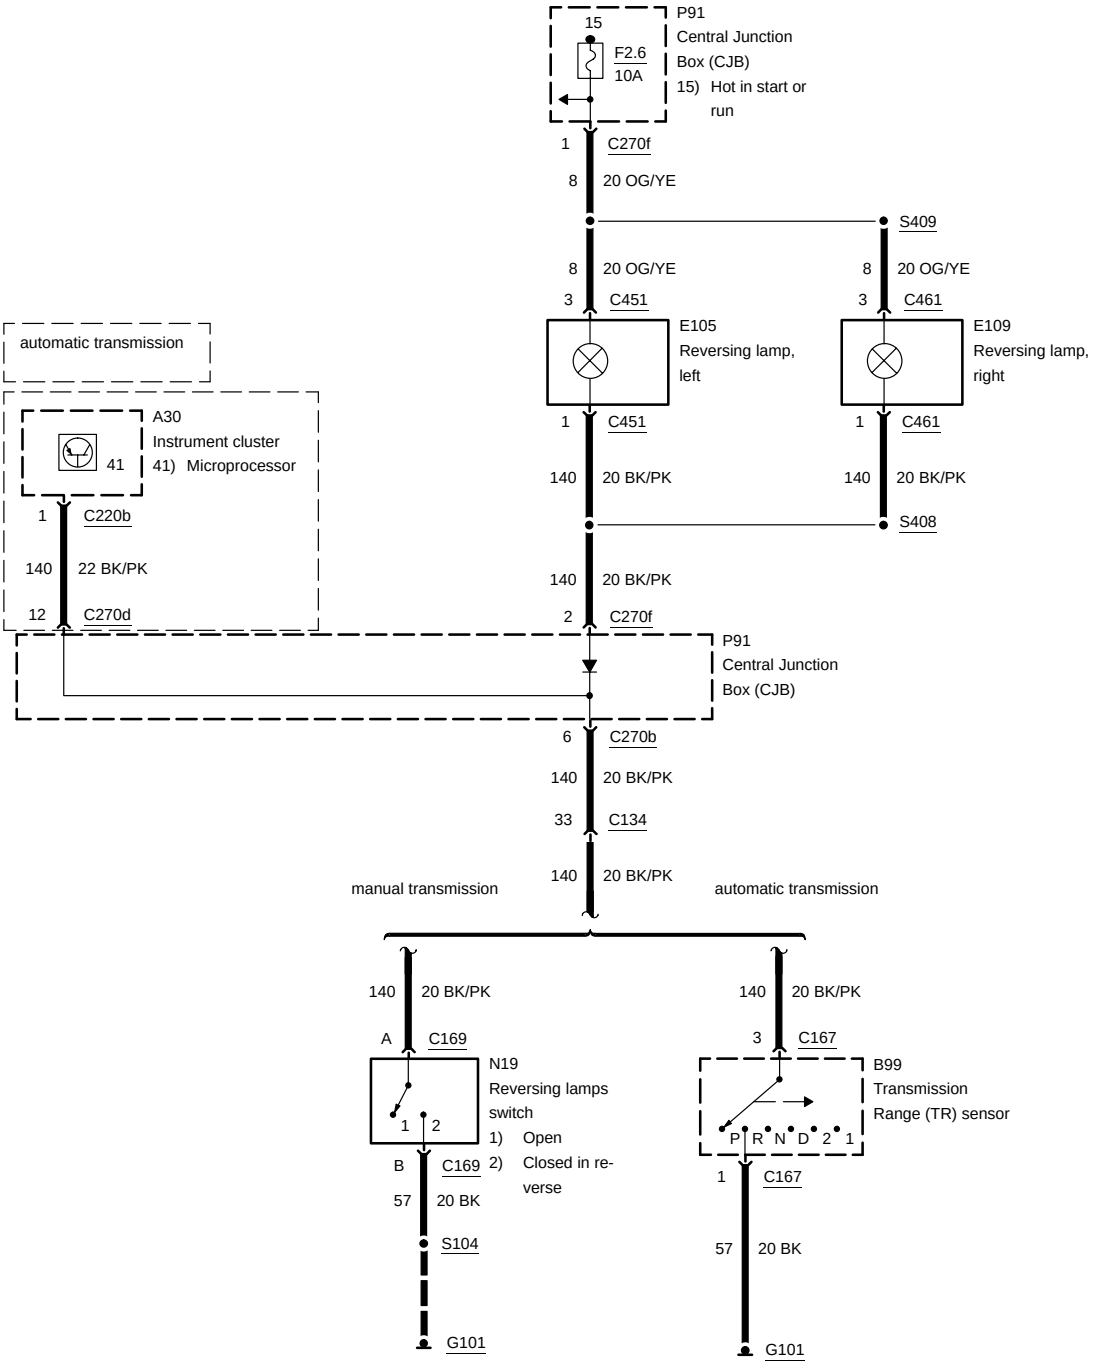
P91
Central Junction
Box (CJB)
15) Hot in start or run
15
F2.6
10A
1 C270f
8 20 OG/YE
S409
8 20 OG/YE
3 C451
E105
Reversing lamp, left
8 20 OG/YE
3 C461
E109
Reversing lamp, right
automatic transmission
A30
Instrument cluster
41) Microprocessor
41
1 C451
140 20 BK/PK
1 C461
140 20 BK/PK
1 C220b
140 22 BK/PK
12 C270d
S408
140 20 BK/PK
2 C270f
P91
Central Junction
Box (CJB)
6 C270b
140 20 BK/PK
33 C134
140 20 BK/PK
manual transmission
automatic transmission
140 20 BK/PK
A C169
N19
Reversing lamps switch
1) Open
2) Closed in reverse
1 2
B C169
57 20 BK
S104
G101
140 20 BK/PK
3 C167
B99
Transmission Range (TR) sensor
P R N D 2 1
1 C167
57 20 BK
G101